

The Bose® Acoustimass® 3 Series IV Speaker System

Owner's Guide

Thank you

We appreciate your choice of the Bose® Acoustimass® 3 speaker system. It will provide you with many years of listening enjoyment. Your system features new third generation Acoustimass cube speakers, a product of the continuous research and development at Bose Corporation. These cube speakers deliver more lifelike sound and better overall performance, yet are smaller than their predecessors.

Please read this owner's guide

The setup and operation of your Acoustimass 3 speaker system is significantly different from other speakers. Please take the time to read this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its features. Remember to save your owner's guide for future reference.

Declaration of Conformity

We, the offerer:

Bose® Corporation, The Mountain
Framingham, MA 01701-9168 USA

acknowledge our sole responsibility, that the product:

Kind of equipment:	Loudspeakers
Type designation:	Acoustimass® 3 Speaker System

in accordance with EMC Directive 89/336/EEC and Article 10(1) of the Directive,
is in compliance with the following norm(s) or document(s):

Technical regulations: **EN50081-1, EN50082-1**

Accredited by Bose Corporation

5 June 1999

Bose Products B.V.,
Nijverheidstraat 8, 1135 GE Edam,
The Netherlands

Nic Merks
Vice President, Bose Europe
Manufacturer's authorized EU representative



A handwritten signature in black ink, enclosed within a thin black oval border. The signature appears to read 'Nic Merks'.

Where to find ...

Setting Up Your Acoustimass® 3 Speaker System	4
Before you begin	4
Unpacking the system	4
Selecting locations for the cube speakers	4
Selecting a location for the Acoustimass module	5
Using the cables correctly	5
Connecting the cube speakers to the Acoustimass module	6
Connecting the Acoustimass module to your receiver or amplifier	6
Checking your connections	7
Operating Your Acoustimass Speaker System	8
Checking the system	8
Understanding automatic system protection	8
Maintaining Your Acoustimass Speaker System	9
Cleaning your speakers	9
Troubleshooting	9
Technical information	10
Warranty period	10
Customer service	10
Bose® Corporation	Inside back cover

For your records

Serial numbers are located on the connection panel of the Acoustimass module.

Serial number: _____

Dealer name: _____

Dealer phone: _____ Purchase date: _____

We suggest you keep your sales slip and warranty card together with this owner's guide.

Before you begin

Thank you for purchasing the Bose® Acoustimass® 3 speaker system. Its quality construction and advanced technologies result from years of ongoing research at Bose.


Bose patented Acoustimass speaker technology delivers full, natural audio performance and, for all of the sound it produces, this Virtually Invisible® system takes up very little space. The tiny cube speakers fit almost anywhere, while the Acoustimass module is designed to be hidden behind drapes, under furniture, or in the corner of the room.

Unpacking the system

Unpack the system carefully. Avoid setting the module down on its connection panel, which could scratch a surface. (Save the carton and packing materials in case you ever want to ship the system.) If any parts appear damaged, do not attempt to use the system. Repack all parts in the original carton and notify your authorized Bose dealer immediately.

Figure 1

 What the carton contains

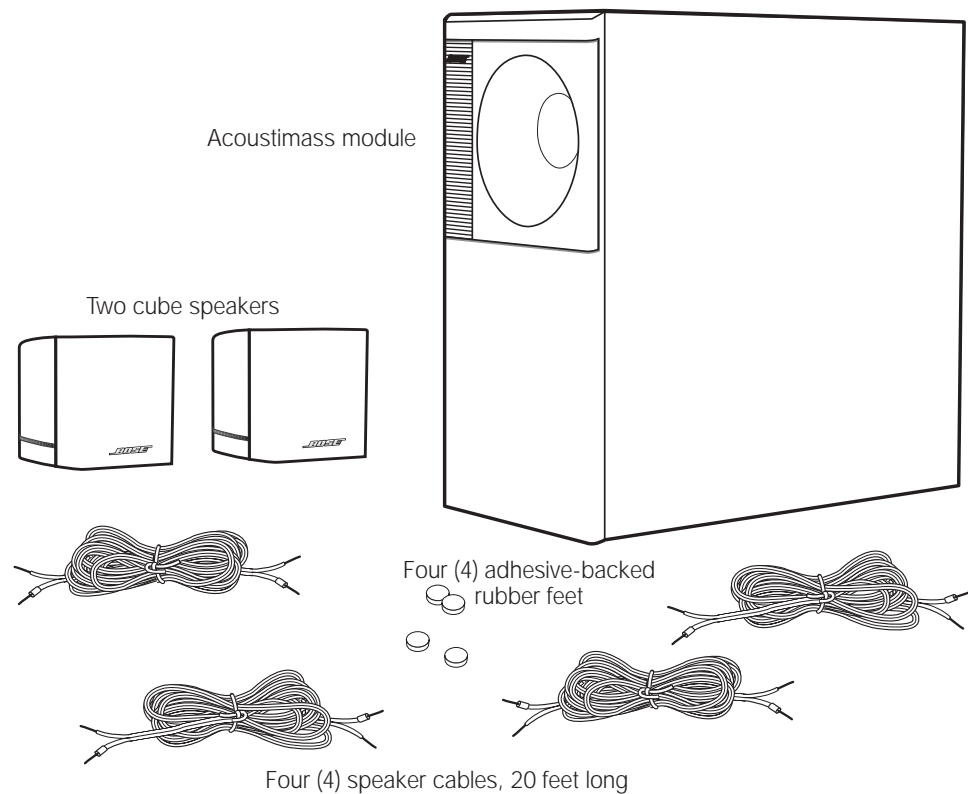

Selecting locations for the cube speakers

You can place the cube speakers anywhere from 3 to 15 feet (0.9 - 4.6 m) apart. For the most natural sound in average sized rooms, place them 6 to 12 feet (1.8 - 3.7 m) apart. Magnetic shielding allows you to place them close to a video screen without causing interference.

Bose mounting accessories, including wall/ceiling mounting brackets, floor stands, and table stands, add to your choice of where to place the cube speakers. For more information or to order accessories, contact your Bose dealer or call Bose Customer Service directly. Refer to the list of phone numbers inside the back cover.

Selecting a location for the Acoustimass® module

The Acoustimass module can be hidden almost anywhere in a room. Leave at least 2 inches (5 cm) of space between the opening (port) and the wall. To prevent interference, keep the module at least 2 feet (0.6 m) from any video screen.

For a balanced sound in most rooms, place the module along a wall within 5 feet (1.5 m) of the corner. To increase bass response, move the module closer to a corner without blocking the opening. To decrease the bass, place the module farther from the corner.


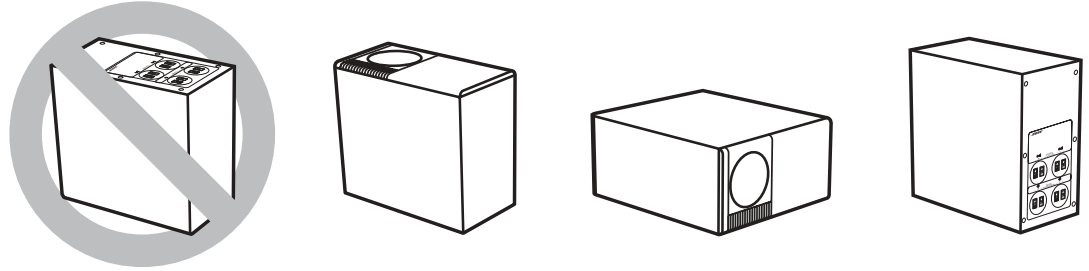 
 *Note: When you decide how you will position the module, attach the rubber feet to the bottom surface to protect the module and the floor.*

Figure 2

Choices on how to position the module



Using the cables correctly

Use the supplied cables to connect the cube speakers to the module and the module to your amplifier or receiver.

 **CAUTION:** Be sure all components are turned off and unplugged from the power outlet before making the connections.

To place these components more than 20 feet (6.2 - 9.2 m) apart, you will need to splice in a length of 18-gauge speaker cable. To place them more than 30 feet (9.2 m) apart, you will need heavier gauge wire. (See the wire recommendations on page 10.) You can get additional speaker cable at electrical and hardware stores or by calling Bose Customer Service. (See the list of phone numbers inside the back cover.)

Speaker cables consist of two insulated wires. The insulation around one wire is marked with a band or stripe. This marked wire is always positive (+). The plain wire is always negative (-). These correspond to the red (+) and black (-) terminals on the back of the speaker, amplifier, or receiver. Be sure to connect each wire to the proper terminal (positive to positive, negative to negative).

Connecting the cube speakers to the Acoustimass® module

Use the following steps to connect the cube speakers to the rear panel of the Acoustimass module:

1. Select one pair of wires, and locate the terminal tab on the rear of the left cube speaker.
2. Press the terminal tab on the back of the speaker and insert the marked wire into the red (+) terminal and the plain wire into the black (-) terminal (Figure 3).
3. Release the terminal tab to secure both wires.
4. Repeat this process with the other pair of wires and the right cube speaker.




CAUTION: Do not connect your amplifier or receiver directly to the cube speakers. Cube speakers must be connected directly to the Acoustimass module or damage will result.

5. Locate the terminals marked OUTPUTS TO CUBE SPEAKERS on the rear panel of the Acoustimass module (Figure 4).
6. Connect the free end of the left cube speaker cable to the left (L) pair of terminals. Make sure that the marked wire is connected to the positive (+) terminal and the plain wire is connected to the negative (-) terminal.
7. Repeat step 6 for the right cube speaker cable, connecting its wires to the right (R) pair of terminals.

Figure 3

 Connecting the speaker cable to the cube speaker

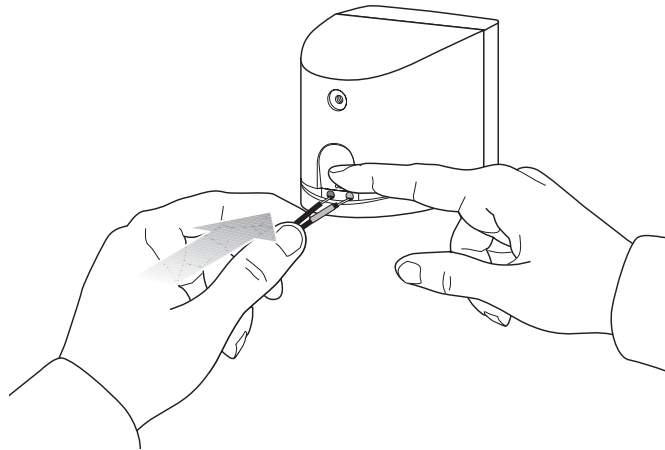

Connecting the Acoustimass module to your receiver or amplifier

Use the following steps to connect your Acoustimass module to your receiver or amplifier:



CAUTION: Correct wiring is important. Incorrect wiring will result in little or no bass output and could potentially damage the system.

1. Locate the terminals marked INPUTS FROM AMP OR RECEIVER on the rear panel of the Acoustimass module (Figure 4).
2. Connect either end of one of the remaining speaker cables to the left (L) pair of input terminals. Make sure that the marked wire is connected to the positive (+) terminal and the plain wire is connected to the negative (-) terminal.
3. Connect either end of the final speaker cable to the right (R) pair of input terminals. Make sure that the marked wire is connected to the positive (+) terminal and the plain wire is connected to the negative (-) terminal.


4. Connect the free end of the left (L) INPUTS cable to the LEFT speaker terminals of your amplifier or receiver. Connect the marked wire to the positive (+) terminal and the plain wire to the negative (-) terminal.
5. Connect the free end of the right (R) INPUTS cable to the RIGHT speaker terminals of your amplifier or receiver. Connect the marked wire to the positive (+) terminal and the plain wire to the negative (-) terminal.



CAUTION: Before you plug in your receiver or amplifier, make sure that no strands of wire from any terminal are brushing against any other terminal. Such “bridged” wires create short circuits which can damage your receiver or amplifier.

Figure 4

 Completed connections

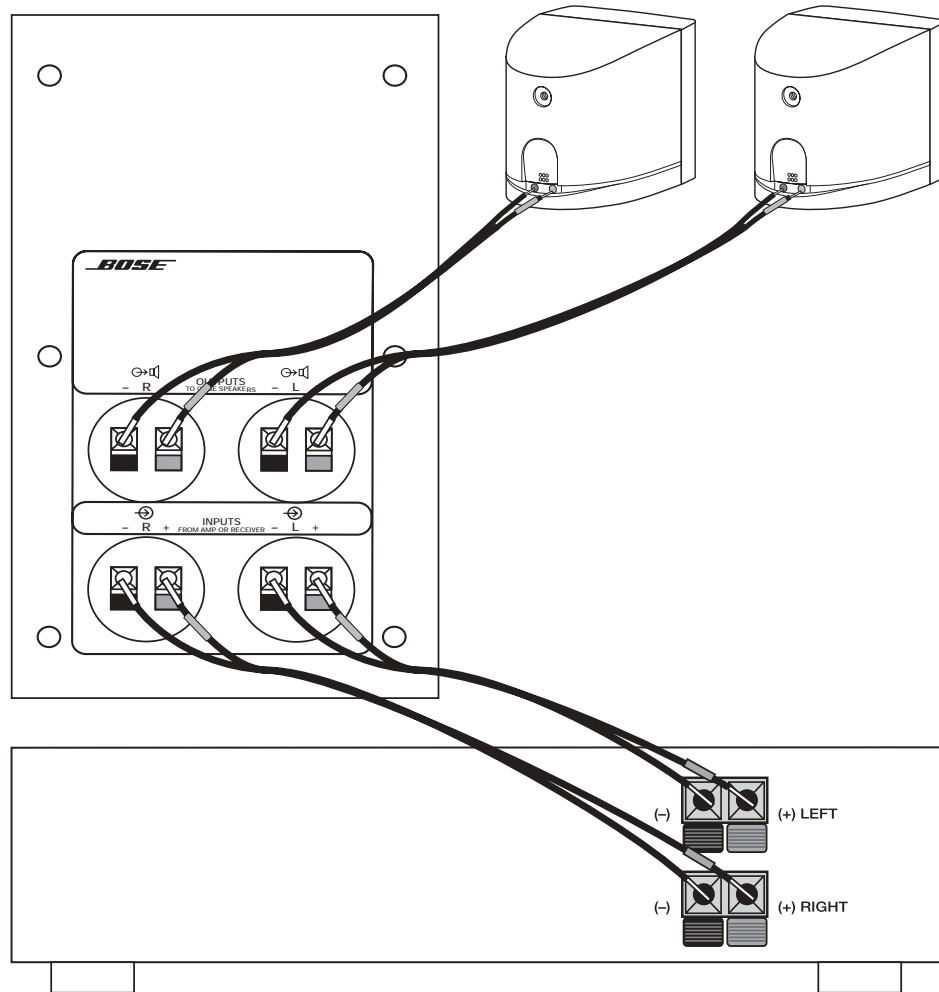

Checking your connections

To avoid damaging your speakers, check all connections and correct any problems before plugging in and turning on the amplifier or receiver. Make sure the cube speakers are connected to the module and not directly to the amplifier or receiver.

Checking the system

Make sure your system is working properly by following these steps:

1. Turn on your amplifier or receiver.
2. Turn the balance control on your amplifier all the way to the left. You should hear music from the left cube speaker only, although you may detect a faint sound from the other cube speaker. You should also hear the module.
3. Turn the balance control all the way to the right. Now you should hear music from the right cube speaker only, although you may also hear a faint sound from the left cube speaker. You should also hear the module.
4. Now play music that includes some deep bass passages. Listen with the balance control in the center position. Compare that sound to what you hear with the balance control in the far left position. Then compare the sound in the center balance position with sound when the control is in the right position. The bass should be the same or louder with the control in the center. Be sure to return the balance control to the center position when you are finished.

If your system does not respond as described, check all the wires for proper positive to positive and negative to negative connections. If your system still doesn't respond properly, see "Troubleshooting" on page 9.

Understanding automatic system protection

When played at high volume, the Acoustimass® 3 system's automatic protection circuit activates to prevent damage to the system from electrical stress or overload. When this happens, you may notice a slight decrease in volume, which is normal. It indicates that the power input may have exceeded safe levels. Setting the volume at or above this level for sustained periods is not recommended.


Cleaning your speakers

Clean the cabinets of your Acoustimass® 3 system using a damp cloth. If necessary, use a mild detergent such as dish soap. Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives. Do not allow liquids to spill through the speaker grilles or enter the Acoustimass module.

You can vacuum the speaker grilles. To avoid damaging the drivers located directly behind the grille cloth, use light pressure only.

Troubleshooting

If you have a problem with your Acoustimass 3 speaker system, turn off the amplifier or receiver and check all the connections between the cube speakers, the module, and amplifier or receiver. Since problems are likely to originate with components other than speakers, you may want to refer to your amplifier or receiver owner's guide.

Problem	What to do
The left cube speaker does not play or sounds distorted.	<ul style="list-style-type: none"> • Disconnect both speaker cables from the amplifier or receiver. Reconnect the cable from the bass module's L INPUTS to the amplifier or receiver's RIGHT speaker terminals. Set the amplifier or receiver's balance control all the way to the right and turn on the power. • If the left cube speaker now plays properly, your amplifier or receiver's left speaker channel is probably defective. <p> CAUTION: DO NOT connect the other cube speaker to the channel in question. If the channel is defective, it could damage your Acoustimass 3 system.</p>
The right cube speaker does not play or sounds distorted.	<ul style="list-style-type: none"> • Follow the above steps, reconnecting the cable from the module's R INPUTS to the amplifier or receiver's LEFT speaker terminals.
The entire Acoustimass 3 system does not play or sounds distorted.	<ul style="list-style-type: none"> • Disconnect the amplifier or receiver from the bass module. Reconnect the module to another amplifier or receiver that is working properly. • If the system now works, the problem is in your amplifier or receiver. Refer to your receiver or amplifier owner's guide for further suggestions. • If trouble persists in your Acoustimass 3 speaker system, contact your authorized Bose® dealer who will verify any defects and arrange for service by an authorized agency or by the Bose factory. Bose will make every effort to remedy any problem within the terms of the warranty at minimum inconvenience to you.

Technical information

Features

Virtually Invisible® speaker design
Acoustimass® speaker technology
Identical magnetically shielded cube speakers
Syncom® computer quality control
Automatic system protection circuitry

Driver Complement

Acoustimass module: One 5.25" (13.3 cm) dual voice coil low-frequency driver
Cube speakers: One 2.5" (6.4 cm) magnetically shielded wide-range driver per cube

Compatibility

Compatible with receivers or amplifiers rated from 4 – 8 ohms
Compatible with receivers or amplifiers rated from 10 – 100 watts per channel
IEC rating: 50 watts per channel

Finish

Acoustimass module: Scratch-resistant black or white satin finish
Cube speakers: Black or white polymer finish, cloth grilles

Wire Recommendations

Based on maximum frequency response deviation of ± 0.5 dB.

Gauge	Length
18 (0.75 mm ²)	30 ft (9 m) maximum
16 (1.5 mm ²)	45 ft (14 m) maximum
14 (2.0 mm ²)	70 ft (21 m) maximum

Size/Weight

Acoustimass module: 7.5"W x 14"H x 12.6"D (18.4 x 35.6 x 32.0 cm)
Cube speaker: 3.1"H x 3.1"W x 3.2"D (7.9 x 7.9 x 8.1 cm)
Total shipping weight: 16.5 lb (7.1 kg) in shipping carton

Warranty period

The Bose® Acoustimass 3 speaker system is covered by a limited five-year transferable warranty. Details of the coverage are provided on the warranty card that came with your speakers. Please fill out the information section on that card, detach, and mail it to Bose.

Customer service

For help in ordering accessories or solving problems, contact Bose Customer Service. See the inside of the back cover for offices and phone numbers.





USA

Bose Corporation, The Mountain
Framingham, MA 01701-9168
1-800-367-4008
Phone hours - ET (eastern time):
Weekdays 8:30 a.m. to 8 p.m.
Saturdays 9 a.m. to 3 p.m.

Canada

Bose Ltd., 1-35 East Beaver Creek Road
Richmond Hill, Ontario L4B 1B3
1-800-465-2673
Phone hours - ET (eastern time):
Weekdays 9 a.m. to 5 p.m.

European Office

Bose Products B.V., Nijverheidstraat 8
1135 GE Edam, Nederland
TEL 0299-390111 FAX 0299-390114

Australia

Bose Pty Limited, 1 Sorrell Street
Parramatta NSW, 2150
TEL 02 9204-6111 FAX 02 9204-6122

Belgique/België

Bose N.V., Limesweg 2, B-3700 Tongeren
TEL 012-390800 FAX 012-390840

Danmark

Bose A/S, Industrivej 7, 2605 Brøndby
TEL 4343-7777 FAX 4343-7818

Deutschland

Bose GmbH, Max-Planck-Straße 36d
D-61381 Friedrichsdorf
TEL 06172-71040 FAX 06172-710419

France

Bose S.A., 6, rue Saint Vincent
78100 Saint Germain en Laye
TEL 01-30616363 FAX 01-30614105

India

Bose Corporation India Private Limited
W-16, Greater Kailash-II
New Delhi 110 048
TEL (011) 648 4462 FAX (011) 648 4463

Ireland

Bose Corporation
Carrickmacross, Co Monaghan
TEL (042) 9661988 FAX (042) 9661998

Italia

Bose S.p.A., Via della Magliana 876
00148 Roma
www.bose.it
TEL 06-65670802 FAX 06-65680167

Japan

Bose K.K., Shibuya YT Building
28-3 Maruyama-cho
Shibuya-ku, Tokyo 150
TEL 3-5489-0955 FAX 3-5489-0592

Nederland

Bose B.V., Nijverheidstraat 8
1135 GE Edam
TEL 0299-390111 FAX 0299-390109

Norge

Bose A/S, Solheimsgate 11
N-2001, Lillestrøm
TEL 63-817380 FAX 63-810819

Österreich

Bose Ges.m.b.H., Vienna Business Park
Wienerbergstrasse 7 (10.OG)
A-1100 Vienna
TEL 01-60404340 FAX 01-604043423

Schweiz

Bose AG, Rünenbergerstrasse 13
4460-Gelterkinden
TEL 061-9815544 FAX 061-9815502

Sverige

Bose A/S, Johannefredsgatan 4
S-43153 Mölndal
TEL 31-878850 FAX 31-274891

United Kingdom

Bose Limited
1 Ambley Green
Gillingham Business Park
Gillingham, Kent ME8 ONJ
TEL 0870-741-4500 FAX 0870-741-4545

From other locations

Bose Customer Service, 1 New York Ave.
Framingham, MA 01701-9168 USA
TEL (508) 766-1900 FAX (508) 766-1919

World Wide Web

www.bose.com



BOSE[®]
Better sound through research[®]

©2004 Bose Corporation
The Mountain, Framingham, MA 01701-9168 USA
252171 AM Rev.02