

# SENCOR®

## SFP 1360

**USER'S MANUAL**

**NÁVOD K OBSLUZE**

**NÁVOD NA OBSLUHU**

**FELHASZNÁLÓI KÉZIKÖNYV**

**INSTRUKCJA OBSŁUGI**

**MP3 PLAYER**

**MP3 PŘEHRÁVAČ**

**MP3 PREHRÁVAČ**

**MP3 LEJÁTSZÓ**

**ODTWARZACZ MP3**

**EN CZ SK HU PL**



## Special Features

- Elegant appearance and easy to use.
- Multi-Code Player - Supporting MP3, WMA, formats.
- Driver Free U Disk - You may manage your files directly through "Portable Device" in "My Computer" on Windows 2000 Operating System or above without driver.

## Brief View of Player

### A. About player's battery

Player has an internal, non-user-replaceable rechargeable lithium battery. For best results, the first time you use the player, let it charging for about 1 - 2 hours or until the charging LED lights go Off before you use it.


### Charging the Battery

You can charge the Player's battery in two ways:

1. Connect player to your computer.
2. Use the USB power charger. (available separately)

### B. Key function of buttons

#### Appearance

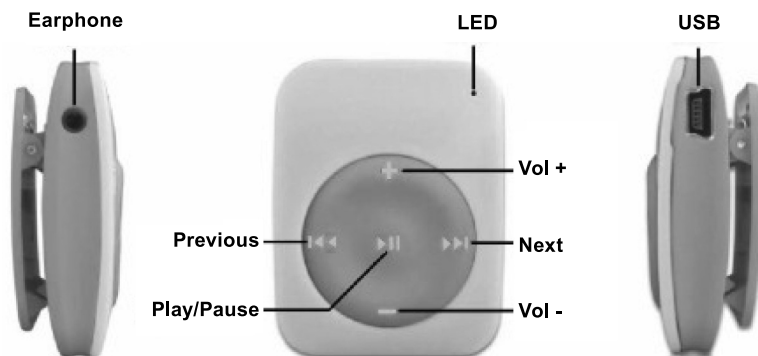

- **▶||** button : To Play / Pause, On / Off.
- **◀◀** button : To previous song or fast-backward.
- **▶▶** button : To the next song or fast-forward.
- **+** button : To increase volume level.
- **-** button : To decrease volume level.
- **USB** : For PC connection and charge function.

## Getting start player

### 1 Turn On / Off

- 1.1 Plug in earphone set into player's jack
- 1.2 Press and hold ►|| button, for about 2 - 3 second, the player will turn On and the music will play directly.
- 1.3 Press and hold ►|| button, for about 2 - 3 second, to turn Off the player.

### 2 Play / Pause Music

- 2.1 Press ►|| button to pause the playing music, press it again to play.
- 2.2 If player is in pause state for 3 minutes, it will be turned to Off automatically.

### 3 Adjust Volume

- 3.1 Pressing +/- button to increase or decrease volume level.
- 3.2 Press and hold +/- button to increase or decrease volume level faster.

### 4 Play Next / Previous Music

- 4.1 In playing mode, press ►► button to select next music.
- 4.2 Press ◀◀ button to select previous music.

### 5 Play Fast-Forward / Fast-Backward

- 5.1 In playing mode, press and hold ►►► button to enter fast-forward mode.
- 5.2 Press and hold ◀◀◀ button to enter fast-backward mode.

## USB mode

### 1 Connect player to computer

- 1.1 Connect player to computer with the USB cable, then a "USB Mass Storage Device" is detected and related driver is installed by you computer. (Windows 2000 / XP System or about)
- 1.2 A removable disk drive will be shown in "My computer" folder, now you can start Read / Write operation. And the battery is charging in background.
- 1.3 In connection mode, the player can be play music if you press or pressing the play button. However, the player may stop or start playing if removing the PC connection.

### 2 Remove player from computer:

- Please safety to removes the player in computer, otherwise, the data stored in the Player might loss.
- 2.1 If you're using a Windows PC, you can disconnect the player in My Computer or by clicking the "Safely Remove Hardware" icon in the Windows system tray.
  - 2.2 If you're using a Mac, you can also disconnect player by dragging the player icon on the desktop to the Trash.
  - 2.3 And now, is safe to disconnect the player with your computer, unplug the USB connector from player and then your computer.
  - 2.4 If you're accidentally disconnect player without disconnect it, reconnect it to your computer.
  - 2.5 At power ON mode, after remove the PC connection, the player will auto-play the music directly.

## Indicator light function

- **Playing Mode:** Red light flashing once per second.
- **Pause Mode:** Red light bright.
- **PC Connecting Mode:** Red light bright. (Charging in background)
- **Recharging Mode:** Red light bright.
- **Recharge complete:** Red light will turn OFF

## Troubleshooting

Play cannot turn ON	<ul style="list-style-type: none"> <li>• Check whether battery have enough energy.</li> </ul>
No sound is heard	<ul style="list-style-type: none"> <li>• Check whether Volume is set to “minimum” and connect the headphone plugs firmly.</li> <li>• Check whether the headphone plug is dirty.</li> <li>• Corrupted WMA / MP3 may make a static noise and the sound may cut off. Make sure that the music files are not corrupted.</li> <li>• Check whether music files format are support.</li> </ul>
Download of music files fails.	<ul style="list-style-type: none"> <li>• Check whether player's USB connector is connected with computer properly.</li> <li>• Check whether driver is installed correctly.</li> <li>• Check whether the player's memory is in full.</li> </ul>

## Specification

Dimension	45.5 mm (H) × 35 mm (W) × 18 mm (D)	
Weight	15g	
PC Connection	USB 2.0 (High Speed)	
Earphone Impedance	32 Ohm	
Internal Memory	Flash memory: 4GB	
Battery	Built-in Rechargeable Lithium battery (3.7V 110mA)	
	Playing Time: about 6 – 7 Hours	
Supports Music Format	MP3	32kbps - 320kbps
	WMA	32kbps – 384kbps
Audio	Earphone Output Power	L: 150mVrms + R: 150mV (32 Ohm)
	Frequency Response	20Hz – 20,000Hz
	SNR	80dB
Operation Temperature	-0°C - 40°C	
Operation Systems	Windows 98/SE/ME2000/XP/Vista, MAC 9.2 or above	

**Note:** Product design and specification are subject to change without prior notice.

## **INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of packaging material at a public waste disposal site.

## **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES**



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### **For business entities in the European Union**

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### **Disposal in other countries outside the European Union**

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.