

**SENCOR®**

**Let's live!**

**TOWER BLUETOOTH SPEAKER  
SSS 2600 BS**

**USER'S MANUAL  
EN**





CONGRATULATIONS ON PURCHASING THE TOWER BLUETOOTH SPEAKER FOR HOME USE. IT IS CHARACTERISED BY ITS ADVANCED DESIGN, MODERN APPEARANCE, EXCEPTIONALLY RICH SOUND AND IMPLEMENTATION OF THE LATEST TECHNOLOGIES. ALL THIS WITH SIMPLE CONTROLS.

## Contents

Package Contents .....	1
1. Important notices.....	2
Repairs and maintenance .....	3
2. Panel.....	4
TOP PANEL .....	4
LEFT/RIGHT SIDE PANEL .....	5
REAR PANEL.....	5
Power supply connection .....	5
3. Connections.....	6
AUX/LINE IN .....	6
MP3 mode.....	6
Bluetooth Connection .....	7
4. Remote Control .....	8
OPERATION.....	9
Tuner Operation .....	10
5. Troubleshooting.....	11
6. Specifications.....	12
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS.....	13
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES.....	13

## Package Contents

User manual



Remote control



## 1. Important notices

 
- Read this user's manual. Follow the instructions contained in this user's manual.
- Heed all warnings.
- Adhere to all instructions.
- Use only accessories determined by the manufacturer.
- An open flame must not be placed on the device, e.g. burning candle.
- Use the device in a temperate climate zone.
- Neither the manufacturer nor the vendor of the device under no condition takes responsibility for any direct or indirect damages caused by not adhering to instructions for installation, set-up, use, servicing or cleaning of this device as described in this user's manual.
- Protect the device against being knocked, dropped, hit, shaken and against vibrations, humidity and dust.
- Before allowing children to use the device, they must be appropriately to their age, informed about the correct and safe use of the device.
- Leave free space on all sides of the device, necessary for proper air circulation. This removes the heat created during operation. Covering the ventilation openings of the device's case creates a risk of overheating or damaging the device. It is necessary to ensure that the ventilation openings are not blocked, e.g. by a newspaper, a table cloth, a curtain, etc. Follow the installation instructions in the user's manual.
- Do not install the device in direct sunlight or near sources of heat, such as heaters, heat exchangers, stoves or other devices (including amplifiers) producing heat. High temperatures significantly reduce the lifetime of electronic components in the device. Do not use or leave the device in the vicinity of an open fire.
- The device must not be exposed to dripping or running water and objects filled with water must not be placed on it, e.g. vases. Protect the device against rain, spray or contact with any other liquid, do not leave or install the device outdoors. Do not use the device outdoors. Not adhering to these instructions creates a risk of electrical shock or fire hazard.
- Do not use this device near water.
- Protect the device against being knocked, dropped, hit, shaken and against vibrations, humidity and dust.
- Regularly inspect the device. Never use a damaged device.
- The device is equipped with special passive radiators that provide for a rich and natural sound even from a small device and function similarly to a subwoofer. Do not cover them or prevent their function.

## Repairs and maintenance

- To prevent risk of injury through electric shock or the creation of a fire, do not take the device out of the case - there are no parts inside the case repairable or adjustable by the user without relevant equipment and qualifications. Should the device require adjustment or repair, contact a professional service centre.
- In the case of any unusual events occurring during the use of the device, e.g. if there is a distinct smell of burning insulation or smoke comes out of the device, immediately turn off the device, disconnect the device from the power source and do not use the device until you have received the results of the inspection performed by the employees of the professional service centre.
- Have all repairs carried out by qualified personnel. Repairs are necessary if the device has been damaged in any way, for example liquid was poured on the device, foreign objects have entered the device, the device has been exposed to rain or moisture, if the device is not working as usual or if it has fallen.
- Clean the device only with a dry cloth.
- For cleaning do not use petrol, thinners or any other solvents or use any abrasive cleaning agents, steel wool or any sponges with steel wool.

## 2. Panel

### TOP PANEL

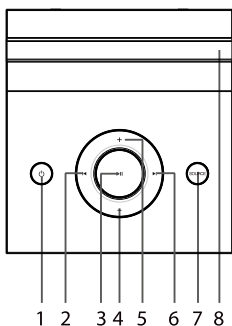


1. STANDBY
2. PREVIOUS
3. PLAY/PAUSE
4. VOLUME-
5. VOLUME+
6. NEXT
7. SOURCE SELECT
8. HOLDER FOR A CONNECTED DEVICE

**Attention:**

 The tower speaker provides a universal holder for a connected device. Please make sure that your device fits in the holder and does not fall down from the holder. Do not move the tower speaker while a device is placed in the holder.


## LEFT/RIGHT SIDE PANEL



1. SD CARD SLOT
2. LINE INPUT
3. USB SLOT

(Insert a USB drive into the USB slot on the right panel, the unit will play the Mp3 music in connected USB when press[source] button to switch to the USB mode.)

## REAR PANEL

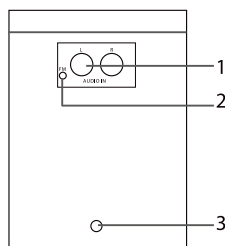 

1. AUX INPUT
2. FM ANTENNA
3. POWER CORD

## Power supply connection

Before turning it on, make sure that the voltage in your power grid corresponds to the voltage indicated on the rating label.

In the interest of your own safety, carefully read the following instructions before first connection of this device to the power grid.

If you wish to operate this device, insert the power cord into a power socket with a voltage of 100–240 V/50/60 Hz and turn it on by the STANDBY button on the top panel.

## 3. Connections

### AUX/LINE IN

This unit have two extra groups of audio input terminals. You can input the analogue stereo audio signals from extra devices such as VCD, CD, VCR, MP3 player, etc.

Use the audio cable to connect the stereo audio output terminals of a VCD, CD, VCR player to the stereo input terminals AUX/LINE IN of this unit.

Its corresponding signal source is AUX/LINE IN which can be available by pressing [SOURCE] on the on the remote control.

### MP3 mode

Insert a microSD card (into the SD card slot) or a USB flash disk (into the USB HOST port). Then press the SOURCE button and choose the SD or USB source.

Press the volume adjustment button or select a track that you want.

1. Short press the PLAY/PAUSE button to pause or resume playback.
2. Short press the PREVIOUS or NEXT button to skip to the previous or next track.
3. Long press the PREVIOUS or NEXT button to quickly scroll through the currently played track.

**Attention:**

With respect to the variety of devices on the market, the compatibility and playability of all media is not guaranteed. Memory devices that you wish to connect should be tested in advance or formatted to the FAT32 file format. It may not be possible to playback protected media, files or content contained on them. Playback tested and unprotected media and content.

**Attention:**

Insert the SD card carefully with the contacts facing upwards and towards the device. Gently push the cards in until you feel the light click of the card lock. The card will protrude out slightly.



**Note:**

Media with a power consumption greater than flash memory should only be connected if it has its own power source. It is possible to also use SD cards with a capacity greater than 32 GB, e.g. 64 GB. Before using them, format them to FAT32 and test their compatibility and recognition by this device. If the device does not read the memory even though it should contain playable content, use a different card or memory/media type.

## Bluetooth Connection

The bluetooth pairing model of the unit is SSS 2600BS, press [SOURCE] button on the top panel to switch to the corresponding signal source, use your mobile phone to search the bluetooth signal of the unit, then input the password 0000 if necessary, the unit will synchronize to play songs on your mobile phone while the unit display "bt" on the display screen means to connect successfully.

Disconnect the bluetooth on the smart phone to switch off the bluetooth connect. The bluetooth is connected to your smart phone successfully for the first time, disconnect the bluetooth on your smart phone then reconnected it, the player will memories your smart phone and repaired automatically. Press [PLAY/PAUSE] to resume the playback.

 
**Note:**

1. Bluetooth connection range in 10 meters.
2. In bluetooth mode, [PLAY/PAUSE],[NEXT], [PREVIOUS], [VOLUME+/-] etc. are also active.

**Attention:**

Some connected devices can support an undivided volume settings. If one of the connected devices do not support this function then the volume adjustment will work on both devices separately.

## 4. Remote Control

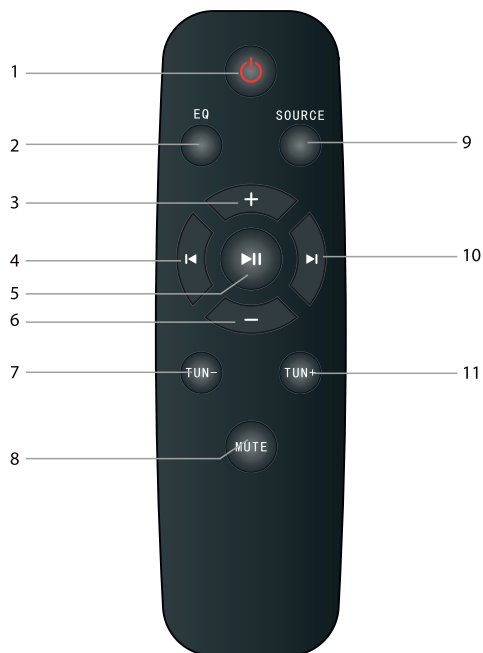

- 1 STANDBY
- 2 EQ
- 3 VOLUME+
- 4 PREVIOUS
- 5 PLAY/PAUSE
- 6 VOLUME-
- 7 TUN-
- 8 MUTE
- 9 SOURCE
- 10 NEXT
- 11 TUN+

## OPERATION

### STANDB



Press to switch on the speaker, press it again to put the unit in standby mode.

### SOURCE



Press repeatedly to select a signal source Bluetooth, LINE IN,AUX,USB,SD or RADIO mode.



Press to temporarily pause a playback, press it again to resume the playback.  
Hold down to disconnect bluetooth connection in bluetooth connection mode.



Press to skip to the next track.



Press to return to the previous track.



Press [VOLUME+] to turn up the volume.



Press [VOLUME-] to turn down the volume.

### MUTE



Press to temporarily switch off the sound; press it again to switch it on.

### EQ



Press to switch the equalizer modes.

## Tuner Operation

The radio plays an available FM station.

The device has an FM antenna that is sufficient for reliable reception of strong radio stations free of interference. If the reception is weak or there is radio noise, first try changing the position of the antenna. If the radio signal remains weak, select a different station with a stronger signal. It is possible that interference in your area may also be caused by high power electrical equipment or electronic appliances. In such a case, move away from the interference source for reliable reception.

The following button is used in tuner mode. Press [SOURCE] button on the top panel repeatedly to select FM tuner mode.

### PLAY/PAUSE



Hold down to do auto scanning for the broadcasting radio channels, press it again to stop auto scanning.



Press to skip to the next preset station.



Press to skip to the previous preset station.



Press to fine tune (increase) the frequency.  
Hold down to increase the frequency continuously.



Press to fine tune (decrease) the frequency.  
Hold down to decrease the frequency continuously.

### Note:

In Tuner mode, [VOLUME+/-], [MUTE] etc buttons are also active.

## 5. Troubleshooting

Before resorting to maintenance service, please kindly check by yourself with the following chart.

Symptom	Cause(s)	Remedy
<b>No Power</b>	<ul style="list-style-type: none"> <li>The AC power cord is not connected to the power supply or is not connected to a power supply securely.</li> </ul>	<ul style="list-style-type: none"> <li>Please check that the AC power cord is connected securely.</li> </ul>
<b>Sound There is no sound or the sound is distorted.</b>	<ul style="list-style-type: none"> <li>The volume is set to the minimum level.</li> </ul>	<ul style="list-style-type: none"> <li>Turn up the volume.</li> </ul>
<b>The buttons on the unit doesn't work.</b>	<ul style="list-style-type: none"> <li>The unit is being interfered with static electricity etc.</li> </ul>	<ul style="list-style-type: none"> <li>Switch off and unplug the unit. Then connect the plug to the power supply and switch it on again.</li> </ul>
<b>The player breaks down when a USB drive is inserted into the player.</b>	<ul style="list-style-type: none"> <li>The connected USB drive is probably not a certified one.</li> </ul>	<ul style="list-style-type: none"> <li>The player cannot play any uncertified USB drive. In case the player breaks down, turn it off, disconnect the power cord from the AC outlet and unplug the USB drive from the player. Then, power on the player again. The player will resume the normal status.</li> </ul>
<b>The remote control does not function.</b>	<ul style="list-style-type: none"> <li>There is no battery in the remote control.</li> <li>The battery is out of charge.</li> <li>The remote control isn't pointed to the remote sensor.</li> <li>The remote control is out of its operating area.</li> <li>The unit is shut down.</li> </ul>	<ul style="list-style-type: none"> <li>Install a battery in it.</li> <li>Replace the battery with new one.</li> <li>Make sure that the remote control is pointed to the remote control sensor.</li> <li>Make sure the remote control is within the operating area.</li> <li>Switch off the unit and disconnect it from the AC outlet. Then power on the unit again.</li> </ul>

## 6. Specifications

Power supply		AC ~100-240V,50/60Hz
Power consumption		30W
Working environment	Temperature	-10~+35
	Relative humidity	5 % ~90%
Speaker output (Max)		15WX2+30W
FM tuner band range		87.5MHz-108MHz

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, Říčany CZ-251 01

# SENCOR®

## EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.









# SENCOR®

Let's live!



[www.sencor.cz](http://www.sencor.cz)

Designed in Europe by Sencor®, Made in China

