




iXtreamer Dock Guide

Ver.2.6.0 Firmware

Major Function

 DOCK menu section

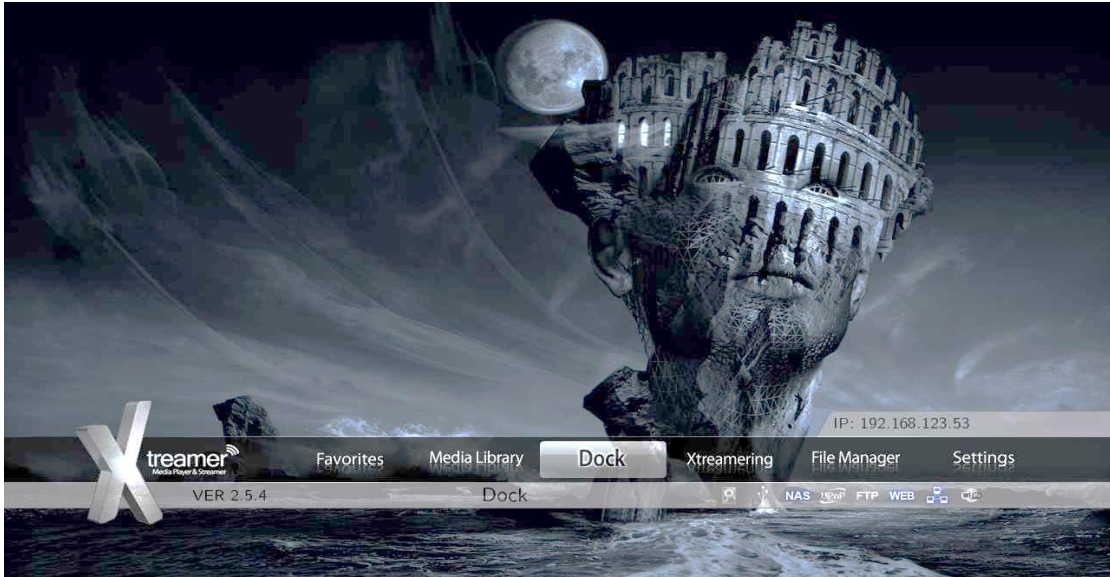

English

 
 










Currently only iPod Touch and iPhone running iOS 4.0 or above are supported.

  For more information please refer to the list of compatible devices.

Major Function







Compatibility list

In further firmware upgrades we will improve the Docking function.

Apple Product	Control with TV	Control without TV	Rechargeable
 iPad	✓		✓
 iPhone 4	✓	-	✓
 iPhone 3GS	✓	-	✓
 iPhone 3G	✓	-	✓
 iPhone		-	✓
 iPod Touch 4th Generation	✓	-	✓
 iPod Touch 3th Generation	✓	-	✓
 iPod Touch 2th Generation	✓	-	✓
 iPod Touch 1th Generation	-	-	-
 iPod Classic 120GB 160GB (2009)	-	✓	-
 iPod Classic 160GB (2007)	-	✓	-
 iPod Classic 80GB	-	✓	-

Major Function

Compatibility list

Apple Product		Control with TV	Control without TV	Rechargeable
	iPod 5th Generation (video)		✓	
	iPod 4th Generation (color display) 40GB 60GB		✓	
	iPod Nano 6th Generation	✓		✓
	iPod Nano 5th Generation(video camera)		✓	✓
	iPod Nano 4th Generation(video)		✓	✓
	iPod Nano 3rd Generation (video)		✓	✓

- Control on TV

You can view iPad/iPhone/iPod media files on TV and control them by the iXtreamer remote control

- Control without TV

The iPad/iPhone/iPod can be controlled by the remote control but without the TV output.

Menus and file lists are visible on iPad/iPhone/iPod screen only but the files can be played on TV.

Please refer to the "DOCK Connection" section






















Controlling iXtreamer Dock

Remote control functions for DOCK



Major Function

Remote Control button for iPod

	POWER	To turn on/ off power mode
	DOCK	Changes to iPod (iPad) control mode, one more click leads to iXtreamer control mode.
	iPod MODE	Shifts iPod mode (Currently, this function is supported for iPod touch and iPhone running over iOS 4.0)
	iMusic	Shifts into iMusic mode (The support will be added in the future)
	EQ	Changes iPod sound output mode
	Podcast	Shifts into PodCast mode (The support will be added in the future)
	F1~F4	F1 : Adjust brightness of iPod movie. F2~F4 : The buttons will be used for the further additional function of iPod.
	INFO	To display the current status function available while playback / Open information of the movie playing
	RETURN	Return to previous screen
	Navigation keys	Navigate through files and options
	ENTER	Confirm selection / play (single file playback)
	PLAY/ PAUSE	To play and pause the selected file (consecutive "file-by-file" playback)
	STOP	To stop file in play
	HOME	Return to Main Menu
	PGUP	To move to previous chapter or file (list)
	PGDN	To move to next chapter or file (list)
	FB/FF	1.5x/2x/4x/8x/16x/32x speed, function available in mp3 as well sound output available in 2x speed
	VOLUME	To adjust volume
	SHUFFLE	To change play sequence to shuffle
	REPEAT	To repeat file in play or to repeat all media files in the corresponding folder
	16:9	Screen shifts into 16:9/16:10/4:3 ratio during playback

Docking

Docking the iPhone (iPad/iPod)



- 01.**
Slide the top cover



- 02.**
If docking iPad take out the back support panel.



- 03.**
Put in the top hole of iXtreamer top side



- 04.**
Docking the iPhone/iPod/iPad

Docking

Docking the iPhone (iPad/iPod)

The Docking Guide is used for iPhones 3GS only and should be removed when using iPhone 4 or iPad.



Please remove a protective cover from your iPad before docking it.

Docking

After docking your iPhone (iPad/iPod) pay attention to the LED status.



Normal : Green LED




Normal: Green LED blinking

If a problem occurs take the device out and reconnect.

When the device is recognized the following screen will appear on TV.



If the player starts with an iPhone already docked press the DOCK button.

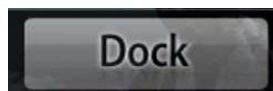


Using Dock

Return to the Media Library



To exit Dock menu

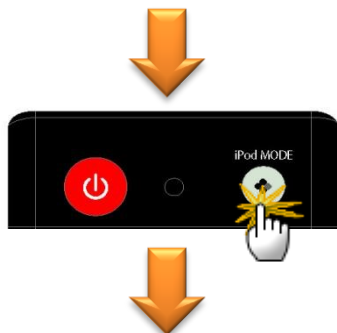

Press DOCK button



Return to the Main Menu




Press the button any time to access Dock menu.

Using Dock


Return to the DOCK mode



To go to the main DOCK menu.

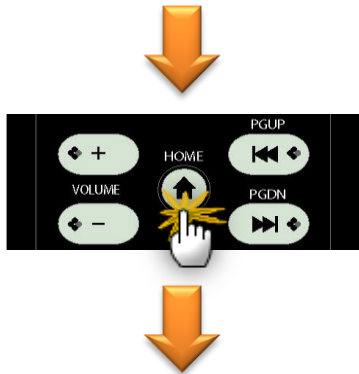

Press HOME button.

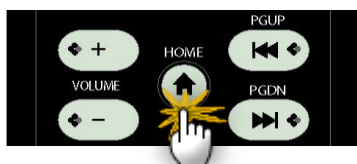

Home button will always return you to main screen of the Dock menu.

Using Dock

Outdated iPod version (Not iOS)

The following screen will appear if the device is not fully supported by the iXtremer.
If your iPod is not running iOS then the files can only be browsed on its screen and not on a TV.



To view a video file on TV please run the file on your iPod.



Using Dock

iOS 4.x and the latest Apple devices.

The following screen appears when an Apple device is docked.



English


Use video menu


Open the video list of iTunes or Podcast on iPod.



If the required file is not listed on iTunes it can't be opened this way. Please return to the Dock Main Menu.

Using Dock

Use  (Info) button during playback to see the movie file name.

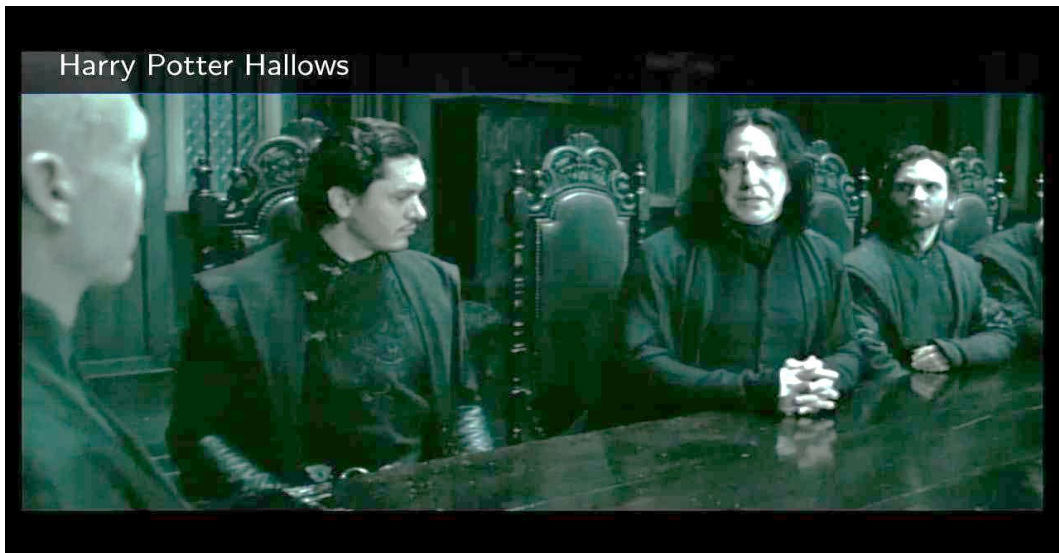


English


Press Home or Home button on the to return to the Dock main menu screen.

Dock accepts resolution up to 480i

Out put screen ratio:

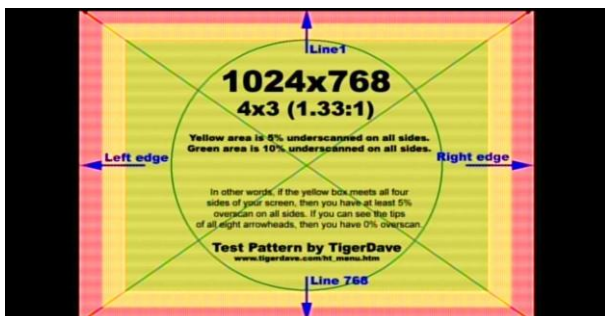

4:3 ratio play

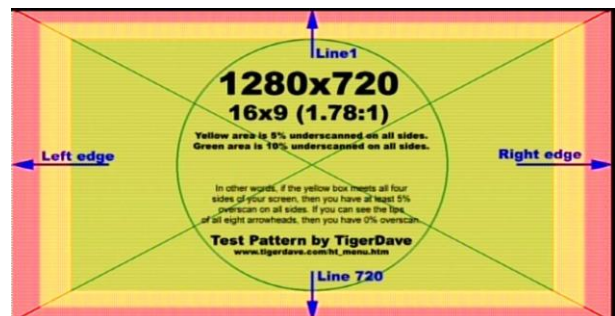

16:9 ratio play

Note: While playing 4:3 ratio movie files on a 16:9 TV please change the ratio to avoid "black borders" on the sides.

Using Dock


How to watch a video recorded by iPhone

To watch a video file recorded by iPhone, access the Photos on your iPhone screen to find it.

1. Dock the iPhone.
2. Select the photos menu in Dock.



The following screen will appear.

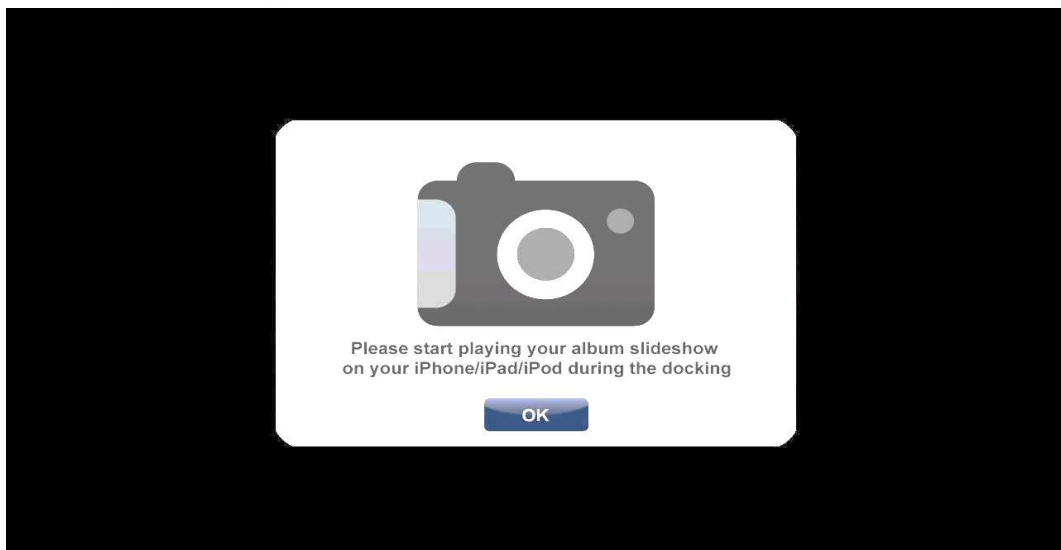


Watching Video

How to watch a video recorded by iPhone


Run the Photos application on your iPhone



 
Access the Photos icon in iPhone

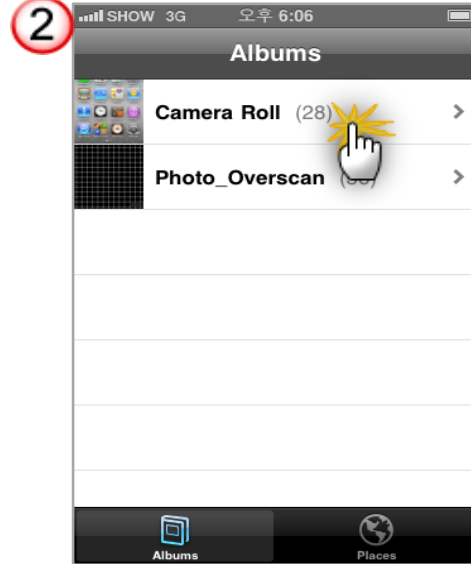

Touch the Camera Roll menu

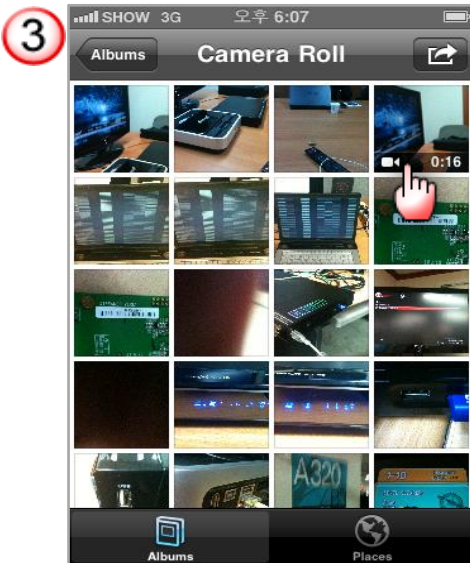 

Choose a recorded video

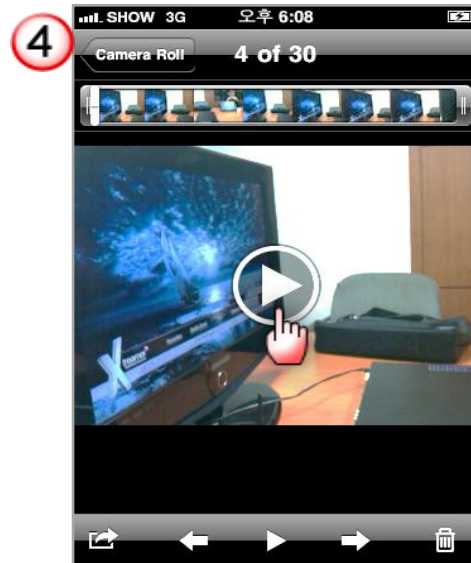 


Touch the play button to start playback

Listening to Audio Files

DOCK Audio Section

 Enter DOCK menu audio section

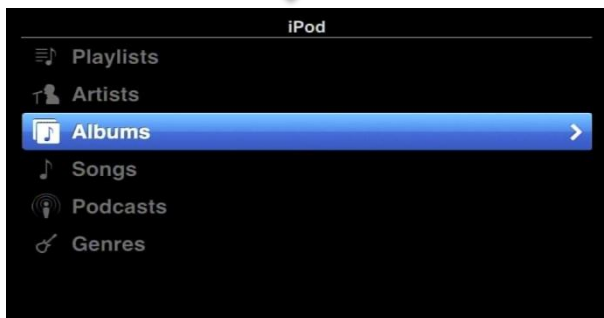

Select a category in the iPod audio screen



 
Enter the category

Listening to Audio Files

Audio Menu in DOCK




Use up/down keys to navigate



Select an album.



 Or an audio file.

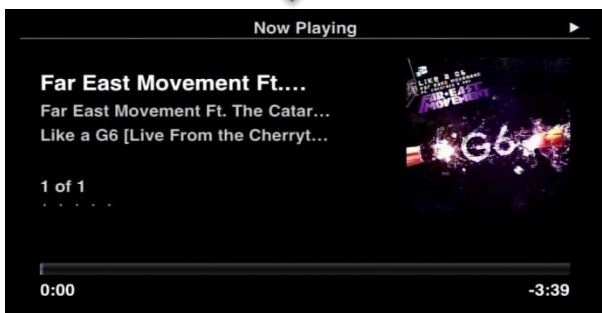


Play the file.

Listening to Audio Files

Audio Menu in DOCK

 Continuous play

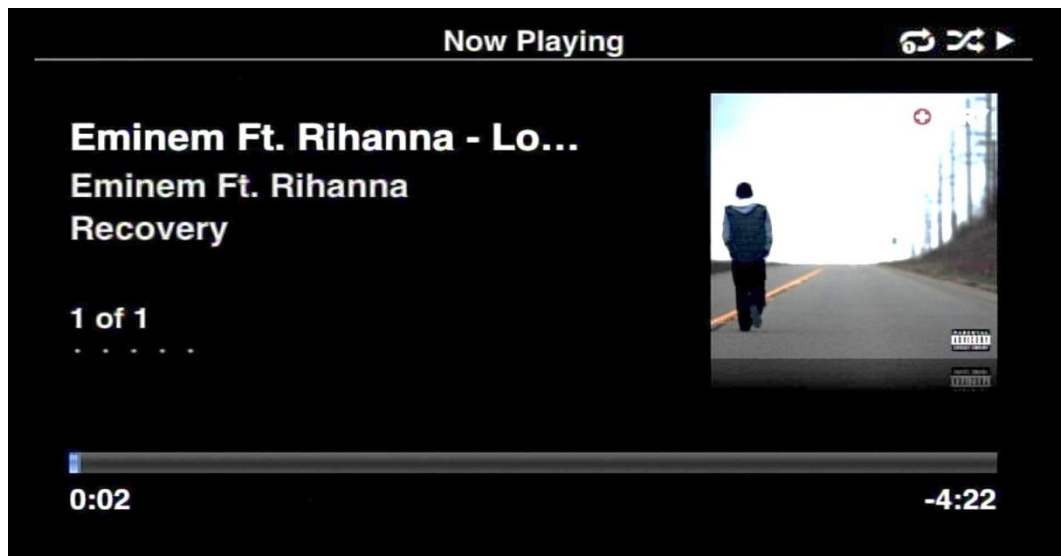

Button	Icon	Play mode	Description
SHUFFLE		Sequential	Sequential play
		Random	Random play


Button	Icon	Repeat mode	Description
REPEAT		All Repeat	Repeat all files.
		1 Repeat	One files only.
		Loop Repeat	Repeat files continuously.

Accepting a Call



Accepting a call while playing an audio file on iXtreamer

When someone calls your iPhone while it is used for audio playback you will be alerted on the TV screen.

 English

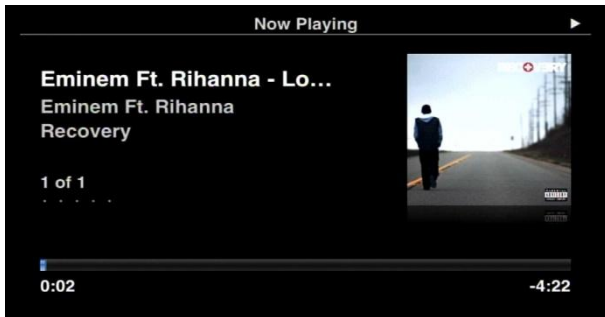

Audio playback screen

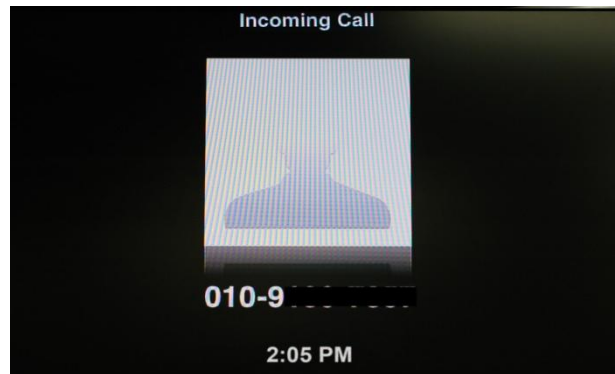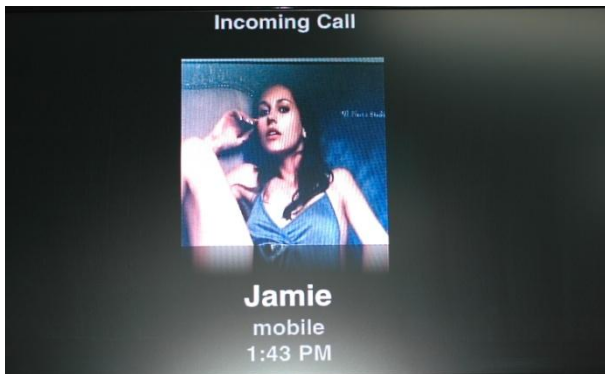  

Call alert and caller information is displayed on the TV screen.

You can accept the call after un-Docking your iPhone.

Note

- At the moment this feature is only available in the Dock audio menu.
- You cannot receive call information in Video and Photos menus.

 
Watching Photos

DOCK Photos Menu

You can access the images stored in iTunes and photos taken by your iPod\iPad\iPhone.



Select photos menu in Dock.

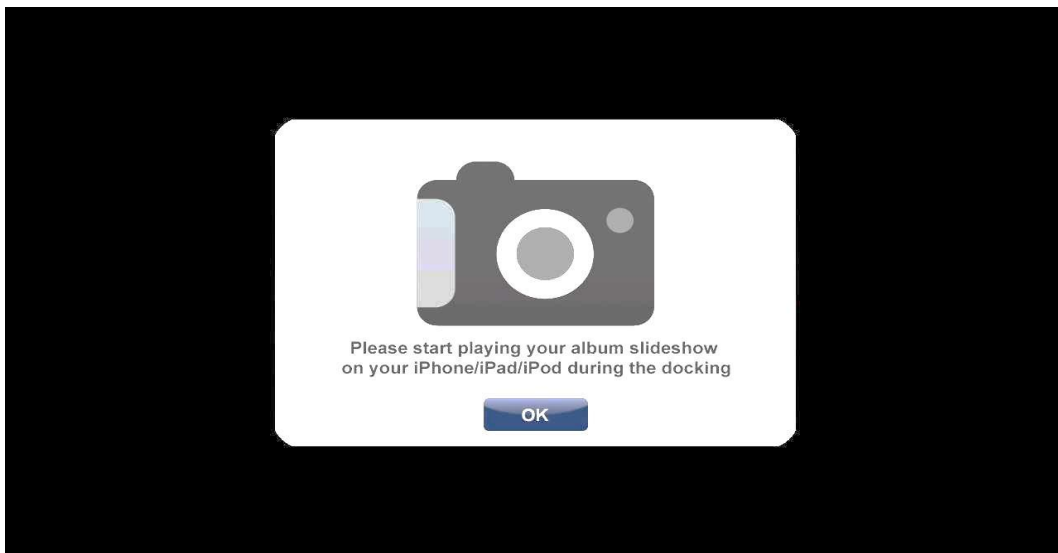


The above message will appear on the TV screen.

Watching Photos


DOCK Photos Menu



 
Press the Photo icon on your iPhone.

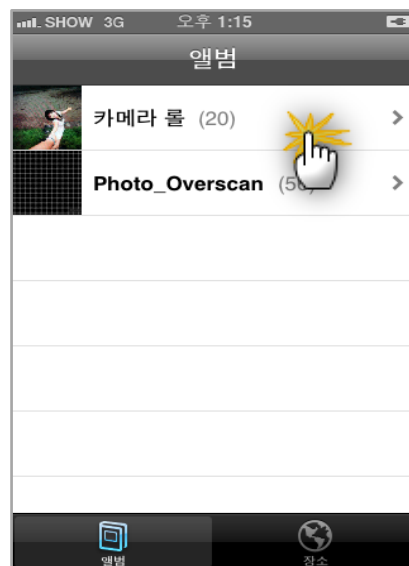

Navigate to a required folder .

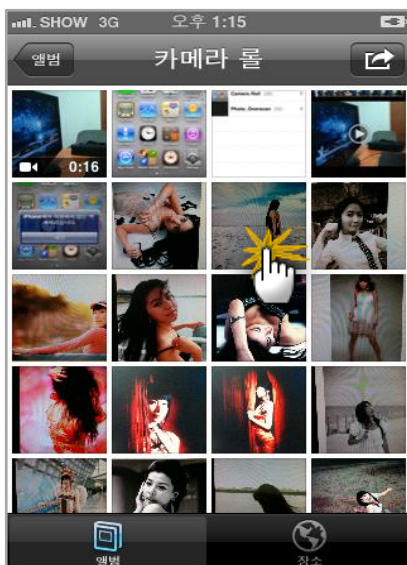 


Select a photo.

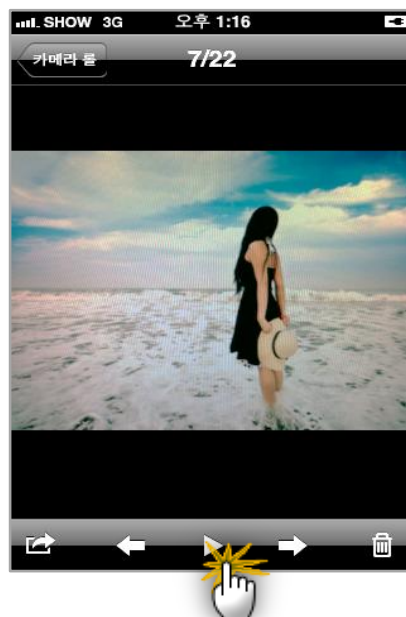 


Touch the ► button and start the slideshow.

 Watching Photos

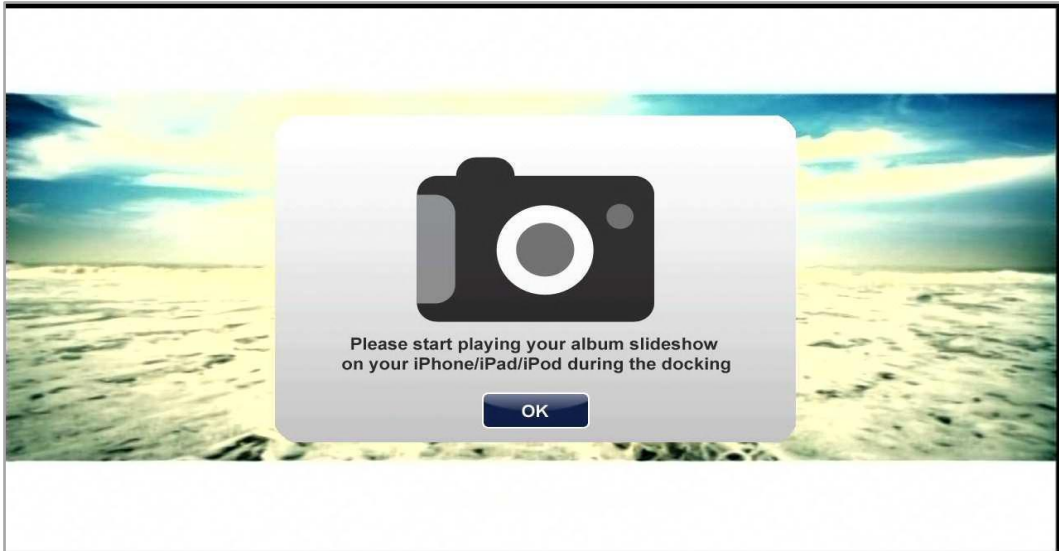

DOCK Photos Menu



Once the slideshow is started and is seen on your TV, press  (ENTER) button to close the information window.



Use   buttons to navigate.

Use   buttons stop and resume the slide show.

The Slideshow function uses the settings of your iPhone\iPod.

 
Background Music for Slideshows

Using Audio and Photos simultaneously.

Enjoy a Slideshow with background music.



1. First, choose and play an audio file.

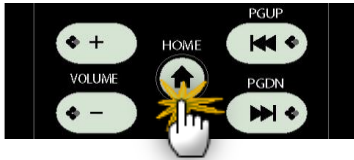

2. Press Home button to return to the DOCK main screen.



 
3. Select Photos menu and use your iPhone to start a Slideshow.




4. Now you can enjoy your Slideshow and listen to the music at the same time.

Dock Firmware Upgrade

DOCK firmware upgrade

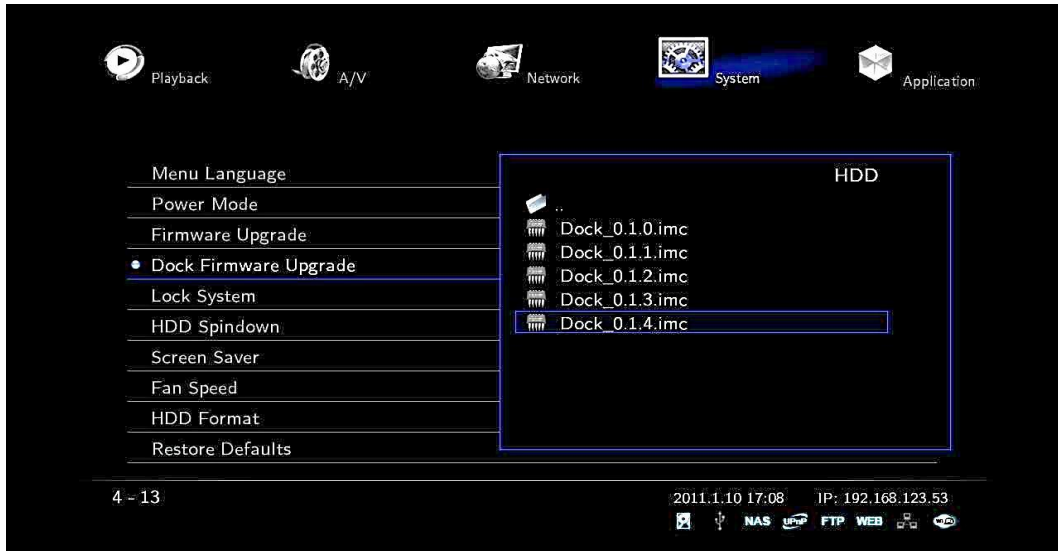

 
3. Select DOC firmware.

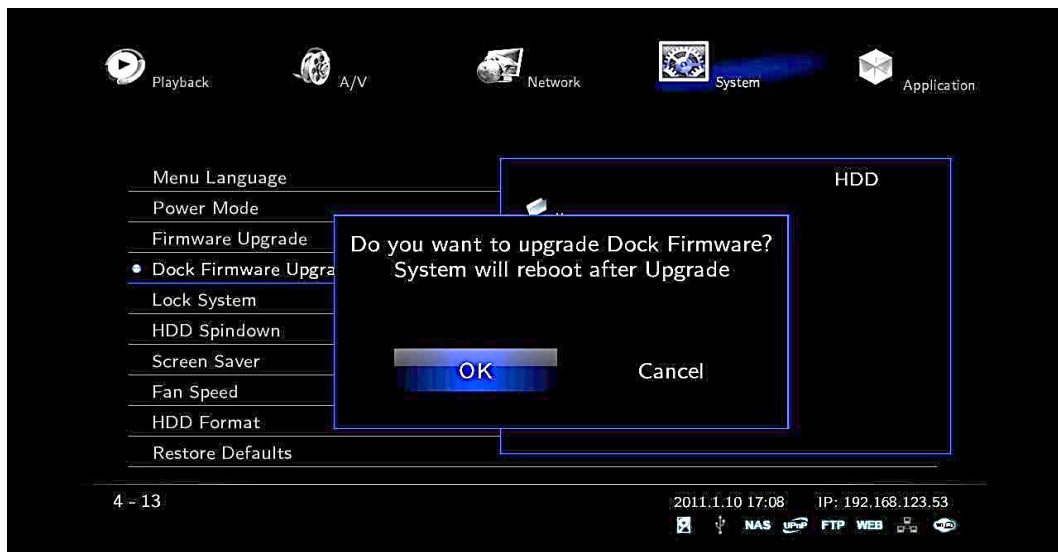

4. Read the guidance of R screen and press OK to upgrade

Dock Firmware Upgrade

 DOCK firmware upgrade

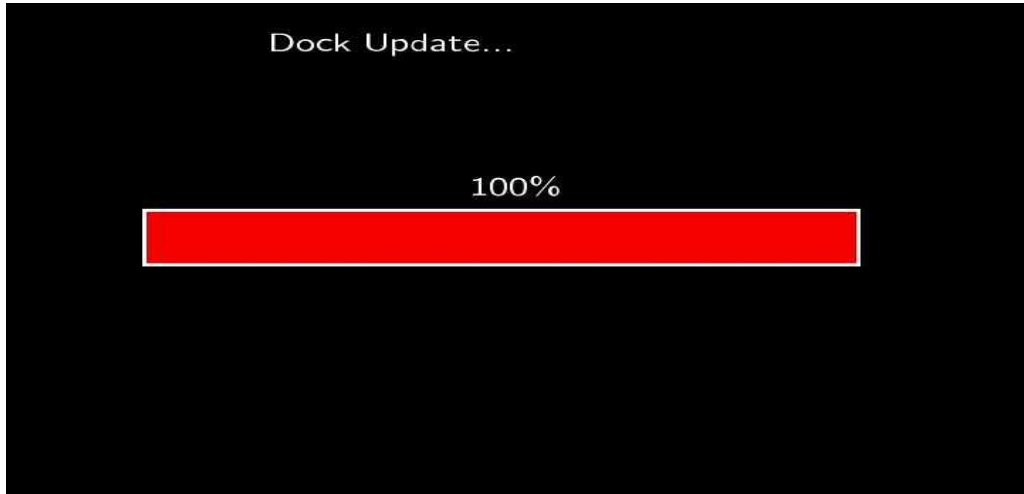

5. Upgrade is in progress. DOCK upgrading lasts 30seconds~1minute.
System reboots and upgrading will be completed.

Links

Xtreamer4Dummies [Dock video guide](#)

[iXtreamer Forum Section](#) – you will need to register on the forum

[iXtreamer in the Xtreamer Knowledge Base](#)

