 
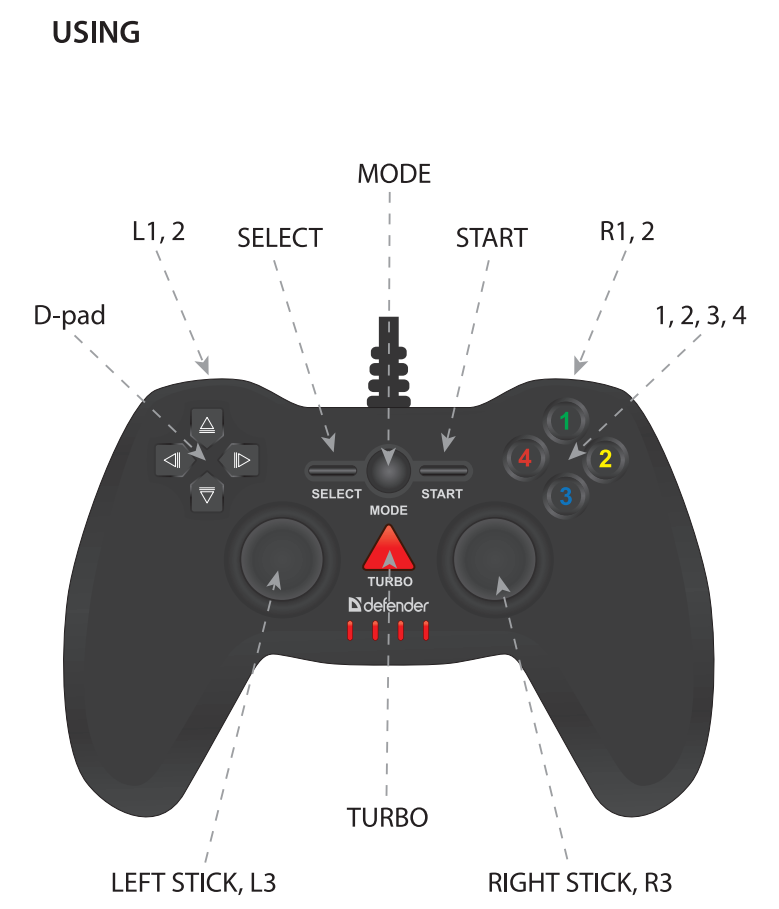 
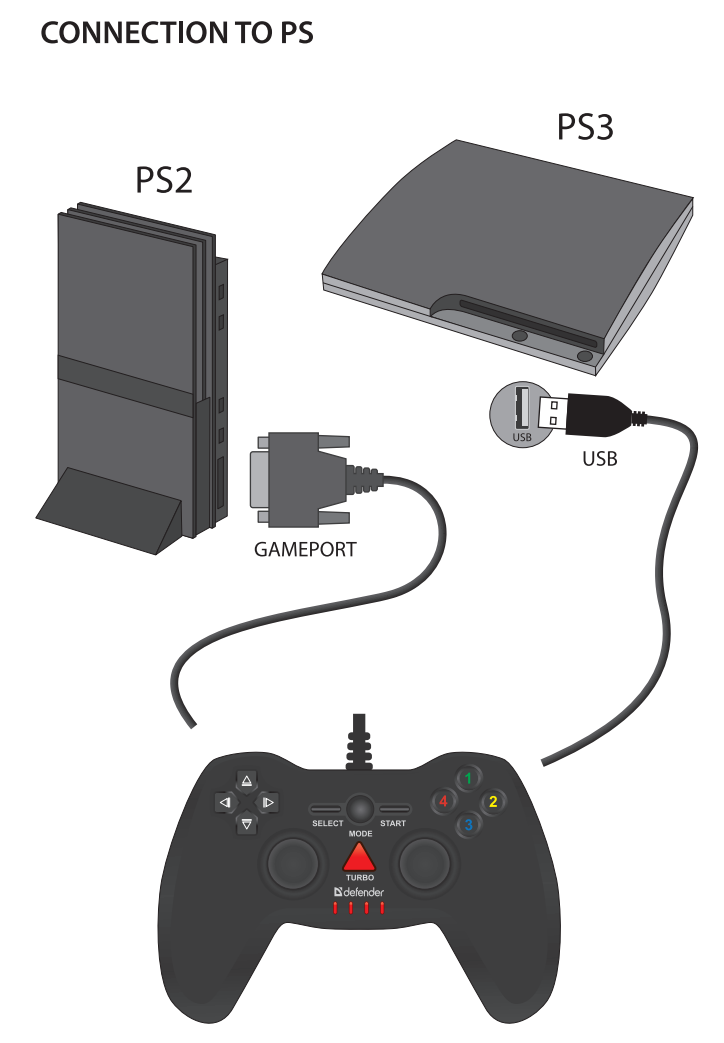 


# Archer

Wired gamepad

## User Manual

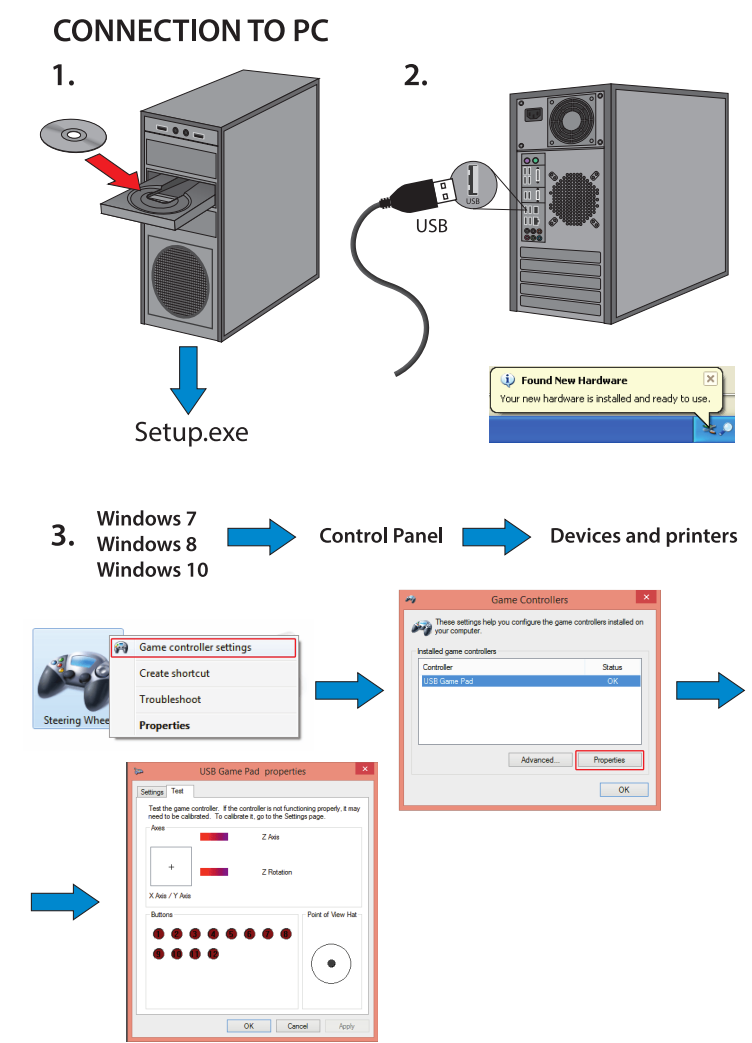

Operating mode	PS3	PS2/Digital	PS2/Analog	PC/Digital	PC/Analog	PC XINPUT (default)
1	△	△	△	1	1	4
2	○	○	○	2	2	2
3	X	X	X	3	3	1
4	□	□	□	4	4	3
L2	L2	L2	L2	5	5	Z
R2	R2	R2	R2	6	6	Z
L1	L1	L1	L1	7	7	L1
R1	R1	R1	R1	8	8	R1
L3	L3	-	L3	11	11	9
R3	R3	-	R3	12	12	10
D-PAD	POV	X/Y	POV	X/Y	POV	POV
Left Stick	X/Y	X/Y	X/Y	X/Y	X/Y	X/Y
Right Stick	Z/RZ	1-4	Z/RZ	1-4	Z/RZ	X/Y
START	START	START	START	10	10	8
SELECT	SELECT	SELECT	SELECT	9	9	7
TURBO	TURBO	TURBO	TURBO	TURBO	TURBO	TURBO
MODE	HOME	MODE	MODE	MODE	MODE	MODE

