


SENCOR®


SRC 135

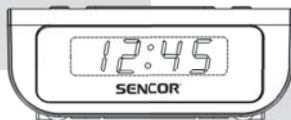

USER'S MANUAL

Alarm Radio Clock

Alarm Radio Clock

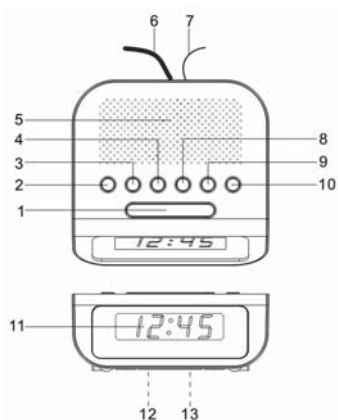

FUNCTION AND CONTROLS

1. SNOOZE / SLEEP
2. VOLUME DOWN / ALARM 1 ON / OFF SET
3. VOLUME UP / ALARM 2 ON / OFF SET
4. << / TUNE -
5. SPEAKER
6. AC POWER CORD
7. FM ANTENNA
8. >> / TUNE +
9. SET.MEM / MEMORY+
10. ON / OFF
11. DISPLAY
12. BATTERY COMPARTMENT (REAR OF UNIT)
13. RATING LABEL (REAR OF UNIT)

POWER CONNECTION

Plug the AC power cord to a household outlet AC source. This unit is equipped with a battery back up system, it requires a 3V CR2032 flat lithium battery (not included). Insert the battery in the battery compartment, making certain that the positive and negative (+ and –) battery terminals are attached to the corresponding terminals on the plate in the battery compartment. If an AC power failure occurs, the clock automatically switches to the battery power supply, the clock and timer memory continue running. When the AC power resumes, the clock switches back to AC again.

GETTING STARTED

1. TIME MANUAL SETTING

With the radio off mode, press and hold the SET.MEM / M+ button (9); “24 Hr” will blink. Press the Tune + (8) or Tune – (4) button to set the unit to the 12 hour (12 Hr) mode or 24 Hour (24 Hr) mode. Press the SET.MEM / M + button (9) and the hours will blink. Press the Tune + (8) or Tune – (4) to set the current hour, then press the SET.MEM / M + (9) button again; the minute digits will blink. Press the Tune + (8) or Tune – (4) to set the current minutes.

When done and you press SET.MEM / M + (9) button once again to indicate the current time is set.

2.. Setting Alarm Time

To preview the alarm time. Press the ALARM button (2/3) once. While the display is showing the alarm time and you hold the ALARM button for 3 seconds and the hours will blink. Press the Tune + (8) or Tune – (4) to set the alarm hour. Press the ALARM button again; the minute digits will blink. Press the Tune + (8) or Tune – (4) to set the alarm minutes. Press the ALARM button and you can change the sound mode (Buzzer, Radio) for the alarm. Press Tune + (8) or Tune – (4) to choose different volume. The alarm volume will gradually increase. Then press the ALARM button when done.

To delay the alarm, press SNOOZE. It will come on again in approx. 9 minutes. You may repeat this cycle several times during the alarm cycle. To stop the alarm, press ALARM button .

To stop the alarm from coming on the following day, hold the ALARM button to turn it off. The alarm icon will disappear to indicate the alarm is disarmed.

Listening to Radio

Press the ON/OFF button (10) to turn the unit on.

Use the Tune + (8) or Tune – (4) button to select the desired FM station. If you press and hold the Tune + (8) or Tune – (4) button for one second, the release, the unit will automatically scan to the next broadcasting station.

Press the ON/OFF button (10) to turn the radio OFF.

To set / recall the radio presets

Press the ON/OFF button (10) to turn the unit ON.

Use the Tune + (8) or Tune – (4) button to select the desired FM station.

Press the SET.MEM/ M + button (9); “P02” will blink in the display.

Press the SET.MEM / M + button (9) again to set the preset.

Repeat steps 2 through 4 to set more presets.

The unit can preset 10 stations totally for FM.

When “P01–P10” is blinking, press the Tune + (8) or Tune – (4) button to select the preset number.

When recalling preset stations, press SET.MEM / M + button (9) to select the preset number.

Sleep operation

When listening to radio, press Snooze / Sleep button (1) to enter sleep mode. You can just adjust the sleep timer from 90 mins to 10 mins by pressing the Snooze / Sleep button (1). The unit will automatically turn off after the selected time.

SPECIFICATIONS

Frequency range:	FM 87.5 – 108 MHz
Battery backup:	3 V (CR2032 Flat Lithium battery x 1) not included
Power supply:	AC230V 50Hz
Dimensions:	50 × 126 × 120 mm
Weight:	310 g

Note :

Ensure that the FM antenna is completely unrolled and extended for best FM reception.

RESETTING

If the system does not respond or exhibits erratic or intermittent operation, you may have experienced an electrostatic discharge (ESD) or a power surge that triggered the internal microcontroller to shut down automatically. If this occurs, simply disconnect the ac power cord and remove the system backup battery, wait for at least 3 minutes and then setup the unit again as if it is a brand new unit.

WARNING

1. No naked flame sources, such as lighted candles, should be placed on the apparatus.
2. Do not place the product in closed bookcases or racks without proper ventilation.
3. Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
4. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
5. It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
6. Do not connect FM antenna to outside antenna.
7. The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in dusty environment.
8. Do not use abrasive, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe it with mild non-abrasive detergent solution and clean soft cloth.
9. Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
10. Disconnect device warning : Mains plug is used as the connection, so it should always remain ready operate.
11. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.