

SENCOR®

Let's live!



RETRO RADIO
SRD 020

USER'S MANUAL
EN



CAREFULLY READ THIS USER'S MANUAL BEFORE PUTTING THE DEVICE INTO OPERATION. KEEP IT FOR FUTURE USE. RECORD THE MODEL NUMBER AND THE SERIAL NUMBER. SEE THE LABEL ON THE REAR COVER AND PROVIDE THIS INFORMATION TO YOUR VENDOR IN THE EVENT THAT YOU REQUIRE REPAIRS.

1. Important safety conditions



The lightning symbol located in a frame formed by an equilateral triangle informs the user about the existence of an uninsulated "dangerous voltage" inside the device, which can have such an intensity as to cause injury by electrical shock.



The exclamation mark symbol located inside an equilateral triangle informs the user about important instructions for operation and maintenance found in the documentation that comes with the device.

- The power plug is used as a disconnecting device, which must for this reason remain easily accessible.
- Do not expose the device to the effects of dripping or sprayed water and do not place objects filled with a liquid (e.g. vases) on the device.
- The device's connector is used as a disconnecting device, which must for this reason remain easily accessible.
- Remember to always disconnect the power plug from the power socket before disconnecting the power cable from the rear side of the device.
- An open flame must not be placed on the device, e.g. burning candle.

WARNING:

To prevent a fire hazard or injury by electric shock, do not expose the device to rain or humidity. Never attempt to open the case of the device – there is dangerously high voltage inside; have all repairs carried out by a qualified service centre.

1. Please read the instructions

You should read all safety and operating instructions before you start using the device. You should keep the safety and operating instructions for future reference. All warnings shown on the product and included in the user's manual must be adhered to. You should proceed according to all operating instructions.

2. Cleaning

Before cleaning this device, disconnect it from the power socket. Do not use liquid cleaning agents or cleaning agents in sprays. Use a damp cloth for cleaning.

3. Accessories

Only use accessories recommended by the manufacturer, because non-recommended accessories may lead to a hazardous situation.

4. Water and humidity

Do not use this product near water – for example near a bath tub, washbasin, kitchen sink or laundry containers, in damp underground environments or near swimming pools, etc.

5. Additional information

Do not place this product on an unstable cart, pedestal, stand, bracket or table. The product could fall and cause serious injury to children or adults, or could be seriously damaged. Only use the product with a cart, pedestal, stand or table recommended by the manufacturer or sold together with the device. Any mounting of the product must be carried out according to the manufacturer's instructions and the mounting accessories recommended by the manufacturer should be used.

6. Ventilation

The cut-outs and openings in the case of the device are used to ventilate the device and to provide for the reliable operation of the device and its protection against overheating – these openings must not be blocked or covered. These openings must never be blocked by placing the device on a bed, sofa, rug or other similar surface. This device should not be located in a closed-off area such as for example bookshelf or shelf, if sufficient ventilation is not provided for or the instructions of the manufacturer are not followed. The ventilation must not be impeded by covering the ventilation openings with objects such as newspapers, tablecloths, curtains, etc.

7. Power supply

This device may only be powered by the source of energy indicated on the type label. If you are not certain about the parameters of the power sources in your home, contact your retailer or a local energy company. Devices designed for battery operation or other power sources – see user's manual.

8. Grounding or polarisation

This product may be equipped with a polarised plug for alternating current (the plug has one pin that is wider than the others). This plug can be inserted into the power socket in only one way. This is a safety measure. If the plug does not fully fit into the socket, try turning the plug. If it is still not possible to insert the plug into your socket, contact a qualified electrician and request your wall sockets to be changed for a suitable type. Do not negate the safety purpose of the polarised plug.

9. Protection of the power cord

Power cords should be lead in such a way that they are not stepped on or that no items are placed on or under them – at the same time it is important to take special care when handling power cord plugs, power sockets and in places where power cords exit devices.

10. Lightning thunderstorms

For increased protection during a lightning thunderstorm or for longer periods when the device will not be used, disconnect the power cord from the power socket. In this way you will prevent damage to the device caused by atmospheric electricity or by impact on the power lines.

11. Overload

Do not overload the power socket, extension cords or integrated sockets, because this could cause a fire or injury by electric shock.

12. Entry of items or liquids

Never insert any foreign items into this device through any openings because they could come into contact with points with dangerous voltage levels or cause a short circuit of parts, which could cause a fire or injury by electric shock. Never pour liquids into this device.

13. Damage requiring repairs

Under the following circumstance disconnect the device from the power socket and contact a qualified service centre:


- a) If the power cord or power plug is damaged.
- b) If a liquid was poured on to the device or an item entered into the device.
- c) If the device was exposed to rain or water.
- d) If the device is not working normally according to the user's manual. Only set the elements described in the user's manual as incorrect settings of other elements may result in damage and often will require extensive repairs by a qualified technician to return the device to normal working condition.
- e) If you dropped the device on to the floor or if it has been damaged in any other way.
- f) If the device is evidently behaving differently, then repairs are necessary.

14. High temperature

This device must be located away from sources of heat such as heaters, convection heaters, stoves or similar appliances (including amplifiers) that produce heat.


2. Description of the device

Front panel

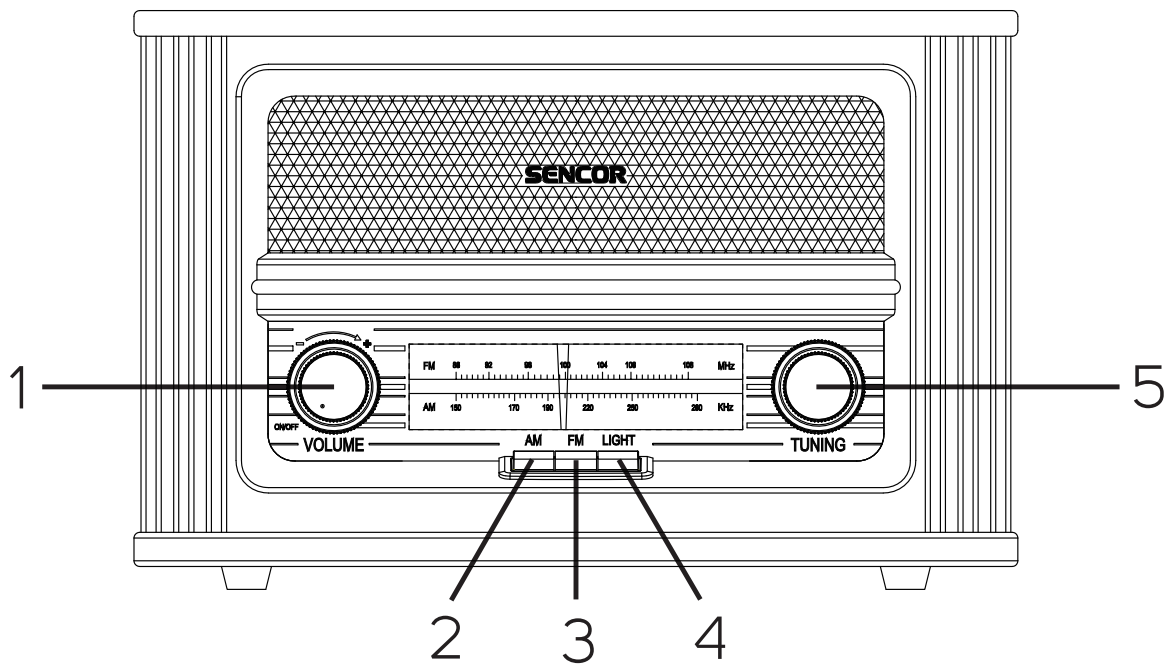

- | | |
|-------------------------------------|----------------|
| 1. Volume dial | 5. Tuning dial |
| 2. Button for tuning in the AM band | 6. FM antenna |
| 3. Button for tuning in the FM band | 7. Power cord |
| 4. Light button | |

Rear panel

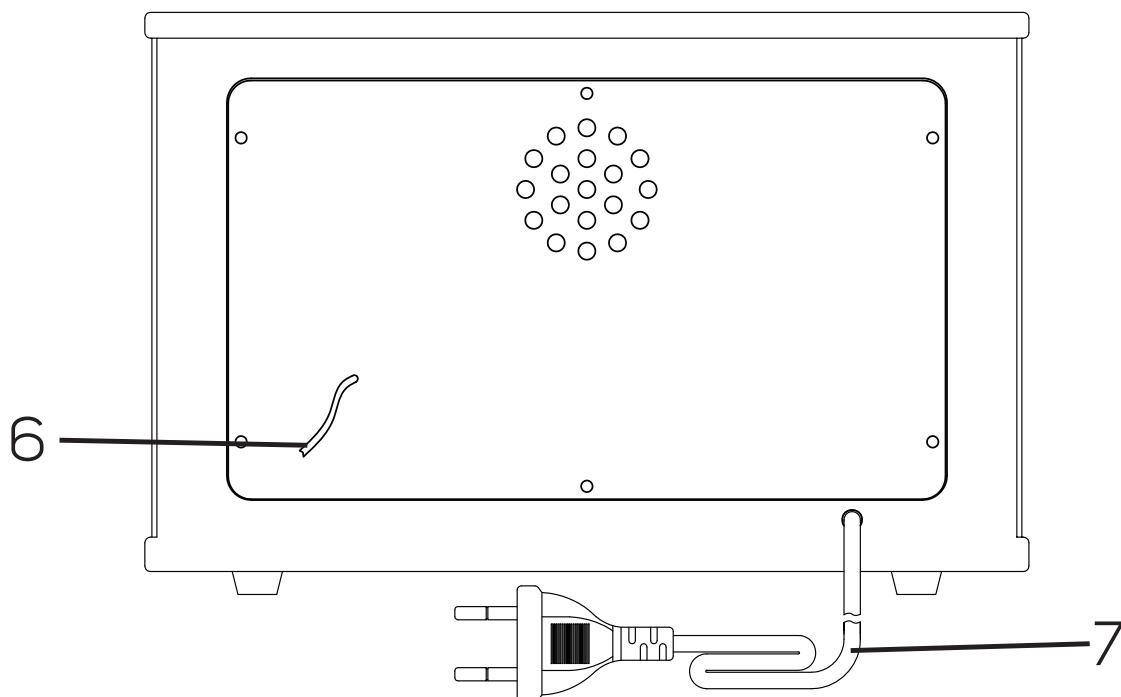

3. Operation

Power supply connection

Before turning it on, make sure that the voltage in your power grid corresponds to the voltage indicated on the rating label. In the interest of your own safety, carefully read the following instructions before first connection of this device to the power grid. If you wish to operate this device, insert the power cord (7) into a power socket with a voltage of 230 V 50 Hz and turn it on by turning the main power switch / turn dial (1).

Controlling the radio

1. To turn on the device (1), turn the volume dial clockwise.
2. Pull out the antenna (6) for the FM band. To optimise FM reception, turn the radio horizontally until the best reception is achieved.
3. Select the desired broadcast band: AM (2) or FM (3).
4. Tune into the desired station using the tuning dial (5).
5. Set the volume by turning the VOLUME dial (1).
6. Press button (4) to switch the lighting range.

4. Technical specifications

Power source: 230 V ~ 50 Hz
AM band: 530–1,600 KHz
FM band: 87.5–108 MHz

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.



DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make these changes.

Address of the manufacturer: FAST ČR, a.s., Černokostecká 1621, 251 01 Říčany
The original version is in the Czech language.

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.

SENCOR®

Let's live!

Designed in Europe by Sencor®, Made in China

www.sencor.cz

