


LenovoTM


AIO 730S

User Guide

Machine Type (MT): F0DX, F0DY
Energy Star MT: F0DX, F0DY

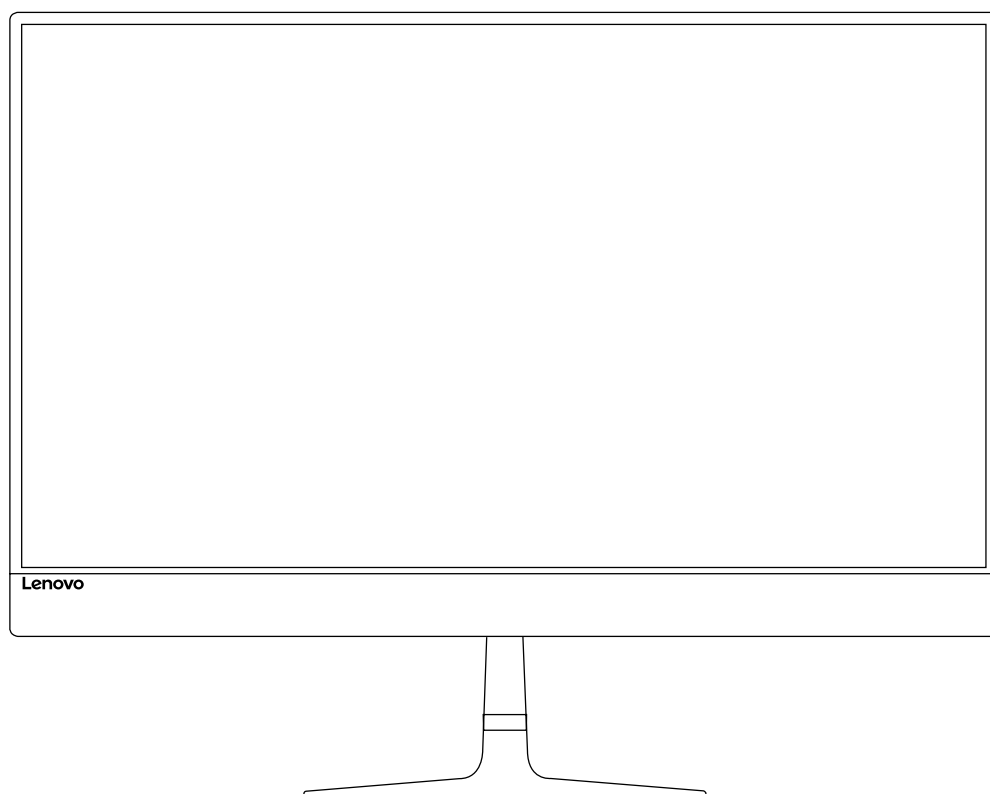


Front view of the computer

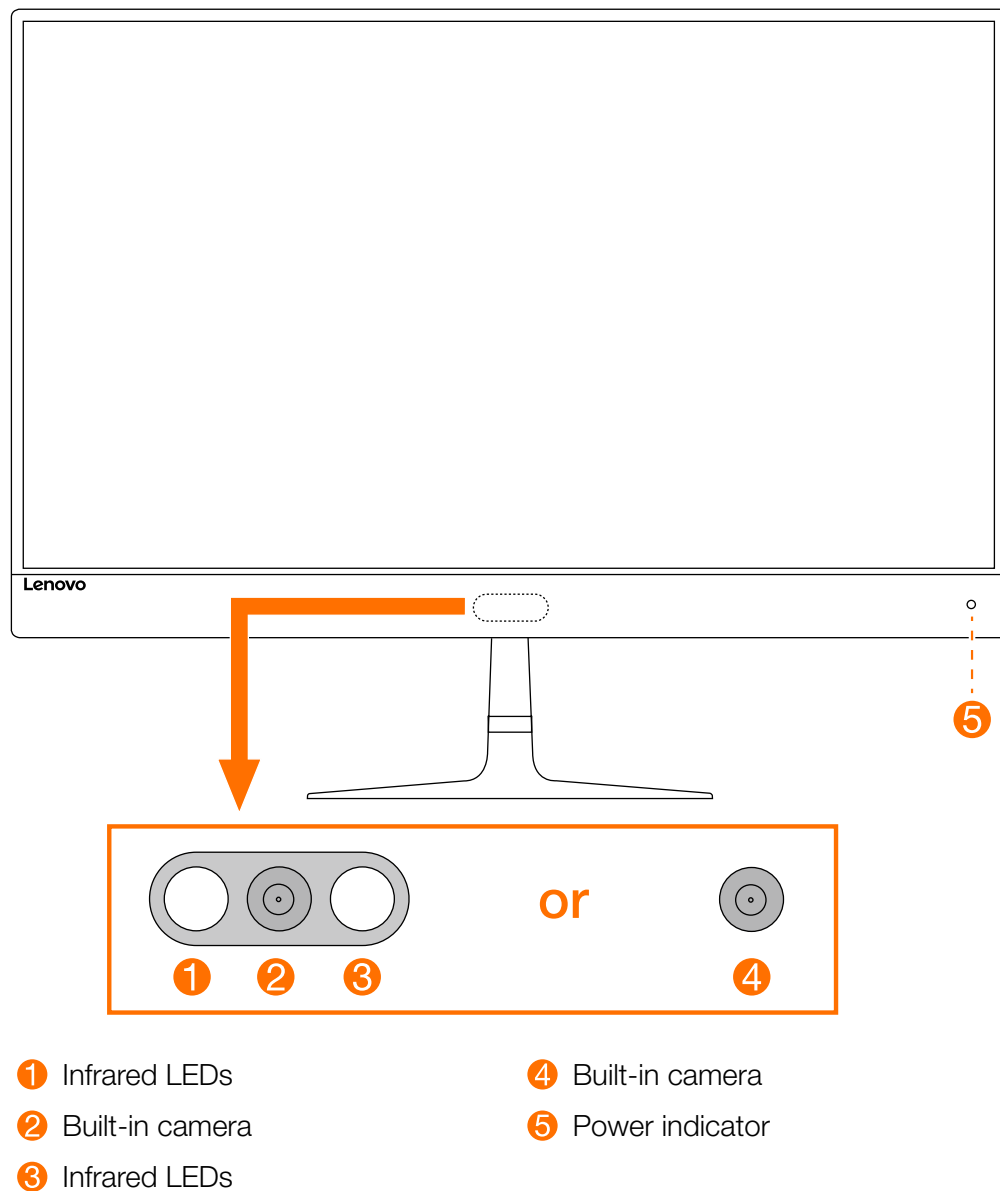

ATTENTION: Be sure not to block any air vents on the computer. Blocked air vents may cause thermal problems.

ATTENTION: If your computer is equipped with an infrared (IR) remote control, do not put the USB IR receiver on the same plane as the screen.

Bottom view of the computer

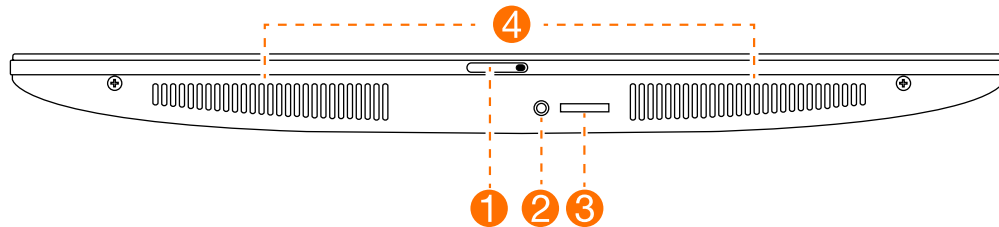

❶ Camera sliding cover

❸ Memory card reader

❷ Combo audio jack*


❹ Air vents

* Combo audio jack: Used to connect headsets.

NOTES:


- The combo audio jack does not support conventional microphones.
- Different industry standards may lead to the recording function not being supported if third-party headphones or headsets are connected.

Rear view of the computer

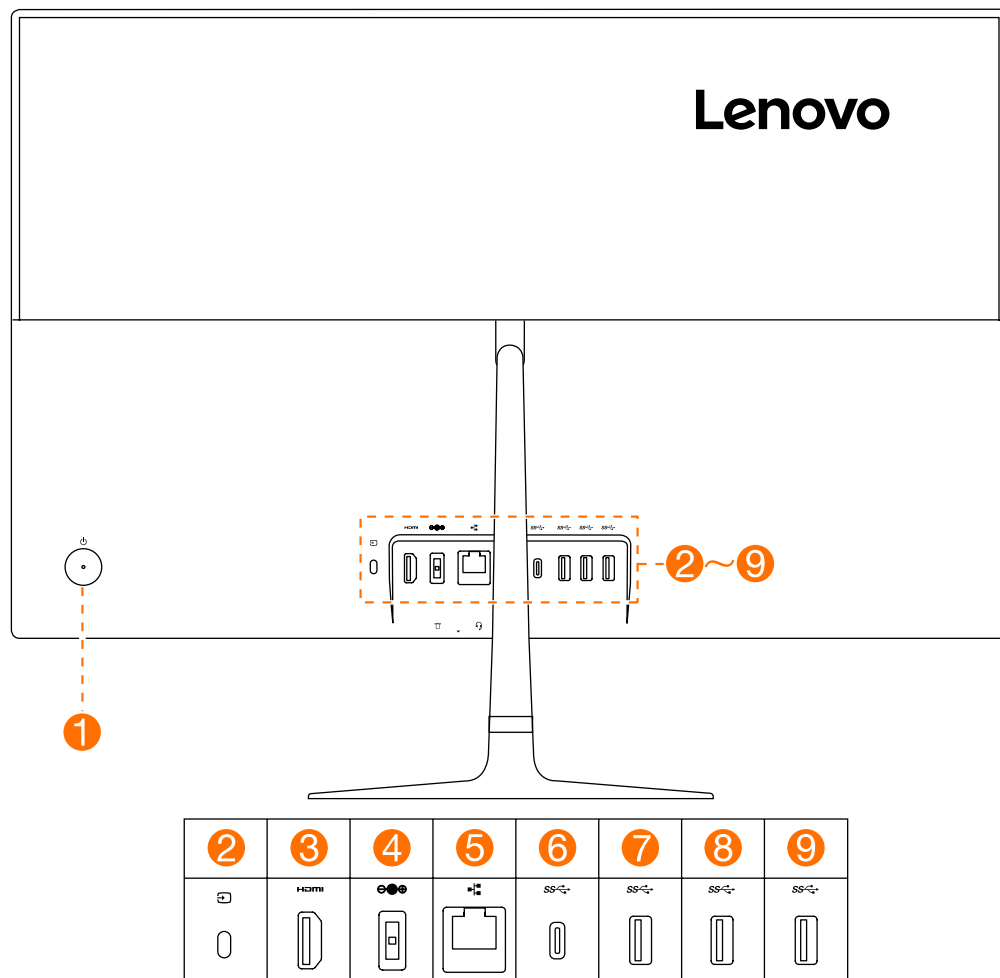


- ① Power button
- ② HDMI™ in/out switch
- ③ HDMI™ 1.4 in/out connector
- ④ Power connector
- ⑤ Ethernet connector
- ⑥ USB 3.1 Gen 1 Type-C connector
- ⑦ USB 3.0 connector
- ⑧ USB 3.0 connector
- ⑨ USB 3.0 connector

Adjusting the computer stand

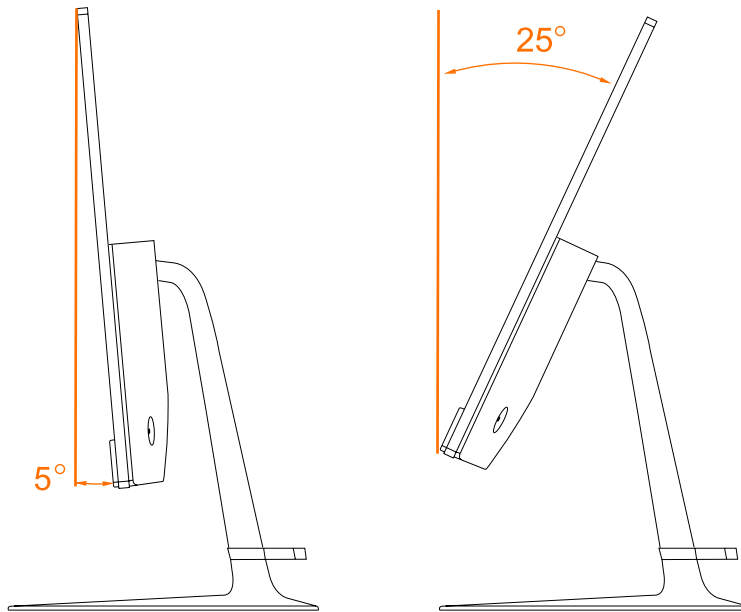

Carrying the computer

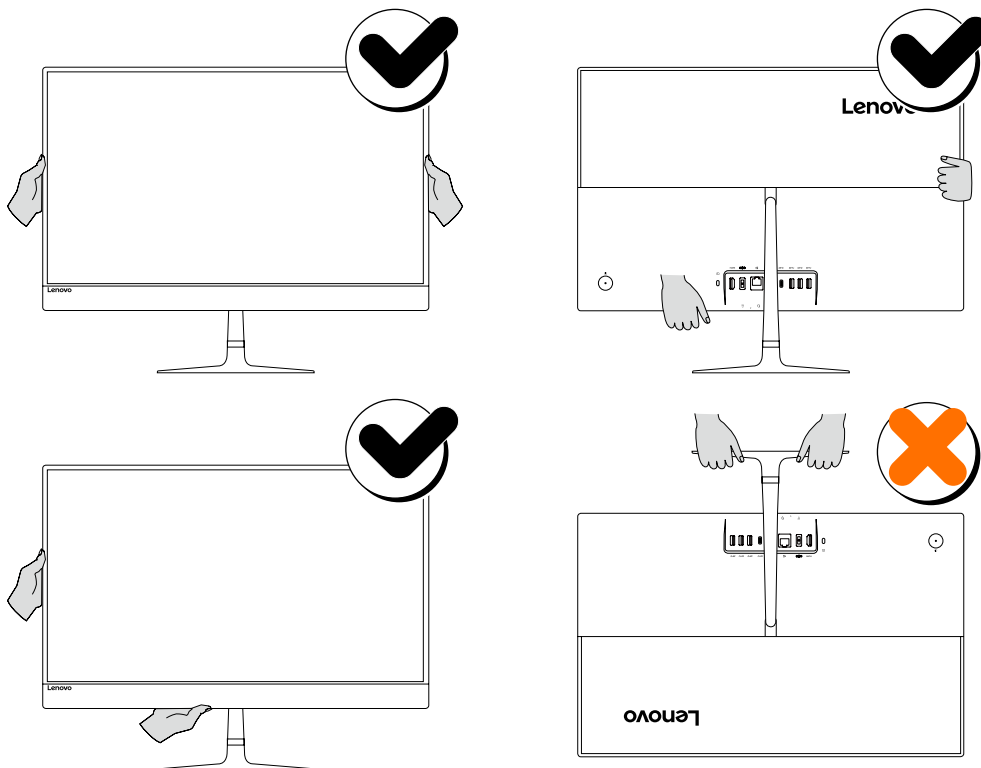

Safety information for replacing CRUs

Do not open your computer or attempt any repairs before reading the “Important safety information” in the *Safety, Warranty, Environment, Recycling Information Guide* and *Important Product Information Guide* that was included with your computer.

If you no longer have this copy of the *Safety, Warranty, Environment, Recycling Information Guide* and *Important Product Information Guide*, you can obtain one online from the website at <http://www.lenovo.com/UserManuals>.

Pre-disassembly instructions

Before proceeding with the disassembly procedure, make sure that you do the following:

1. Turn off the power to the system and all peripherals.
2. Unplug all power and signal cables from the computer.
3. Place the system on a flat, stable surface.

The CRUs for your computer include: keyboard, mouse, adapter or power cord.