



Index	Safety Precautions	Introduction	Setup	Using the Drive	Troubleshooting	Specifications
-------	--------------------	--------------	-------	-----------------	-----------------	----------------



Samsung's OMS (Optical Media Solution) Customer Support Website ([Http://samsung-odd.com](http://samsung-odd.com)) offers the latest versions of firmware for ODD products, user instructions and product information.

Select Model
SH-D163B(TS-H353B)

The Statement of Warranty

[Http://samsung.com](http://samsung.com)
[Http://samsung-odd.com](http://samsung-odd.com)

▶ Main Page

▶ Safety Precautions

- Notational
- Installation
- While Operating
- Other
- RoHS & WEEE

▶ Using the Drive

- Using the DVD-ROM Drive
- Storing and Cleaning Your Discs
- Upgrading the Firmware Flash Memory
- System Requirements

▶ Introduction

- Front
- Rear

▶ Troubleshooting

- Solving Technical Problems

▶ Setup

- Installing the DVD-ROM Drive
- Connecting the Cables
- Installing the Device Driver
- Setting Up the Device Driver

▶ Specifications

The following are basic precautions to ensure user safety and reduce the risk of property damage. Please read this carefully and follow the precautions at all times for proper use of the device.



Warning / Caution

- Warning** : This symbol indicates explanations about extremely dangerous matters.
If users ignore this symbol and handle the device the wrong way, serious injury or death could result.
- Caution** : This symbol indicates explanations about dangerous matters.
If users ignore this symbol and handle the device the wrong way, damage to home or property could result.

 
Notational

	Failure to follow directions noted by this symbol could result in bodily harm or damage to equipment.
	Prohibited
	Important to read and understand at all times
	Do not disassemble


■	Any change or modification not expressly approved by designated qualified personnel could void your authority to operate this device.
■ ■	Always make sure that the disc does not have a crack before use. If the disc has a crack (especially around the center hole), it is recommended to make a copy immediately and use the copy instead. When a cracked disc is used continuously, the size of the crack is likely to grow and this will eventually result in irreparable damage to the disc.
■ ■	Important to read and understand at all times.

When you install the drive


- Place the drive on a level surface.
- Failure to do so may cause the device to fall onto a hard surface, resulting in damage or malfunction.

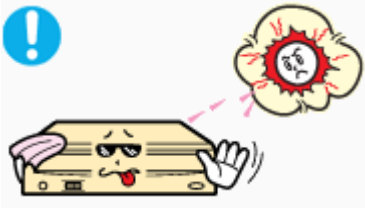

 
- Do not place the drive in direct sunlight.

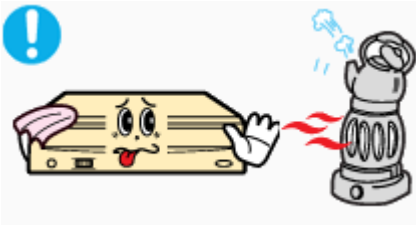

 
- Avoid low- or high-temperature environments.

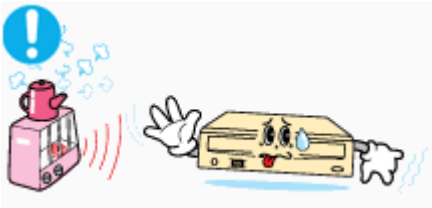


- Avoid high-humidity environments.

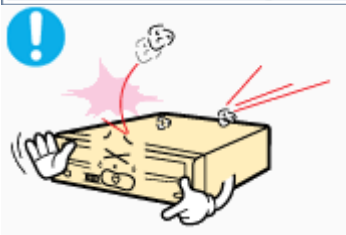 While Operating

 - ❖ Handle with caution to prevent damage from external shock.

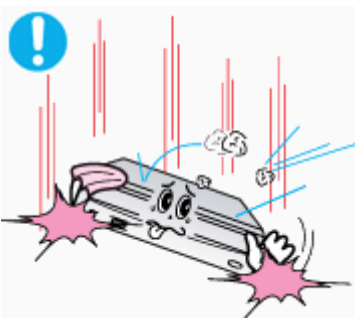

 - ❖ Do not drop the drive, and protect it from severe shocks.
 - It can damage the drive or cause it to malfunction.

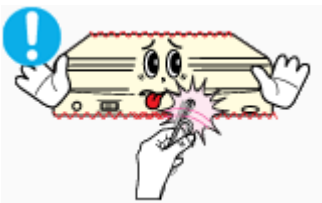

- ❖ Do not move the drive while in operation and do not attempt to open the disc tray by force.
 - Make sure to close all working programs before attempting to open the tray and always use the open/close button.
 - Do not insert a pin into the emergency opening while in operation.

 


- ❖ Do not use cracked, distorted or damaged discs.
 - In particular, a disc with a crack on the inner tracks may break while in use.


Other



- ❖ Never allow food particles or foreign substances to enter the drive casing.

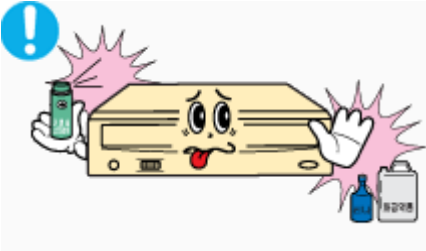

 - ❖ To protect against the risk of fire, do not spill such liquids as alcohol and benzene on the drive.

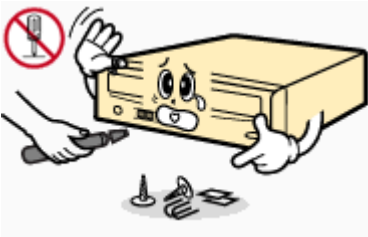

- ❖ Do not disassemble, attempt to repair or modify the device without express approval as directed in the manual.
- To reduce the risk of damage, electric shock, and fire,

**RoHS**

***Samsung Eco-mark
The Samsung's own Eco mark helps consumers to easily understand that Samsung develops eco-friendly products. This mark represents Samsung's continuous effort to develop eco-friendly products.***

RoHS (Restriction of the use of certain hazardous substances in electrical and electronic equipment)The RoHS, the environment regulation announced by European Union, restricts the use of lead, mercury, cadmium, hexavalent chromium, PBB, and PBDE in products put on the market in The European Union after July 1, 2006. .

WEEE***Correct Disposal of This Product (Waste Electrical & Electronic Equipment)***

(Applicable in the European Union and other European countries with separate collection systems)

 


This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.


Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



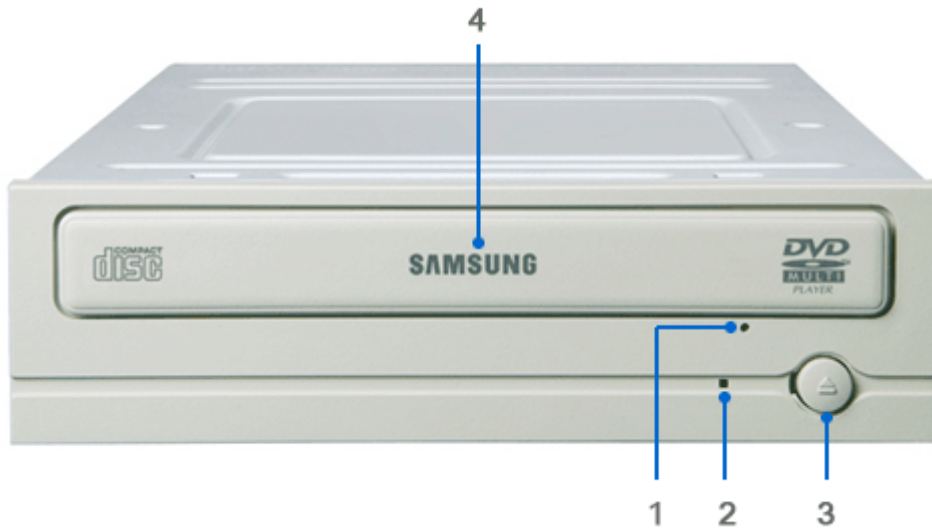

 1. Emergency eject hole. (if the compartment does not open when you press the Eject button, power off the computer, insert a pin or unfolded paper clip in the hole and push firmly)
2. Indicator Light. (When it is green, a disc is being read.)
3. Eject button.
4. Disc compartment. (the compartment opens and closes automatically when you press the Eject button)

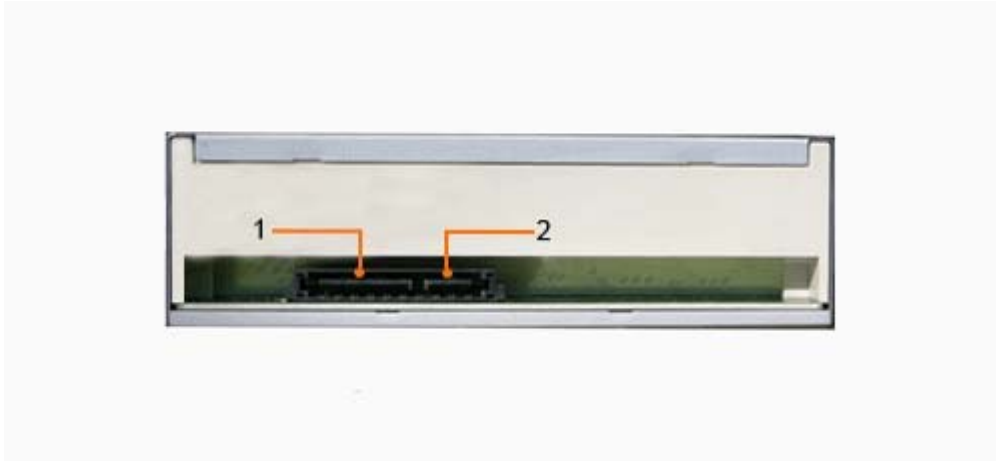

1. S-ATA Power Port

2. S-ATA Data Port



 
● Installing the DVD-ROM Drive

To install your DVD-ROM Drive in the PC, proceed as follows.




- 1.** Make sure that the PC is powered off and disconnected from any power source.
- 2.** If necessary, attach a horizontal bracket to both sides of the drive.
- 3.** Remove the cover from a free expansion slot and install the DVD-ROM drive, as shown in the illustration.

● Connecting the Cables

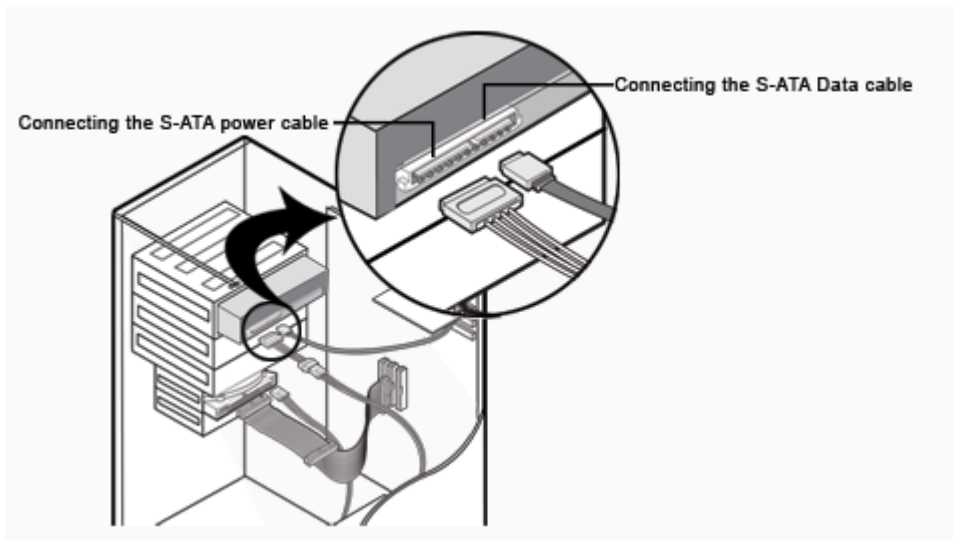

● Connecting S-ATA Cable

 
▶ When you use one S-ATA cable

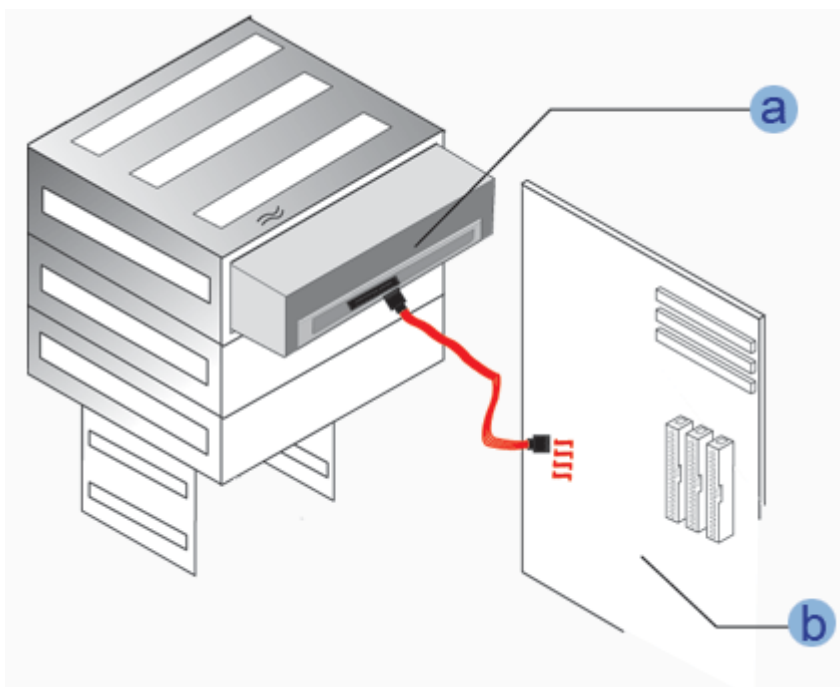

a : Drive

b : MotherBoard

 When you have one ODD and the other ODD products.

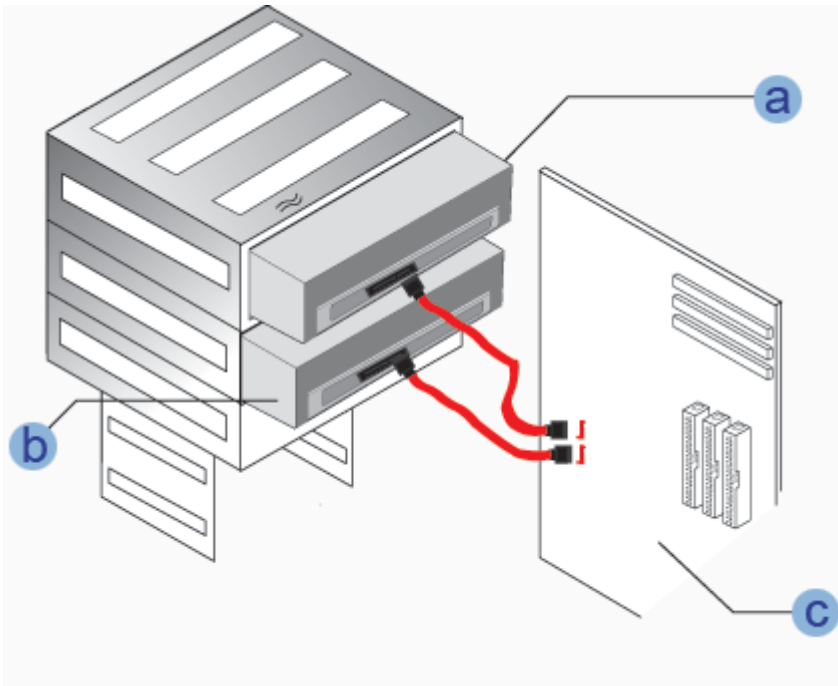

- a : Master Drive (S-ATA 1)
- b : Slave Drive (S-ATA 2)
- c : Motherboard





● Installing the Device Driver

This Device Driver is an installation driver that can detect ODD (Optical Disc Drive) products in DOS mode. It provides only the reading function in Dos mode.
(For recording, it is recommend not to install the Device Driver designed for DOS mode)

The Device Driver for DOS mode is included in the Ddriver or DOS Driver folder of the disc enclosed with the product that you purchased.



For Windows2000/XP/Vista or higher version that uses a device driver provided by Windows, there is no need to set up an extra device driver.

Refer to the steps below to see if Windows detects the drive.

- 1.** Double-click on the **My Computer** icon on your desktop.
- 2.** Double-click on the **Control Panel** folder.
- 3.** Double-click on the **System** icon.
- 4.** Click on the Device **Manager** tab.
- 5.** Expand the CD-ROM branch.
The **Installing the Device Driver** device name is displayed.

● Setting Up the Device Driver



The device driver is located in the Ddriver folder of the User's Guide disc with is provided in the package.



This device driver is to recognize a DVD-ROM drive on Dos mode.



This driver should be applied for DOS mode user to install on Windows 98 or Windows ME only.



Automatic Setup

1. Insert the **User's Guide** disc into the CD-ROM drive and open the **Ddriver** folder.
2. Run the **CDSETUP.EXE** file in the **Ddriver** folder.
3. When Setup is successfully completed, click **OK** button or press the **Enter** key.
4. Reboot the computer.



Manual Setup

1. Make the **C:\SAMSUNG** directory.
2. Copy the files from the User's Guide disc to the **C:\SAMSUNG** directory.
To do so, type **COPY D:\Ddriver * . * C:\SAMSUNG** after the **C:\prompt** and press **[Enter]**.
3. Edit the **CONFIG.SYS** file.
Add the **DEVICE=C:\SAMSUNG\SSCDROM\SYS\D:SSCD000\V** entry.

```
LAST DRIVE = Z
.....
DEVICE = C:\SAMSUNG\SSCDROM\SYS\D:SSCD000\V
```

4. Edit the **AUTOEXEC.BAT** file.
Add the **C:\SAMSUNG\MSCDEX\D:SSCD000** entry.

```
.....
.....
C:\SAMSUNG\MSCDEX\D:SSCD000
```

5. Reboot the computer.



● Using the DVD-ROM Drive

To play audio or video CDs and / or DVDs in your DVD-ROM drive, proceed as follows.



1. Push the power button and boot the computer.
2. After booting the computer, open the disc compartment by pressing the Eject button.
3. Insert the disc (CD/DVD) with the label on the disc facing upwards and close the disc compartment by pressing the Eject button. The indicator light comes on.
4. Play the disc (CD/DVD).
5. Accessories
 - The type of accessories varies depending on product model.



Application software & User manual CD



Setup guide



Four screws to install the drive

Playing Video CDs

Set up and run the SOFT MPEG program.



Design and specifications are subject to change without prior notice.



● Storing and Cleaning Your Discs

To ensure a long service life for your discs and drive, follow the pre-cautions below when storing and cleaning your discs.



- 1.** Do not place a disc in direct sunlight.
- 2.** Store a disc vertically in a well-ventilated and stable location.
- 3.** Do not write or attach a label on a disc.
- 4.** Do not drop a disc or place heavy objects on it.
- 5.** Do not touch the surface of a disc; hold it by the edges.
- 6.** To clean a disc, polish lightly from the inside of the disc to the outside with a soft cotton cloth.
- 7.** Do not leave the disc compartment open when you are not using it.



Select Languages

Select Model

English



SH-D163B(TS-H353B)



● Upgrading the Firmware Flash Memory

The product firmware can be upgraded by downloading the updated file from the following Web site:

<http://samsung-ODD.com>

[Http://samsung.com](http://samsung.com)

System Requirements

Before you install the DVD-ROM drive, we strongly recommend that you check that your setup meets the system requirements listed below.

Item	Description
OS	Microsoft Windows 2000/XP/ Vista
CPU	S-ATA supported PC (The compatible motherboard list can be found from the website)
RAM	256Mbytes or above

DVD Region Protection Coding (RPC):

The RPC feature is supported on DVD players and is used with DVD-video discs (such as movies). Currently, the motion picture industry has divided the world into different regions or zones that correspond to the regional markets into which the motion picture industry releases movies. Simply put, RPC codes are placed on movies marketed throughout the world, based on the region of the world in which they are being sold. These RPC codes help control and prevent pirating of new movies into other motion picture regions prior to their true release dates within those markets.

The DVD-ROM drive supports RPC phase II. In the RPC-2 mode, the local code can be changed by users.

RPC-2 is selected by default for the DVD-ROM drive.

You can change the region code up to five times via an MPEG application.

Please contact your dealer or local SAMSUNG representative if you wish to change the local code more than five times.



Problem	Meaning / Solution
The DVD-ROM drive is not detected by the computer.	Check that the power and S-ATA cables are correctly connected to the computer.
After installing the DVD-ROM drive, the PC gets slower.	Change the S-ATA cable and reconnect it to the computer. Preferably, connect a second S-ATA cable to the DVD-ROM drive.
The DVD-ROM drive is not recognized by MS-DOS.	Reinstall the device driver or update it with the latest version by downloading it from the Samsung Web site. - Http://samsung-ODD.com - Http://samsung.com
The DVD-ROM drive is not detected by Windows.	This case may occur when there is a Windows installation problem; reinstall Windows.
No sound is heard from an audio CD.	Check that the sound card is operational.
	Adjust the volume control of windows.
A CD is not read or is read too slowly.	Check whether the CD is of good quality and clean it, if necessary.
The disc compartment will not open.	Check that the power cable is correctly connected.
	Power off and disconnect the PC. Insert a pin or unfolded paper clip in the emergency hole and push firmly until the disc compartment opens.
When the MPEG software plays a Video CD, the pictures are not regular and the running speed is too slow.	Adjust the size of the replay screen.
	After checking the display resolution, adjust it, if necessary.
The Disc is not in message is displayed even though a disc has been inserted.	The computer may not recognize the disc if you start playback too quickly after inserting the disc. Open and close the disc compartment and try again.
	Clean the disc and try again.
The DVD-ROM drive is not detected after it is connected to a sound card.	The interface mode of the sound card is AT-BUS. You must therefore connect the DVD-ROM drive to the S-ATA port on the PC mother board, rather than to the sound card, or install an S-ATA compatible sound card.



SAMSUNG continually strives to improve its products. Both the design specifications and these user instructions are thus subject to change without notice.

● Technical Specifications

ITEM

Model Name SH-D163B(TS-H353B)

ITEM DVD | CD

Disc

Disc types supported in read mode CD-DA(Audio), CD-ROM, CD-R, CD-RW, Photo-CD(Single, Multi-session), Video CD ready, Enhanced CD, CD-I/FMV, CD-TEXT, CD-Plus, DVD-ROM, DVD-VIDEO, DVD+R, DVD-R, DVD+RW, DVD-RW, DVD-RAM, DVD±R DUAL

Disc diameter 120mm or 80mm

DRIVE PERFORMANCE

Data transfer rate

Sustained : Max. 21,600KB/sec(16X) | Max. 7,200KB/sec (48X)

ACCESS TIME (typical) 110ms

Data Buffer capacity 198KB

Laser Semiconductor laser

Slide mechanism Stepping motor, Sensorless

Spindle motor Brushless motor

Load mechanism Tray. DC motor (Soft Eject). Horizontal/Vertical.

ERROR RATE

ERROR RATE 10^{-15} | Mode 1: 10^{-12} , Mode 2: 10^{-9}

FRONT PANEL

Eject button Auto eject or Auto inject

Indicator(LED) BUSY

REAR PANEL

Required power 1.5A (rms)

Interface connector S-ATA

OPERATING ENVIRONMENT

Operations Temperature: 5~45°C Humidity: 10~80%

Storage Temperature: -25~60°C Humidity: 10~90%

GENERAL

Dimensions 148.2 (W) x 42 (H) x 170 (D) mm (including bezel)

Net weight 740 g