





### 反面

### Notices:

Before using this product, please read carefully this operation manual and keep it for future reference.

- Before connecting the power cord, check if the voltage indicated on the product matches the local voltage.
- If the plug, power cord or any part is damaged, please contact the manufacturer to replace it and do not use the product before repair.
- During operation, keep children and pets away to avoid contact with the product.
- Do not use the product to remove corrosive liquid or hot ash.
- Do not immerse the vacuum cleaner or AC adapter in water.

#### Charge before use (together with the batteries and AC adapter)

- Before first use of the product, charge the batteries for at least 8 (eight) hours.
- Make sure the power switch is set to the "OFF" position.
- Connect the adapter cord to the power connector of the vacuum cleaner.
- Connect the plug of the adapter to a wall socket.
- The charging indicator lights in orange while charging, and turns green when the battery is fully charged.

### 2 Usage

- Check if the dust filter is installed before using the product.
- If the battery is not installed, connect the car cigarette lighter cord instead, and turn on the power switch to begin vacuuming.
- For the best cleaning result, different brushes or any nozzle can be attached depending on the places to be vacuumed.
- Push the power switch to begin vacuum cleaning.
- After vacuuming, push the power switch to the "OFF" position and the vacuum cleaner will stop.

Do not cover or block the ventilation hole during operation.

Do not use the vacuum cleaner during charging in order to avoid any danger.

# 3 Cleaning and maintenance

- Remove the supplied brush and any nozzle if attached.
- Put vacuum cleaner on a trashcan, and then push the dustbin detaching button to remove the dustbin from the cleaner.(As shown in the figure.)



- Empty the debris into the trash can.
- Clean the dustbin with a wet cloth if necessary. If the dust filter is extremely dirty, use a soft brush or water to clean. Make sure to dry the filter before use.





# 4 Storage

- After the car is vacuumed, be sure to unplug the car cigarette lighter cord, and pack it proper ly with other accessories in the packing box. Store the box at a place in the car without direct sunlight.
- After the house is vacuumed, pack the vacuum cleaner and accessories inside the packing box and store the box at where children cannot reach in order to avoid any danger.

### 5 Install Battery

Open the battery cover→Connect the battery to the product
→Tidy up the extra cable and settle it in the side space→
Place the battery in the box→Close the battery cover





## **Specifications**

Power rating	24W
Noise	70dB
Vacuum Degree	3KPa
Dustbin capacity	0.5 liter
Operation time	30 minutes
Battery	1100mAh Li-polymer Battery
Car Charger Cable	3 meters
Dimensions	368x123x120mm
AC Adapter	Input: 100-240V~50/60Hz
	Output: 15V/400mA

### 7 Warranty

- 1. Under normal use, 1 (one) year warranty is provided for the main unit of this product from the date of purchase, and a 6 (six) month warranty is provided for the battery.
- 2. This warranty service is only provided in the area where you purchased the product.
- 3. Consumable accessories such as brushes, nozzles and filters are not covered by this warranty.

# If product malfunction is caused by any following reasons, the repair cost should be paid by the customer:

- 1. The original warranty seal or barcode sticker is damaged, tampered, dirty or changed.
- 2. Malfunction or damage due to the use of parts not manufactured or sold by the manufacturer.
- 3. Any need for repair due to improper use or customer's attempt to disassemble the product.
- 4. Any malfunction caused by force majeure, non-resistible forces, human operation or improper use rather than inherent design of the product.