

# Saturn®

ST-VC027**4**

VACUUM CLEANER



2

GB

## VACUUM CLEANER

Dear Buyer!

We congratulate you on having bought the device under trade name "Saturn". We are sure that our devices will become essential and reliable assistance in your housekeeping.

Avoid extreme temperature changes. Rapid temperature change (e.g. when the unit is moved from freezing temperature to a warm room) may cause condensation inside the unit and a malfunction when it is switched on. In this case leave the unit at room temperature for at least 1.5 hours before switching it on.

If the unit has been in transit, leave it indoors for at least 1.5 hours before starting operation.

## INTENDED USAGE

The cyclonic vacuum cleaner is intended for use in private households. It is not intended for use in commercial or industrial environments and is not suitable for use outdoors.

Service life – 4 years.

## SAFETY INSTRUCTIONS



Risk of electrical shocks

- Connect the appliance to a mains power socket delivering a voltage of 240V ~ 50 Hz.
- Power consumption: 2400W Max.
- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians.
- Ensure that the power cable never becomes wet or moist during operation.
- Not suitable for use outdoors or on wet surfaces.
- Never submerge the appliance or the power cable in water, and do not clean these components under running water.
- Do not use any accessories that are not recommended by the manufacturer. They could constitute a danger to user and damage to the appliance.
- Do not operate the appliance if it has sustained a fall or is damaged. Arrange for the appliance to be checked and, if necessary, repaired by qualified technicians.



Risk of personal injury

- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance unattended when in use.
- Unplug from outlet when not in use, and retract the cable and store the appliance in such a way as to prevent yourself or others from falling over the hose/ cord.

Normal use of the apparatus

- Do not operate with wet or damp hands. Make sure that no liquid gets into the motor section.
- Never leave unattended when in use, and keep an eye on children.
- Remove the plug from the socket before removing the lid from the appliance, before cleaning or when not in use.
- Do not pull or carry on cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use with any opening blocked. Keep free of dust, lint, hair and anything that may reduce airflow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Turn all controls off before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up liquids.
- Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
- Unplug before connecting the hose.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filter in place.

Cord, plug and mains socket

- Connect the appliance to a mains power socket delivering a voltage of 240V ~ 50 Hz.
- Ensure that the cord is fully extended.


3

- Check regularly that neither cord nor plug is damaged and do not use if they are, or if the appliance has been dropped or damaged in any other way.
- If the apparatus or plug is damaged, it must be inspected and if necessary, repaired by an authorized repair engineer, otherwise there is a risk of electric shock. Never try to repair the appliance yourself.

- Avoid pulling the cord when removing the plug from the socket. Instead, hold the plug.


### Know Your Appliance

1. Floor Nozzle	8. Suction Hose Connection
2. Telescopic Tube	9. ON/OFF Button
3. Parking Fixture	10. Release Button
4. Storage lip	11. Cord Rewind Button
5. Air Slide	12. Power adjustment button
6. Suction Hose	13. Crevice Nozzle
7. Carrying Handle	14. Furniture Nozzle

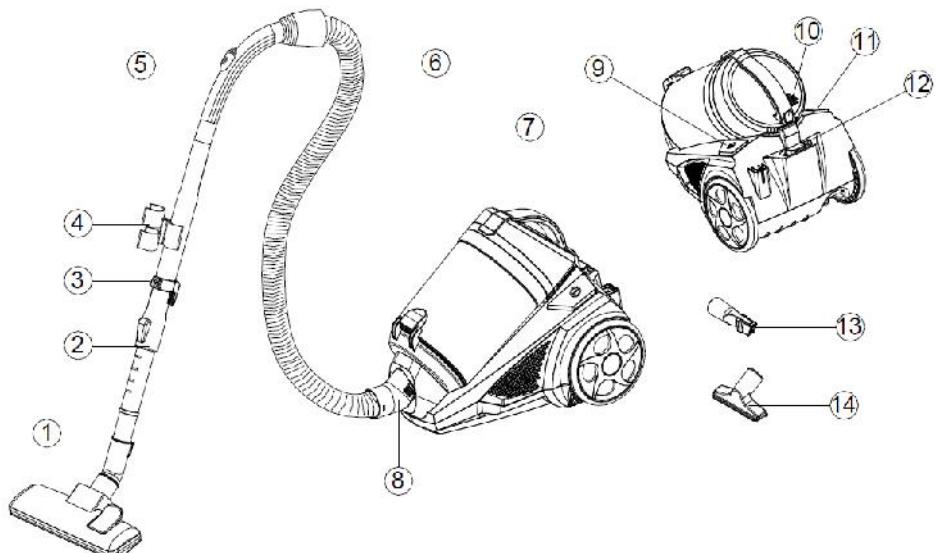


### Assembling the cyclonic vacuum cleaner

- Fit the hose on the vacuum cleaner by inserting the rotating hose connection into the vacuum cleaner until you hear a click. To remove the hose, press the button at the side of the hose connection and then pull it out.

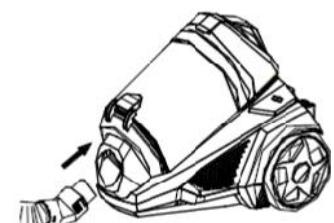

- Fit the telescopic tube into the other end of the hose.

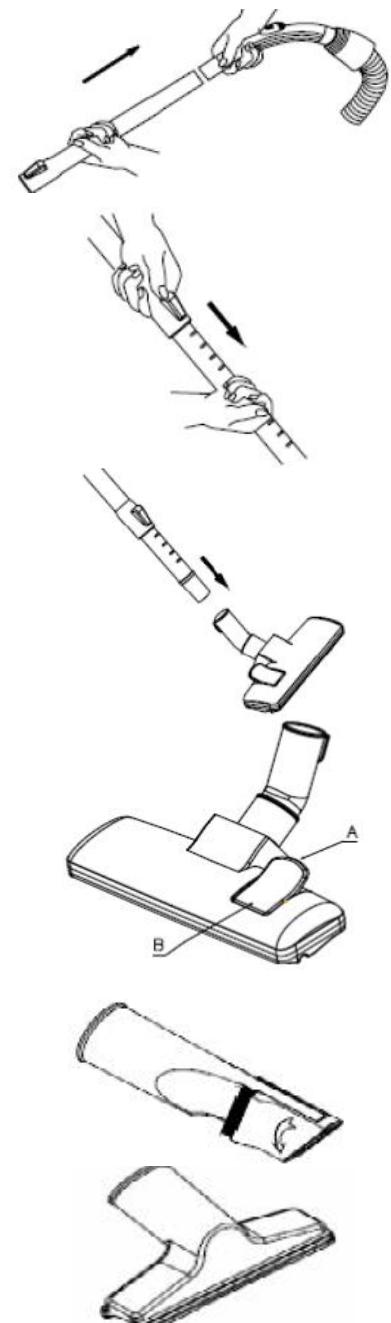

- Adjust the length of the telescopic tube by pushing the locking mechanism down and pulling in the bottom section of the tube to a suitable length. When parking, shorten the tube as far as possible.

- Fit the floor brush into the telescope tube.

### Floor Nozzle

The floor nozzle has two settings. When cleaning hard surfaces (parquet flooring, flooring tiles, etc.), the nozzle brushes should be extended. When cleaning carpets and mats, the brushes should be retracted into the nozzle. Press the brush change button to switch between the two settings.

### Joint nozzle

For radiators, corners, skirting boards, etc.

### Furniture nozzle

For furniture, curtains, drapes, etc.

## Using the vacuum cleaner

Before using the device, first roll out a sufficient length of electric flex cable and then plug the cleaner into the mains socket.

The yellow mark on the electric cable is the maximum length, this must not be exceeded.


To switch on the device, press the foot pedal button on the casing with your foot.

To rewind the power cable, press the button with one hand and guide the cable with the other hand to ensure that it does not whip causing damage.


### Emptying dust container

Empty the dust container regularly, at the latest when the quantity of dirt in the dust container has reached the "MAX" mark or the suction power has dropped.

• Switch off the vacuum cleaner and disconnect the plug from the mains. To do this, always pull on the plug and not on the cable.

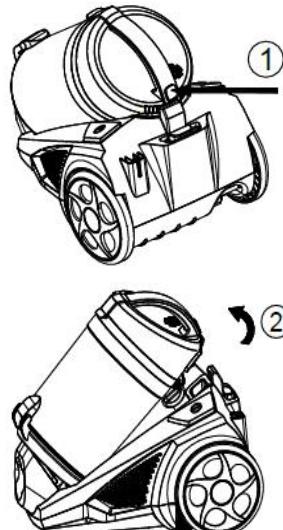

• Release the dust container by pressing down the release button (1).  
• Lift the dust container forwards out of the cylinder vacuum cleaner (2).

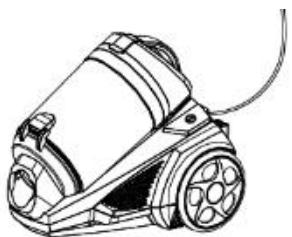

- When emptying the dust container, hold it low over a dustbin.
- Press the open button. The base opens and the dust runs into the dustbin (3).




- Carefully knock the remaining dust loose.
- Close the base.
- Place the dust container onto the cylinder vacuum cleaner.
- Check whether the dust container is securely seated.


### Cleaning the motor filter

- Turn off and unplug cleaner.
- Remove the dust container.
- Open the dust container cover and take the filter out.
- Hold the protective motor filter over a dustbin. For a rough clean, gently knock over a dustbin.
- Insert the dry protective motor filter back into its holder.

- Place protective motor filter together back into its receptacle.
  - Replace the filter cover by hooking it precisely from above first, and then engage the lock by pressing it until audibly clicks into place.
  - Place the dust container onto the cylinder vacuum cleaner.
  - Check whether the dust container is securely seated.
- Important!** Never use the vacuum cleaner without a motor filter.

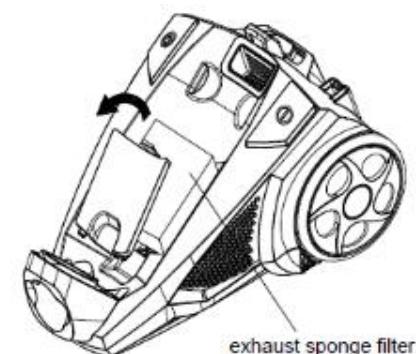

- Rinse the sponge filter under cold running water and allow dry.

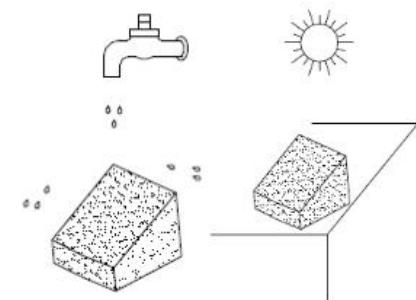

- Put the exhaust air filter back into place.
- Close the exhaust sponge cover.

## TRANSPORT AND STORAGE

• You can lift and carry the vacuum cleaner using the carrying handle. Never pull or lift the vacuum cleaner by the cord.

• Before putting the vacuum away, rewind the cord. Switch off the socket, unplug, and press the cord rewind button until the cord is fully rewound.

• To save space, the vacuum can be stored upright on its end cover. The telescopic tube can be hung on the vacuum cleaner by inserting the parking fixture into the vertical parking holder.

## CLEANING

• Unplug the vacuum cleaner from the mains.

• Clean the vacuum cleaner body by wiping it with a slightly damp cloth.

• You must not use any form of strong solvent or abrasive cleaning agent.

• Wait until dry before next use.

Never wash the appliance or power cord; the housing may be cleaned by means of a slightly dampened cloth only.

#### SPECIFICATIONS

Power: 1600 W  
Rated voltage: 220-240 V  
Rated frequency: 50 Hz  
Rated current: 7.2 A

- 4

#### SET

VACUUM CLEANER 1  
INSTRUCTION MANUAL 1  
WITH WARRANTY BOOK 1  
PACKAGE 1

240 ~ 50

#### ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.

The manufacturer reserves the right to change the specification and design of goods.

RU

"Saturn".

)

1,5


1,5





240 ~ 50


2400



- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 11.
- 12.
- 13.
- 14.

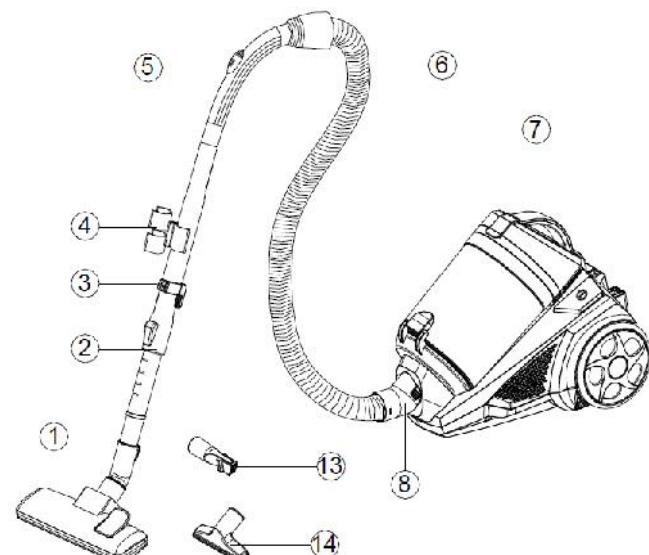

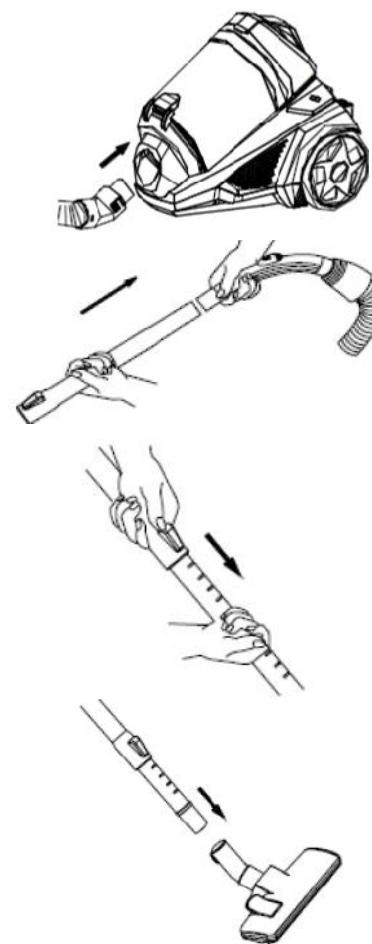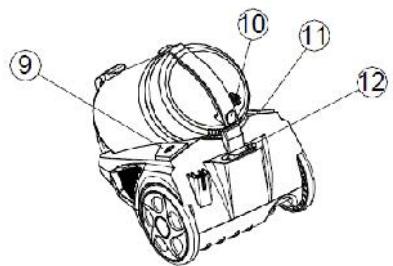

"MAX"

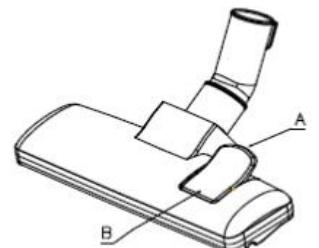


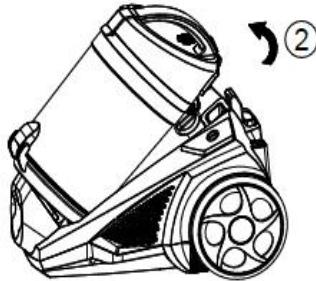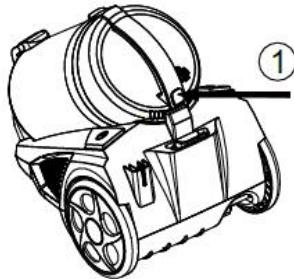

(1).


(2).

(3).

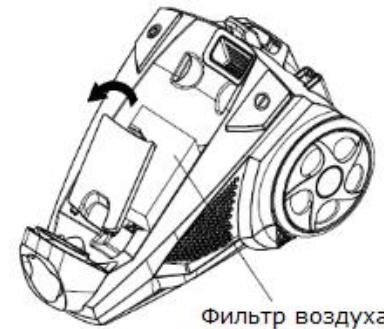

1600  
220-240  
50  
7,2

1  
1  
1

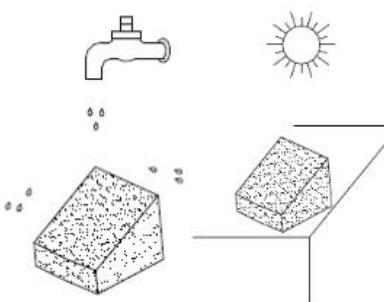

U

"Saturn".



50  
2400




- 4


240

1,5


1,5

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 11.
- 12.
- 13.
- 14.

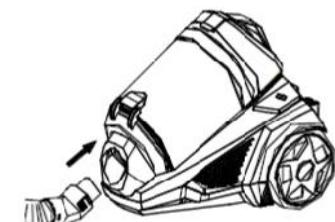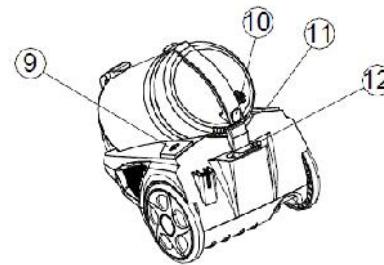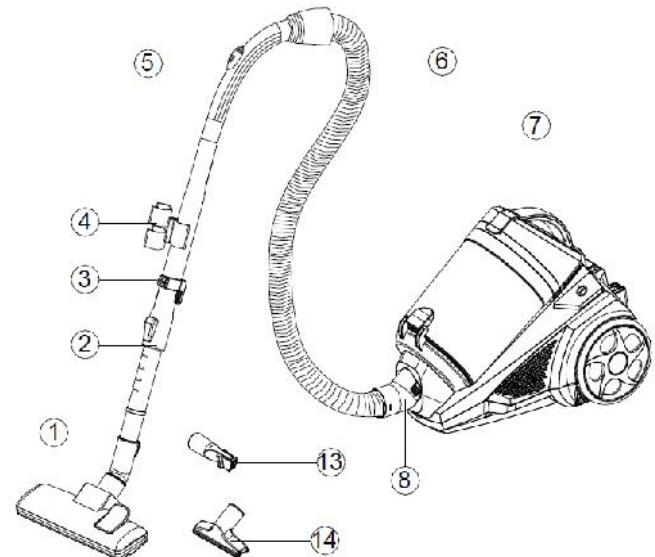


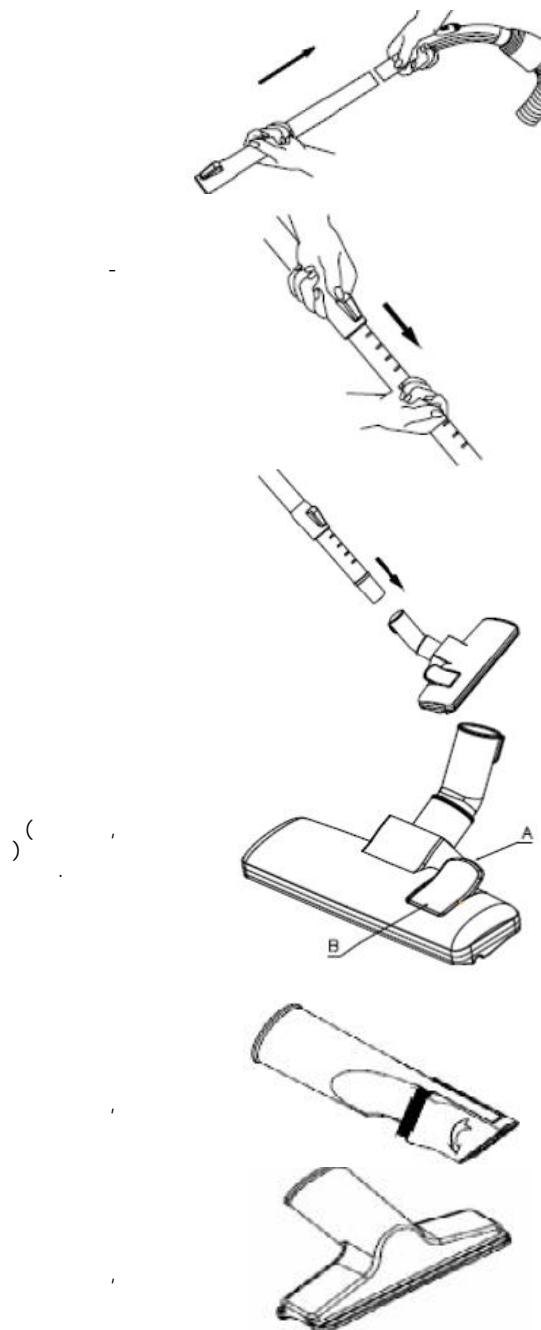

16

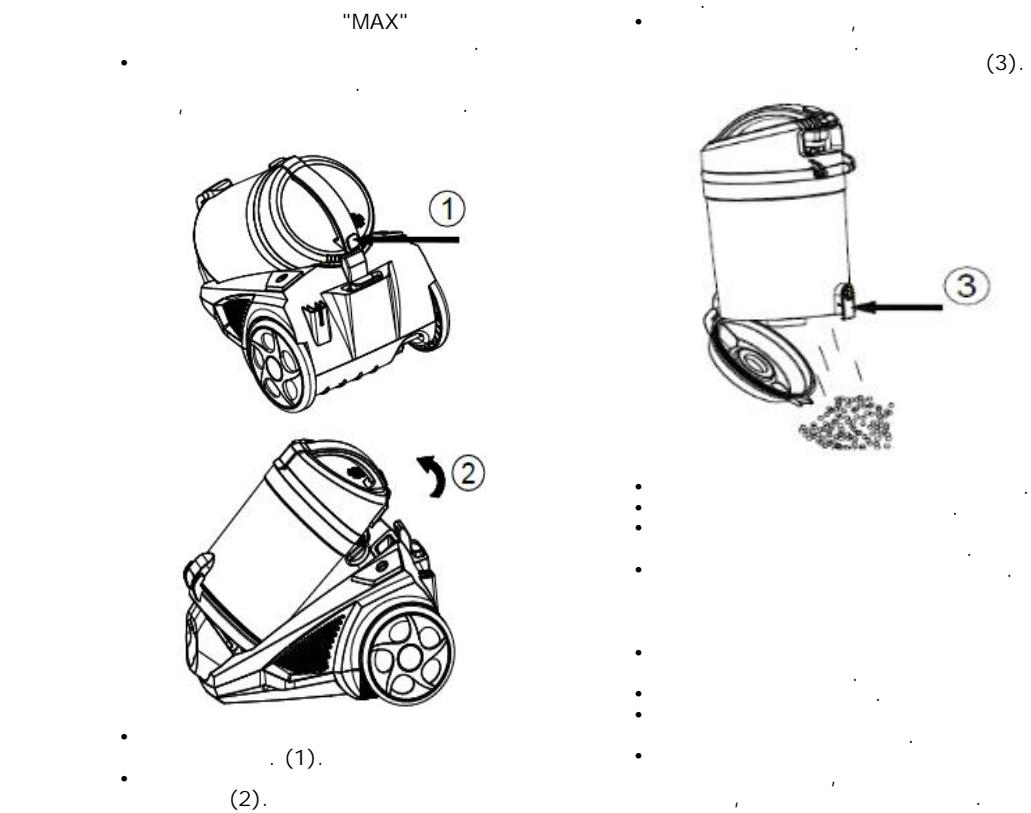


17

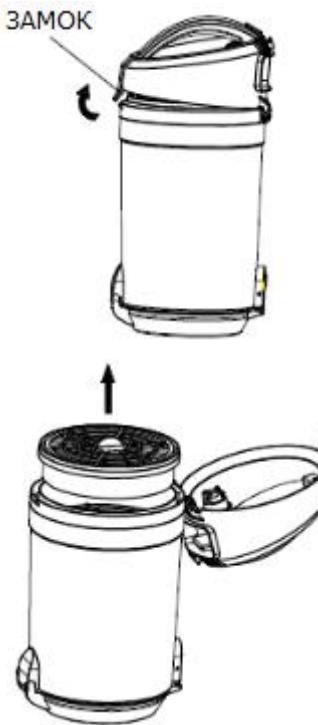

1600  
220-240  
50  
7,2

1  
1  
1

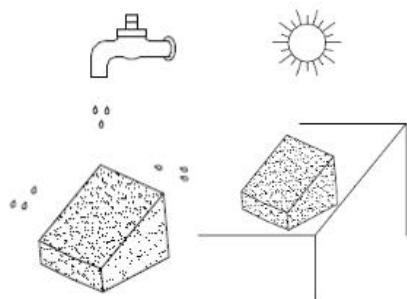



## INTERNATIONAL MANUFACTURER'S WARRANTY

,

## MEZINÁRODNÍ ZÁRUKA

GB

### INTERNATIONAL MANUFACTURER'S WARRANTY

The Warranty is provided for the period of 2 years or more if the Law on User Right of the country where the appliance was bought provides for a greater minimum warranty period.

All terms of warranty comply with to the Law on Protection of the Consumer Rights and are governed by the legislation of the country where the product was bought.

The warranty and free of charge repair are provided in any country where the product is delivered to by Saturn Home Appliances or authorized representative thereof, and where no restriction of import or other legal provisions interfere with rendering of warranty services and free of charge repair.

Cases uncovered by the warranty and free of charge repair:

1. Guarantee coupon is filled in improperly.
2. The product has become inoperable because of the Buyer's nonobservance of the service regulations indicated in the instruction.
3. The product was used for professional, commercial or industrial purposes (except for the models, specially intended for this purpose that is indicated in the instruction).
4. The product has external mechanical damage or damage caused by penetration of the liquid inside, dust, insects and other foreign objects.
5. The product has damages caused by non-observance of the rules of power supply from batteries, mains or accumulators.
6. The product was exposed to opening, repair or modification of design by the persons, unauthorized to repair; independent cleaning of internal mechanisms etc. was made.
7. The product has natural wear of parts with limited service life, expendables etc.
8. The product has deposits of scale inside or outside of fire-bar elements, irrespective of used water quality.
9. The product has damages caused by effect of high (low) temperatures or fire on non-heat resistant parts of the product.
10. The product has damages of accessories and nozzles which are included into the complete set of product shipment (filters, grids, bags, flasks, cups, covers, knifes, sealing rings, graters, disks, plates, tubes, hoses, brushes, and also power cords, headphone cords etc.).
11. A defect was a result of inappropriate installing of the appliance by non-specialists of the supplier's authorized service center.

On the warranty service and repair, please contact the authorized service centers of "Saturn Home Appliances".

## MEZI NÁRODNÍ ZÁRUKA

Záruka se poskytuje na dobu 2 roky. V případě že Zákon na ochranu spotrebitele dané země na izuje delší dobu, prodlužuje se záruka na tuto dobu.

Veškeré záruční podmínky odpovídají Zákonu o ochraně práv uživatelů a jsou ízené zákonodárstvím státu, kde byl výrobek koupen.

Záruka a bezplatná oprava se poskytují v každém státě, kam jsou výrobky dodány společností „Saturn Home Appliances“ nebo jejím plnomocným zástupcem a kde nejsou žádná omezení na dovoz nebo jiné právní předpisy omezující poskytnutí záručního servisu a bezplatné opravy.

Případy, na které se záruka a bezplatná oprava nevztahují

1. Záruční list je vyplňen nesprávně.
2. Výrobek byl poškozen kvůli tomu, že zákazník nesplnil pravidla použití, která jsou uvedena v návodu.
3. Výrobek byl používán k profesionálním, komerčním nebo přemyslovým cílům (krom modelů speciálně určených pro tyto cíle, což je uvedeno v návodu).
4. Výrobek má vnitřní mechanická poškození nebo poškození, vyvolaná tím, že se dovnitř dostala tekutina, prach, hmyz a jiné cizí předměty.
5. Výrobek má poškození, která jsou vyvolaná nesplněním pravidel napájení od baterií, sítě nebo akumulátoru.
6. Výrobek rozebírali, opravovali nebo měnili jeho konstrukci lidé, kteří nebyli plnomocni k opravám, bylo provedeno samostatně ištění vnitřních mechanismů a podobně.
7. Výrobek má půrodené opotřebování a omezenou dobou použití, spotřební materiál atd.
8. Výrobek má vrstvu usazeniny uvnitř nebo zvenku termoelektrických ohřívačů, bez ohledu na kvalitu používané vody.
9. Výrobek má poškození, která jsou vyvolaná přesobením vysokých (nízkých) teplot nebo ohně na termoneustabilní části výrobku.
10. Výrobek má poškozené příslušenství a nástavce, které jsou dodány spolu s výrobkem (filtry, sítky, sádky, baňky, mísy, víka, nože, šlehače, struhadla, kotouče, talíře, trubky, hadice, kartáče a také sírové šíry, sluchátkové šíry atd.).
11. Vada je důsledkem nesprávné instalace výrobku neoprávněnou osobou.

V otázkách záručního servisu a oprav se obracejte na autorizovaná servisní střediska společnosti „Saturn Home Appliances“.

2

«Saturn Home Appliances»

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 11.

«Saturn Home Appliances».

: <http://saturn.ua/ru/servis>,  
 : 0-800 505-27-09

				LCD		
,	4	« C »	8 (988) 993-37-78	+	+	+
,	18		8 (8553) 32-22-11 8 (960) 047-22-11	+	+	+
,	98	« »	8 (86133) 6-09-84, 8(918) 215-57-75	+	+	+
,	109		8 (86152) 2-81-99	+	+	+
.	12	« -29»	8 (8182) 44-15-55	+		
,	47	« »	8 (8512) 25-19-39, 8 (8512) 25-12-00	+	+	+
,	54	" "	8 (8512) 50-19-97	+		
2	16, 7	« »	8 (8512) 54-67-67, 8 (8512) 54-91-91	+	+	+
,	15	« »	8 (85141) 3-61-25	+	+	+
,	32		8 (927) 552-47-21, 8 (937) 122-13-99			+
,	113	« »	8 (3852) 63-94-02	+	+	+
,	9, 25		8 (905) 425-60-4-73	+	+	
,	37		8 (8635) 47-47-72	+	+	+
,	63	« »	8 (86155) 3-11-00, 8 (918) 980-64-75	+	+	+
,	18	" "	8 (3535) 23-23-98, 8-922-802-21-58	+	+	+

,	84		8 (86559) 2-08-02, 8 (86559) 5-29-71	+	+	+	+	+
,	36	« »	8 (3955) 67-00-44, 8(3955) 56-61-93	+	+	+	+	+
,	3	« »	8(4832) 63-06-00, 8 (4832) 33-15-61		+			
,	173	« »	8 (8442) 97-50-10, 8 (960) 883-59-00		+			
,	4		8 (8442) 98-16-47, 8 (8442) 53-06-04	+	+	+	+	+
,	11	« »	8 (8442) 37-16-74, 8 (8442) 37-69-03		+			
,		« »	8 (961) 688-53-48		+			
,	9		8 (927) 521-52-00		+	+	+	+
,	32		8 (937) 722-68-12				+	+
,	158		8 (937) 730-66-03		+	+	+	+
,			8 (904) 404-14-55				+	+
C 12/15		«Master»	8 (928) 126-63-66	+		+		
,	110	«X »	8(8639) 27-80-47	+	+	+	+	+
77-	65	« »	8 (937) 717-93-36	+		+		
,	65	« »	8 (8172) 70-03-45, 8 (8172) 54-21-54	+		+	+	+
,	1	« »	8 (8172) 52-72-51	+		+		

46	« »	8 (473) 260-09-08, 8 (473) 240-57-73	+		+	+	
13	« »	8 (38822) 6-23-32	+		+	+	+
48	« »	8 (962) 655-20-00	+	+	+	+	+
68	« »	8 (8313) 21-14-14	+		+		
54	« »	8(8313) 20-56-00	+	+	+	+	
63	« »	8 (84235) 2-86-59, 8 (84235) 9-14-64	+		+	+	+
84	« »	8 (86132) 2-11-71, 8 (86132), 3-66-02	+	+	+	+	+
55	« »	8(86132)5-05-00	+	+		+	+
64	« »	8 (343) 240-26-60	+		+		
201.	«GOLD»	8-919-372-28-4		+			+
3	« »	8(3955) 67-00-44, 8 (3955) 56-61-118	+		+	+	+
22		8(86359) 4-32-23, 8 (86359) 4-06-42		+			
47	« »	8 (47467) 4-12-08, 8 (47467) 4-33-17	+		+		
45/6	« »	8 (4932) 335185, 8 (4932) 335236	+	+	+	+	+
4	« »	8 (3412) 30 79-79, 8 (3412)30-83-07	+		+	+	+
76	« »	8 (3412) 78-76-85, 8 (3412) 78-06-64	+		+	+	+
7/1, 301, 307	« »	8 (3412) 44-60-40, 8 (3412) 44-60-67		+			
( « » )	7 26»	8 (86545) 2-74-74		+			

24	« »	8 (8362) 24-11-24, 8(8362) 25-55-40	+	+	+	+	
24	« »	8 (3952) 42-55-76 8 (3952) 78-15-83	+		+	+	
56	« »	8 (3952) 28-74-50, 8 (3952) 76-71-75		+		+	+
183	« »	8 (34551) 7-46-31					+
33		8 (3439) 39-95-20, 8 (34399) 34-74-40	+	+	+	+	+
6	« »	8 (84457) 9-17-43, 8 (84457) 9-45-89	+	+	+	+	+
157		8 (8734) 44-42-44	+	+		+	+
53/2		8 (3842) 35-39-67	+			+	
17	« »	8 (87239) 2-33-55, 8 (87239) 3-01-77	+	+	+	+	+
42	« »	8 (8332) 56-25-95, 8 (8332) 54-70-77	+		+	+	
9		8 (988) 548-24-36	+			+	
9		8-928-172-52-26		+			
2,		8 (86142) 4-43-59	+	+	+	+	+
1	« »	8-918-936-36-53		+		+	+
3		8(861) 267-50-88	+	+	+	+	+
103, 55	« »	8 (861) 222-64-13, 8 (861) 222-85-55, 8 (905) 408-08-38	+	+	+	+	+

106	« »	8 (86156) 3-40-40, 8-918-990-35-04	+		+	+	
42/2		8 (918) 041-31-04, 8(86131) 71-2-72		+			+
116		8 (86164) 7-01-22		+			
57	« »	8 (86145) 3-78-74		+			+
25	« »	8 (86164) 65-4-95, 8-918-355-81-70	+	+		+	+
1		8 (86153) 4-16-70		+			
168	« »	8 (86151) 4-33-54, 8 (918) 464-00-86	+	+		+	+
6	« »	8 (3912) 92-92-22, 8 (3912) 41-78-88	+	+	+	+	+
1	« »	8 (3912) 93-54-33, 8 (3912) 94-52-82	+	+	+	+	+
36 37	« +»	8 (4712) 50-85-90, 8 (4712) 35-04-91	+	+	+	+	
2	« »	8 (86169) 7-39-99, 8 (86169) 7-24-96	+	+	+	+	+
66	« »	8 (4742) 33-45-65, 8 (4742) 33-45-95	+	+	+	+	+
25	« »	8 (8772) 55-62-38	+	+	+	+	+

20	« »	8 ( 8722) 93-30-73	+	+	+	+	+
11	« »	8 (86385) 2-33-26, 8 (960) 458-07-11	+	+		+	+
9	«X »	8-909-401-35-21	+	+	+	+	+
1534	« »	8 (499) 717-82-07, 8 (499) 717-82-12	+		+	+	+
3	« »	8 (495) 721-30-70, 8 (499) 168-05-19, 8 (499) 168-47-15	+		+	+	+
20 (30/05)	« »	8 (8552) 35-90-02, 8 (8522) 35-90-42	+	+	+	+	+
24	« »	8 (8662) 42-04-30, 8 (8662) 42-12-21	+		+	+	
55	« »	8 (86554) 5-59-77, 8 (86554) 3-67-57	+	+	+	+	+
10	« »	8 (34783) 3-43-44	+	+	+	+	+
9 ( « »)	« »	8 (8555) 48-08-80, 8-917-906-60-06	+		+	+	+
18	« »	8 (831) 46-18-848		+			+
6	« »	8 (831) 46-18-848		+			+
18	« »	8 (3843) 20-31-33	+		+	+	+
21/27	« »	8 (48762) 6-46-46	+	+	+	+	+
14	« »	8 (8617) 6311-15, 8 (8617) 63-03-95	+	+	+	+	+
17	« »	8 (383)274-99-33, 8 (383) 274-99-45	+		+		

3	' 63,	« »	8 (383) 210-59-49, 8 (383) 210-52-92	+		+	+	
24			8 (863) 9 3-74-75, 8 (928) 609-35-85	+	+	+		
4			8 (3532) 36-87-94	+			+	+
194		« »	8 (3812) 36-74-01					+
130		« - »	8 (3812) 36-42-02	+	+	+	+	
2		« - + »	8 (3537) 33-84-43, 8 (3537) 35-13-18	+	+	+	+	+
11		« » -	8 (3537) 35-79-93	+	+	+	+	+
2		« »	8 (8412) 26-09-60, 8 (8412) 26-12-29	+		+	+	+
3		« - »	8 (342) 221-40-99	+	+	+	+	+
11		« - »	8 (342) 240-93-35, 8 (342) 240-93-24		+			
11		« - »	8 (8142) 78-06-93, 8 (8142) 70-65-48	+		+		
39-5			8 (3846) 69-33-00	+	+	+	+	+
11		« »	8 (8112)-53-86-30, 8 (8112) 53-86-50	+		+		
12			8-928-225-95-85		+		+	+
5-3		« »	8 (8793) 98-70-11	+	+	+	+	+
50			8 (47396) 48-911	+	+	+	+	+
37		« - »	8 (863) 250-47-77	+		+		
7		« - »	8 (863) 227-60-90, 8 (863) 299-00-50	+	+	+	+	+

50-	' 1/52,	« »	8 (863) 21-92-112, 8-800-100-51-52	+	+	+	+	+
	, 11 / 17		8 (906) 453-35-81	+		+		
	, 12	« - »	8 (4855) 22-04-77, 8 (4855) 25-38-60	+	+	+	+	+
	, 14	« »	8 (86370) 2-19-50	+	+	+	+	+
	, 12	« »	8 (4855) 22-04-77, 8 (4855) 25-38-60	+	+	+	+	+
	, 21	« »	8 (4855) 24-31-21	+	+	+	+	+
	, 14, 1	« - »	8 (4912) 76-88-01, 8 (4912) 40-30-30	+	+	+	+	+
	, 42	« - »	8 (4912) 41-33-02	+	+	+	+	+
	100/, 56	« - »	8 (846) 990-37-51, 8 (846) 240-98-17	+		+	+	+
- e	, 197	« - XXI»	8 (812) 600-11-97	+	+	+	+	
- e	, 41,	« - »	8 (812) 325-36-56, 8 (812) 325-36-57	+		+	+	
- e	, 11, 36	« - 95»	8 (812) 822-18-00, 8 (812) 320-06-61	+				
	, 1	« - »	8 (8342) 23-05-91, 8 (8342) 47-48-59	+	+	+		
	, 95	« - »	8 (8452) 52-81-21, 8 (8452) 52-83-84	+	+	+	+	+
	167/1		8 (951)-522-38-11	+	+	+	+	+

, 253	« »	8 (496) 547-04-95, 8 (496) 549-32-79	+	+		+	+
, 7	" -S"	8-963-624-49-46			+	+	+
, 44	« »	8 (4812) 45-05-13, 8-920-333-09-44	+	+	+	+	+
, 90	« »	8 (8622) 55-51-19, 8 (8622) 55-01-08	+			+	+
, 63	« »	8 (8652) 24-30-14, 8 (8652) 23-31-81	+	+	+	+	+
, 15, 21	« »	8 (8652) 95-53-68, 8 (8652) 95-61-90		+			
, 1	« »	8 (4725) 24-62-27, 8 (4725) 24-73-49	+	+	+		
, 158	« »	8 (3473) 20-12-13, 8 (3473) 20-27-70	+		+	+	+
, 25	« »	8 (8212) 22-95-29, 8 (8212) 29-12-20	+	+	+	+	+
, 137	2000»	8 (4752) 56-19-42, 8 (4752) 56-19-44	+	+	+	+	+
, 24/2		8 (86130) 4-86-59, 8-(918) 147-02-03	+	+		+	+
, 2/2	« »	8 (86196) 7-20-53	+	+	+	+	+
, 48	« +»	8 (8482) 22-72-41, 8 (8482) 22-71-85, 8 (8482) 61-65-64	+	+	+	+	+
, 58	« -2»	8 (3822) 56-23-35, 8 (3822) 48-08-80	+		+		

, 137	« »	8 (4872) 31-12-57	+	+	+	+	+
, 55	« »	8 (3452) 47-35-69	+		+	+	+
, 28	« »	8 (3012) 21-89-63	+		+	+	+
, 16/7	« »	8 (8422) 73-44-22, 8 (8422) 73-29-19	+	+		+	+
, 378	« »	8 (87875) 7-44-82	+	+	+	+	+
, 6/1	« »	8 (347) 236-57-07	+		+		
, 148	« »	8 (3472) 77-12-62	+		+		
, 153, , 42, , 7	« »	8 (347) 279-90-70, 8 (347) 241-62-02					+
, 15	« »	8 (86391) 2-18-06	+		+		
, 36	« »	8 (8352) 62-30-97, 8 (4942) 63-20-98	+		+		
, 8	-	8 (351) 239-39-34, 8 (351) 239-39-35	+	+	+	+	+
, 18	« »	8 (8202) 54-31-88	+		+	+	+
, 340 « »	« »	8 (8782) 27-30-60, 8 (8782) 27-70-77	+	+	+	+	+
, 48, , 11	« .. »	8 (8782) 25-04-66, 8 (8782) 25-19-15	+	+	+	+	+
, 33	« »	8 (3022) 36-39-36, 8 (3022) 36-39-32	+	+	+	+	+
, 1		8 (904)-345-83-18	+	+	+	+	+

, 3- , 21	« »	8 (84722) 9-52-07, 8 (937) 469-52-07	+	+	+	+	+
, 57	« »	8 (8453) 55-80-89, 8 (964) 848-45-06	+		+	+	+
, 12	« »	8 (4852) 25-94-83	+		+		

UA

2

«Saturn Home Appliances»

					( )								
, , 36		(06442)-91137, 0990521001	Hi-Fi ( )	+	+	+	+	+	+	-	+		
, , 42		(06274)-49128, 0627449129	-	+	+	+	+	+	+	-	+		
50- 82		(04563)-68413	-	+	+	+	+	+	+	-	+		
, , 28		(0456)-333295, (0456)-309400, 094-9299400	-	-	+	+	+	+	+	-	-		
, , 57		(04143)-40636	" - " "	+	+	+	-	+	+	+	+		
, , 43		(03141)-43432	" - " "	+	+	+	+	+	+	-	-		
, , 50 , , 51		(0432)-699573		+	+	+	+	+	+	+	+		
, , 3		(0432)-642457, (0432)-642622		-	+	+	-	-	-	-	-		
, , 1		(0432)-509191, (0432)-579191, 066-3509191 096-0509191			+	+	+	+	+	-	+		
, , 16		(0432)-464393, (0432)-468213, (0432)-519254		-	+	+	+	+	+	+	+		
, , 43		067-7899525		-	+	+	+	+	-	-	-		
, , 62-		(05653)-52771			+	+	+	+	+	+	+		
, , 59		(0562)-350409, (0562)-346705			+	+	+	+	+	+	-		
, , 6		(056)-7356328, (056)-7356325		-	+	+	+	+	+	-	+		

« Saturn Home Appliances».

: <http://saturn.ua>,

0-800 502-502

	46-	(056)-7854002, 067-5071964	-	-	-	+	+	+	+	+	-
	41-	(056)-7900460	-	-	+	+	+	+	+	-	+
	129-	066-2493639	-	-	+	+	+	-	-	-	+
	1	.066- 5082652, 096-7232447	-	-	+	+	+	+	+	+	+
	188	(062)-3450607	-	-	+	+	+	+	+	-	+
	24	(0412)-470742	C ( - )	-	-	+	+	+	-	-	-
	8	(0412)-471568, 067-4115812	( " ")	-	+	+	+	-	-	-	+
	175	(061)-7875051, (0612)-639790	-	-	+	+	+	+	+	+	+
	83	(0612)-120303	-	-	+	+	+	+	-	-	+
	50	(061)-2209764, (061)-2209765	-	-	+	+	+	+	+	-	+
	223	(0342)-756040, (0342)-712813	-	-	+	+	+	+	+	-	-
	19-	(0342)-559525, (0342)-750777	-	-	+	+	+	+	-	-	-
	2	067-3248218	"	"	+	+	+	+	+	+	+
	76	(04597)-57393	"	"	+	+	+	-	-	-	-
	161	067-3248401, 067-3248365, (04736)-62949	« - - »	-	+	+	+	+	+	+	+
	16	(044)-4269198, (044)-3629198	"	"	+	+	-	-	-	-	+
	55	(044)-3641463, (044)-4086660, (044)-4972936	-	-	-	+	+	+	+	+	-

	(044)-4973455, (044)-4973619, (044)-4086658, (044)-4086659								
1-	(044)-5911190	" "	+	+	+	+	+	+	+
.15	(06561)-62102, 096-3852181		+	+	+	-	-	-	+
,2	(0522)-357923, (0522)-278002, (0522)-273300		+	+	+	+	+	-	+
,1-	(0522)-272840, (0522)-277667	( )	+	+	+	+	+	+	+
,13	097-7766770 097-2642167		+	+	+	+	+	+	+
10	(06272)-26223, (06272)-22186, 050-2796816	( )	+	+	+	-	-	-	-
2-	(04142)-50504	" "	-	+	+	+	+	+	+
,7	050-5260668	-	+	+	+	+	+	+	+
,3	(06264)-59389	-	+	+	+	+	-	+	-
,8	050-9732014	-	+	+	+	+	+	-	+
,5-	(0626)-412134, 067-2557990		+	+	+	+	+	+	+
,2	,44,(05366)-39192		+	+	+	+	+	+	+
,42	(056)-4013356, (056)-4040080, (056)-4746103	" - "	+	+	+	-	+	+	-
,73	(056)-4400764	" "	+	+	+	+	+	-	+
,64/7	(056)-4400779		+	+	+	+	+	-	+

9	(056)-4092302, (056)-4092303	( - )	+	+	+	+	+	+	+
81	050-2149173, 066-017-02-03		+	+	+	+	+	+	+
96-	(0642)-330242, (0642)-331186,	" "	+	+	+	+	+	+	+
	095-3868985								
49-	(0642)-505783, 095-3624248		+	+	+	+	+	+	+
61	066-0640564, 050-5809230		-	-	-	+	-	-	-
1	(06434)-26025, 099-2710147		+	+	+	+	+	+	+
1	(0332)-290752	" "	+	+	+	-	-	-	+
15-	(0332)-779955, 097-0482596		+	+	+	+	+	+	+
15-	(032)-2445340, (032)-2445344		+	+	+	+	+	+	+
2	(032)-2471499		+	+	+	-	-	+	+
28	(032)-2395152, (032)-2395577, (032)-2955028, (032)-2955029	" "	+	+	+	+	+	+	+
116	(032)-2458052	" "	+	+	+	-	-	+	+
242	(0623)-225550, 066-1032288, 097-7768120		+	+	+	-	-	-	-
50- 32\18	(0629)-496005, (0629)-493006		+	+	+	+	+	-	+
227	(0629)-473000, 098-3122628,	" "	+	+	+	+	+	-	+

	095-0282628	( - )							
84	(0629)-491881, 067-5975615			+	+	+	+	+	-
42	(0619)-444400	( - )	-	+	+	+	+	+	+
51-	(04337)-64847, (0432)-468213			+	+	+	+	+	+
46	(03131)-37337, (03131)-37336, 099-7974430, 097-3423551			+	+	+	-	+	+
33	(0512)-470496, (0512)-478348	" "	+	+	+	+	+	+	+
2	(0512)-580647			+	+	+	+	+	-
49	(0512)-582180, 067- 5170570, 066-7056444	" "	-	+	+	+	+	+	-
97,	(05662)-41503, 099-0743553	" - " ( - )	+	+	+	+	+	+	+
189	(0566)-688563, 050-5800296			+	+	+	+	+	+
25	(0566)-687014		-	+	+	+	+	+	+
38	095-7247266			+	+	+	+	+	-
38	(04141)-52010	" "	+	+	+	+	+	-	+
90	(048)-7001737 (048)-7874579			+	+	+	+	+	+
55	(0482)-390618, 094-8390619			+	+	+	+	-	+

	27	(048)-7229779 (048)-7712538, (048)-7227066	-	+	+	+	+	+	+	+	+
2 (66)		(048)-7317703, (048)-7317704		+	+	+	-	-	-	-	+
172-		(05632)-61554, (05632)-62342		+	+	+	+	+	-	-	+
75		096-2840836, 066-0857539	-	+	+	+	+	+	+	+	+
29		(0532)-694262, 099-601424		+	+	+	+	+	+	+	+
120		(0532)-509889, 050-0137217		+	+	+	+	+	-	-	+
66		(0532)-615621	-	+	+	+	+	+	+	+	+
64		099-4243675	-	+	+	+	+	+	+	+	+
101/1		(04637)-38595, 095-8862199, 063-5974127, 067-2725751	-	+	+	+	+	+	+	+	+
12		(0362)-266585	-	+	+	+	+	+	-	-	+
55		(0362)-436452, (0362)-635489, 067-2385635	-	+	+	+	+	+	+	+	+
12		097-7804458	-	+	+	+	+	+	-	-	+
5		(0362) 433340, 067-3604242		+	+	+	+	+	+	+	+
14		(06563)-22183, 050-9045717	-	+	+	+	+	+	+	+	+
		(06434)-26025, 099-	-	+	+	+	+	+	+	+	+

	1	2710147	-								
26-		(0692)-555643 (0692)-453699			+	+	+	+	+	+	+
	24	(06452)-50533, 050-6037272	-	+	+	+	+	+	+	+	+
17/1		(0652)-522771, (0652)-544573	" - "	+	+	+	+	+	-	-	+
	72	(0652)-690778	-	+	+	+	+	+	+	+	+
	32	(04733)-46182	-	+	+	+	+	+	+	+	+
	1	(06444)-40289, 066-1053966	-	+	+	+	+	+	-	-	+
171- \10		(03245)-58381	-	+	+	+	-	-	-	-	-
	19	096-3400696		+	+	+	+	+	+	+	+
	2	067-3576378, 050-5124887	" - "	+	+	+	+	+	+	+	+
1/24		(04744)-46614, (04744)-46134	" - "	+	+	+	-	-	-	-	-
3/2		(0312)-654266, 099-5575307	-	+	+	+	+	+	+	+	+
	3	(057)-73497 24, (057)-7125181		+	+	+	+	-	-	+	-
	12	(057)- 71713 39, (057)-7021620	-	+	+	+	+	+	+	+	+
(42 )	18	096-5953746	" - "	+	+	+	-	-	-	+	+
	25	(057)-7513432, (057)-7643383,		-	-	-	+	+	-	-	-

	067-5757009									
, 35	(0552)-420235	-	-	-	-	+	-	-	-	-
, 28-	(0552)-434040, 050-4946043		+	+	+	+	+	+	+	+
, 23	(0552)-296042		+	+	+	+	+	+	+	+
, 7	(0382)-664501, .0630750889	-	+	+	+	-	-	+	+	+
, 2	(0382)-704700, (0382)-704707, (03822)-664616	-	+	+	+	+	+	-	-	-
, 18	(0382)-783773, (0382)-783755		+	+	+	+	+	+	+	+
102	(0472)-563478, (0472)-500354, (0472)-564216, 096-5056363	" "	+	+	+	+	+	+	+	+
, 71	(0472)-314657, (0472)-565621	" - "	+	+	+	-	-	-	-	+
, 77-	(0462)-601585	" "	+	+	+	+	+	-	-	-
, 1										
, 265-	(0372)-584301, (0372)-584249	" - "	+	+	+	+	+	-	-	+
, 101	(0372)-571204, 066-6604161	-	+	+	+	+	+	+	+	+
, 105	(0372)-554869, 050-4345529		+	+	+	-	+	+	+	+
, 3	(03840)-40017, 067-3601632		+	+	+	+	+	+	+	+
, 3	(0654)-343051, (0654)-343160, 095-7307151	" - "	+	+	+	+	+	-	-	+

GB

## WARRANTY COUPON

When purchasing the product,  
please require its checking before you;

BE SURE

that the goods sold to you, are functional and complete  
and that the warranty coupon is filled in correctly.

This warranty coupon confirms the absence of any defects in the product you purchased and provides for free of charge repair of the product failed through the fault of the manufacturer throughout the period of warranty service and free of charge repair.

Failing the presentation of this coupon, in case of its improper filling in, infringement of factory seals (if any), and also in cases indicated in the warranty obligations, the claims are not accepted, and no warranty service and free of charge repair is made! The warranty coupon is valid only in the original copy with the stamp of trading organization, signature of the seller, date of sale and signature of the buyer. Complex home appliances should be installed by supplier's authorized service centers, authorized specialists. In the case of a malfunction of the home appliance because of incorrect installation, the buyer must pay the cost of the visit (call) of the specialist, as well as the cost of fault diagnostics if necessary.

CZ

## ZÁRU NÍ LIST

P i koupi výrobku  
žádejte o jeho vyzkoušení ve Vaší p ístnosti,  
P ESV D TE SE  
že Vám prodaný výrobek je dob e fungující a kompletní  
a že záru ní list je vypln n správn .

Tento záru ní list potvrzuje, že na Vámi koupeném výrobku nejsou žádné vady a zajiš uje bezplatnou opravu nefungujícího p ístroje z viny výrobce, b hem celé záru ní doby.

Bez p edložení tohoto listu, p i jeho nesprávném vypln ní, porušení plomb výrobce (jsou-li na výrobku) a také v p ípadech, které jsou uvedené v záru ním list , nároky se nep ijímají a záru ní oprava se neprovádí!

Záru ní list je platný jenom jako originál s razítkem obchodní organizace, podpisem prodavá e, termínem prodeje a podpisem zákazníka.

Instalace komplexní spot ebi e musí být provedena autorizovaným servisním st ediskem, specialistou. V p ípad poruchy v d sledku nesprávné instalace výrobku, kupující je povinen uhradit náklady na výjezd (volání) odborný, pokud je to nezbytné, a náklady na diagnostiku poruch.

RU

# Saturn®

## WARRANTY COUPON

## ZÁRУ NÍ LIST

SATURN HOME APPLIANCES S.R.O. KON VOVA 141, 13083  
PRAHA 3 – ŽIŽKOV, ČESKÁ REPUBLIKA, TEL: + 4202/ 67 108 392

Model/

Serial number/Sériové číslo/ /

Date of sell/Termín prodeje/ /

Shop stamp/Razítko obchodu/ /

Seller's signature/Podpis prodavče/ /

Buyer's Signature confirming the acquaintance and consent with terms  
of free of charge maintenance service of the product, and absence of the  
complaints on appearance and color of the product.

Podpis zákazníka, potvrzující seznámení a souhlas s podmínkami  
Bezplatného záručního servisu výrobku, a také neexistence nároku na  
vynášek a barvu výrobku.

ВІДМІТКИ ПРО ВСТАНОВЛЕННЯ ВИРОБУ\*

Дата встановлення	Назва організації, СІ	№ Наряду	ПІБ та підпис майстра
			ПІБ та підпис споживача**

\*Побутові прилади, для введення в експлуатацію котріх необхідні установочні, монтажні роботи, повні вводиться в експлуатацію уповноваженими спеціалістами сервісних центрів постачальника. В разі виникнення несправності виробу з причини некоректної установки вироб може бути знятий з гарантійного обслуговування, а покупець повинен сплатити вартість вийзду (виліку) фахівця, а в разі необхідності і варість діагностування несправності.

ВІДМІТКИ ПРО ПРОВЕДЕННЯ СЕРВІСНОГО ОБСЛУГОВУВАННЯ

\*\* Підпис споживача свідчить про приймання виробу в робочому стані.

ОТМЕТКИ ОБ УСТАНОВКЕ ИЗДЕЛИЯ\*

Дата установки	Название организации, СП	№ наряда	ФИО и подпись мастера
			ФИО и подпись потребителя**

\* Выголовите приоритеты, для которых необходимы установочные, монтажные работы, должны входить в эксплуатацию уполномоченными специалистами сервисных центров поставщиков. В случае возникновения неликвидности по причине некорректной установки, изделие может быть снято с гарантийного обслуживания, а покупатель должен оплатить стоимость вывоза [выезда] (удаления) изделия.

## **ОТМЕТКИ О ПРОВЕДЕНИИ СЕРВИСНОГО ОБСЛУЖИВАНИЯ**

**\*\*** Подпись потребителя свидетельствует о приеме изделия в рабочем состоянии.

NOTES ABOUT THE INSTALLATION OF THE DEVICE\*

Installation date	Name of organization, Service Center	Order No	Master's surname, name, patronymic and signature Client's surname, name, patronymic and signature*

- \* Household appliances for commissioning of which installation and mounting works are required should be commissioning by the supplier's authorized service center specialists.

In the case of a malfunction of the product because of incorrect installation, the product may become invalid for warranty service, and the buyer must pay the cost of the visit (call) of the specialist as well as the cost of fault diagnosis if necessary.

NOTES ABOUT CARRYING OUT OF SERVICE MAINTENANCE

\*\* Client's signature certifies about the appliance's receipt at the working condition.

Saturn®		Saturn®	
Model/	/	Model/	/
Date of sale/	/	Date of sale/	/
Serial number/	/	Serial number/	/
Name of the Trade company and Stamp/	/	Name of the Trade company and Stamp/	/
Customer's address, phone#, name, surname/	/	Customer's address, phone#, name, surname/	/
Date of Receiving/	/	Date of Receiving/	/
Date of Return/	/	Date of Return/	/
Defect /	/	Defect /	/
Stamp of signature/	/	Stamp of the Service Center, signature/	/
. . . / Stamp COUPON 1		. . . / Stamp COUPON 2	
. . . / Stamp COUPON 3		. . . / Stamp COUPON 4	
. . . / Stamp COUPON 5		. . . / Stamp COUPON 6	