

# **Saturn<sup>®</sup>**

## **ST-VC 7278**

### **Vacuum Cleaner**



**GB**

Vacuum cleaner

Dear Buyer!

We congratulate you on having bought the device under trade name «Saturn». We are sure that our devices will become faithful and reliable assistance in your housekeeping.

#### IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution should always be followed, including the following:

**READ ALL INSTRUCTIONS**

**BEFORE USING (THIS APPLIANCE)**

#### WARNING

To reduce the risk of fire, electric shock, or injury:

1. Do not leave vacuum cleaner when plugged in. Unplug from outlet when no use and before servicing.
2. To reduce the risk of electric shock, do not use outdoors or on wet surfaces
3. Do not allow to be used as a toy. Close attention is necessary when used by near children.
4. Use only as described in this manual. Use only manufactures recommend attachments.
5. Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, enter it to a service center.
6. Do not pull or carry on cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or vacuum cleaner with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair and anything that may reduce airflow.
10. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
11. Turn all controls off before unplugging.
12. Use extra care when cleaning on stairs.
13. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present
14. Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
15. Unplug before connecting the hose
16. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
17. Do not use without dust bag and/or filter in place.

18. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person.

19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

 
Children should be supervised to ensure that they do not play with the appliance.

20. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

**SAVE THESE INSTRUCTIONS**

**WARNING-**to reduce the risk of electric shock, this vacuum cleaner has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit full in the outlet, reverse the plug. If it still does not fit, contract a qualified electrician to install the proper outlet do not change the plug in any way.

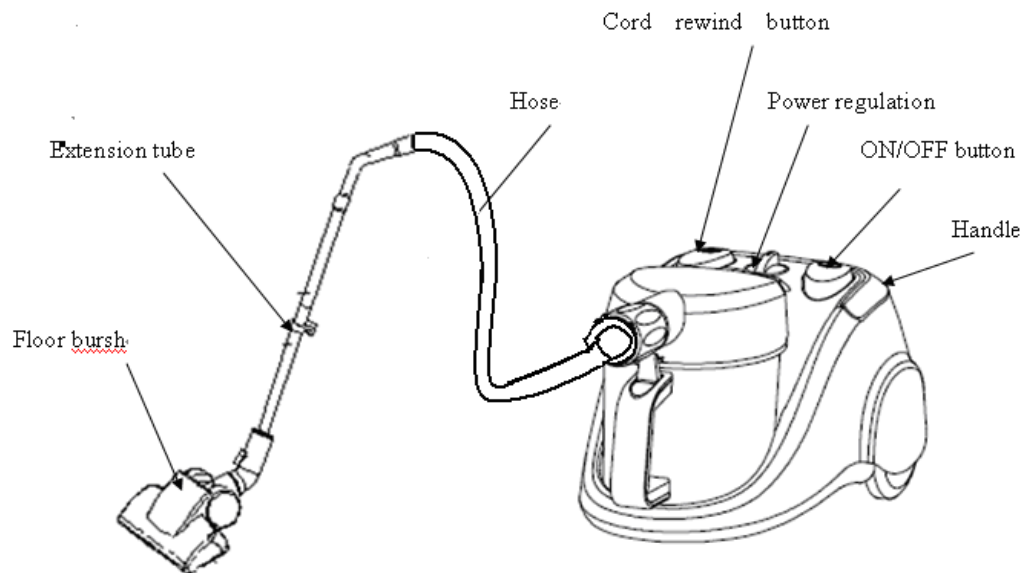

LIVELONG CLEANER SKETCH MAP  
PRECAUTIONARY MEASURES

If the opening that sucks in the air, the suction pipe or the telescopic wand stick on pipe are blocked, you should switch off the vacuum cleaner and unplug from outlet at once. First clear the blocked substance before you attempt to start the vacuum cleaner again.

1. Do not operate the vacuum cleaner too close to heaters and like radiators, cigarette butts etc.

2. Before you insert the plug into the wall contact, make sure your hand is dry.

3. Before you start using the vacuum cleaner, please remove large or sharp objects from the floor in order to prevent that the paper filter is damaged.

4. When you want to pull the plug from the wall contact, please do this at the plug itself and not by means of the electrical cable.

This vacuum cleaner is equipped with a plug and a cable, which rolls up automatically.

If anything gets damaged, both the plug and the cable must be repaired by a qualified repairman or electrician.

**ASSEMBLING VACUUM CLEANER**

Always remove the plug from the power socket before fitting or removing accessories!

Connecting vacuum cleaner

1. Fitting or removing the flexible hose

Fitting:

 
 
 
 
Insert flexible hose into the air intake duct on the top of appliance. Press until it clicks into position.

 
Removing:

Removing the plug from the power socket. To release the flexible hose firmly from the air intake duct.


2. Fitting the extension tubes and accessories

a. Fitting the extension tube to the handle.

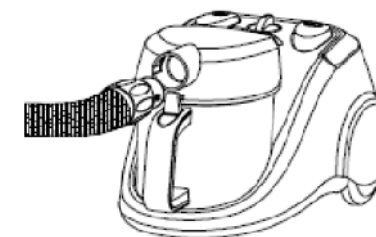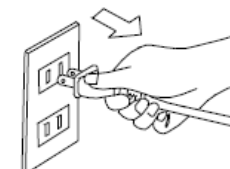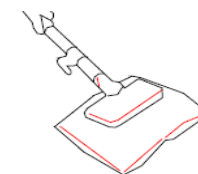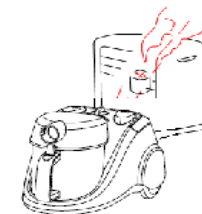

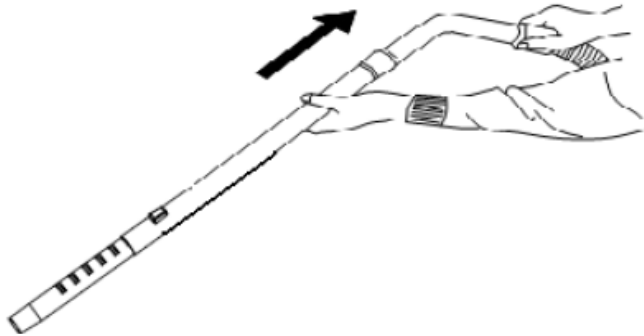

 
b. Fitting the extension tubes.

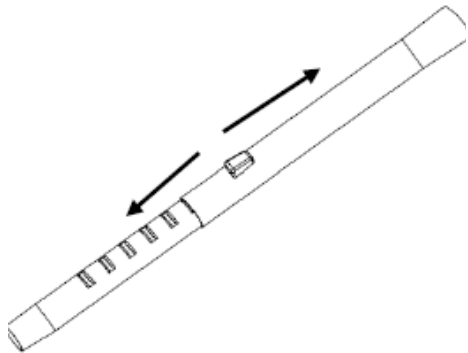

c. Fitting the brush to the extension tube.


Extension Tube

 Floor Brush

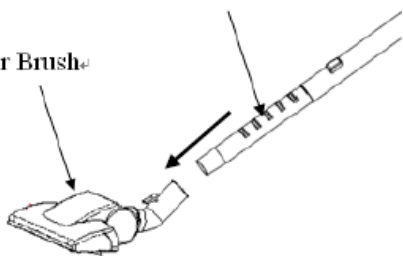


d. Fitting Floor brush

 Ideal for the daily cleaning on carpets and hard floors.

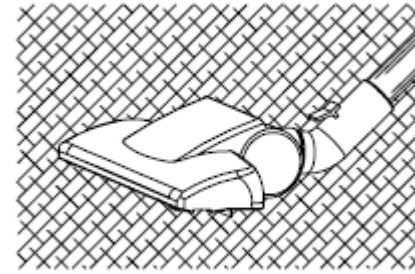

Clean on the carpet

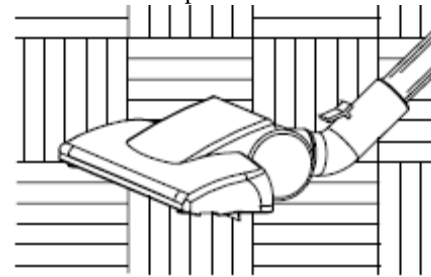 


Clean on the hard floor


2. Cleaning tools use

*The crevice tool and dusting brush are stored on the accessories holder.*

 1. Being used for radiators, crevices, corners, baseboards and between cushions.

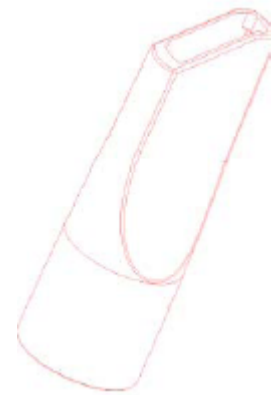

 
2. Being used for furniture, venation, blinds, book, lamp shades and shelves.

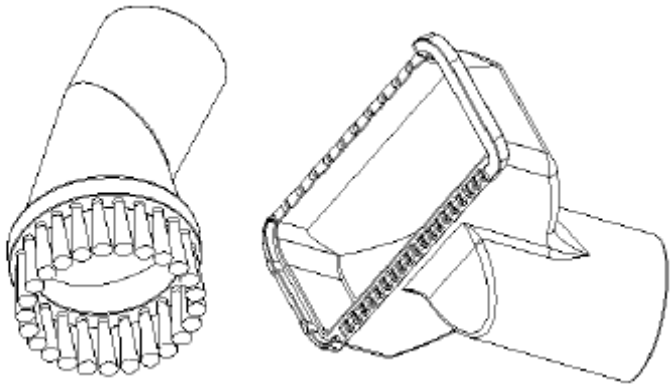


### INSTRUCTIONS FOR USE

Before using appliance, unwind a sufficient length of cable and insert the plug into the power socket. A yellow mark on the power cable shows the ideal cable length. Don't extend the cable beyond the red mark.

 1. Press the ON/OFF button to switch the appliance on.

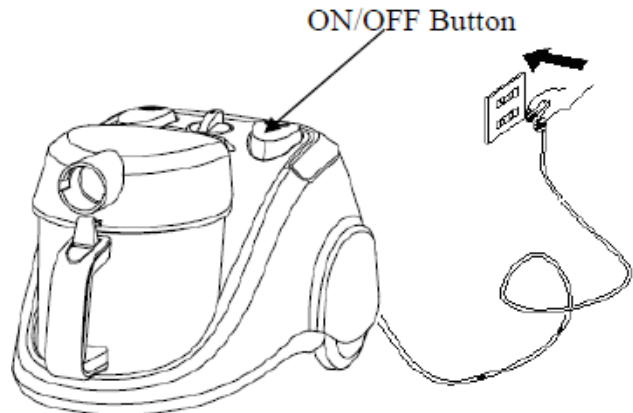

 
2. To rewind the power cable, press the rewind button with one hand and guide the cable with the other hand to ensure that it does not whip causing damage.

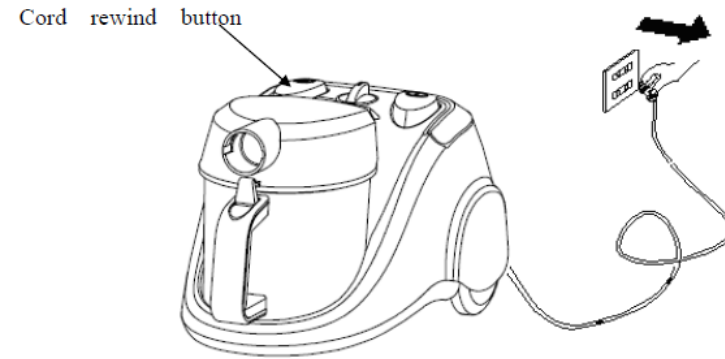


### MAINTENANCE

Always remove the plug from the power socket before maintenance!

 1. Spilling rubbish from the dust compartment subassembly
  - . Always operate the cleaner with the dust compartment subassembly whole installed.
- b. If you forget to attach HEPA and filter or attach its in the wrong manner, the dust compartment subassembly may not rinse.

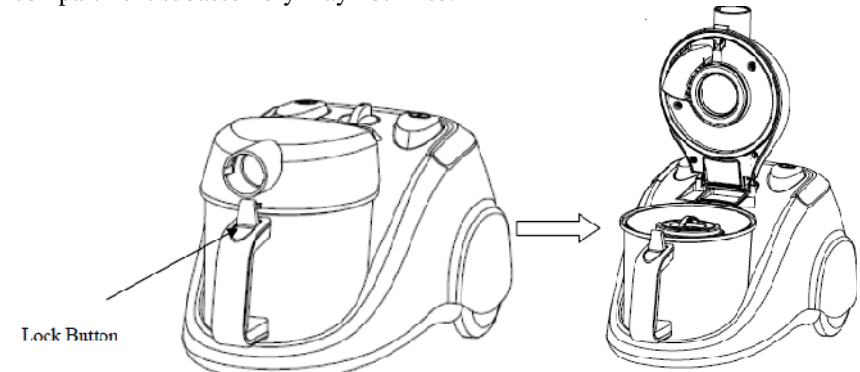

 1. After removing the flexible tube, handhold handle and press the locking button.
2. Rotate the front-cover compartment subassembly to the correct position.

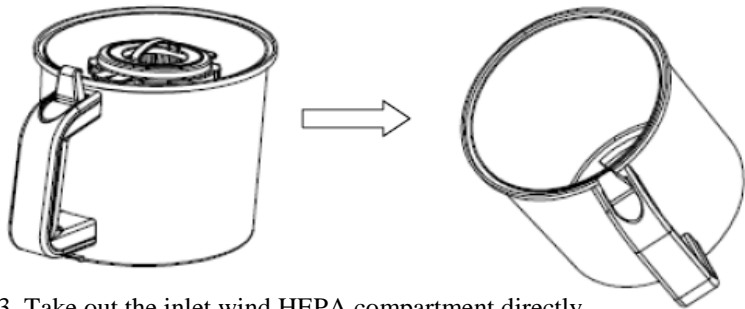

3. Take out the inlet wind HEPA compartment directly.
4. Carry away the dust-glass cap and Spill rubbish
5. Replace the dust compartment subassembly until it is locked.

### 2. Cleaning and changing HEPA

HEPA for air-visible solid.

Lock Button inlet/air outlet should be cleaned at least twice a year or when it becomes Clean HEPA for air-inlet/air outlet when you find it is filled in.

HEPA for air-inlet/air outlet and filter for air-outlet are changed.

Always operate the cleaner with air-inlet/air outlet installed.

Otherwise, reduced suction or motor damage may be result.

Disconnect from electrical outlet, before cleaning filter.

 
Do not use a washing machine to rinse filter.

Do not use hair drier to dry it.


### 3. Cleaning and changing air-inlet HEPA

(1) After opening the dust-glass cap subassembly, take out air inlet HEPA


(2) Remove HEPA bracket.

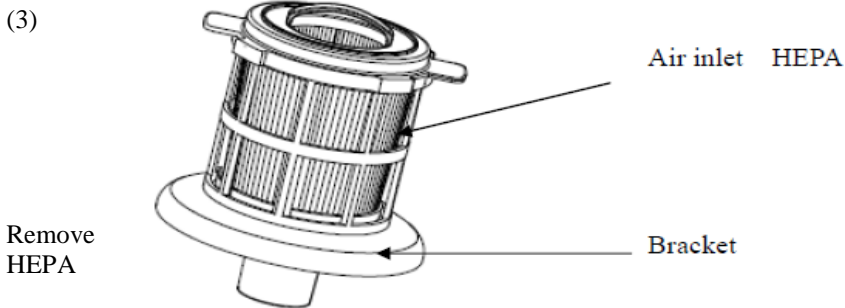

from the bracket.

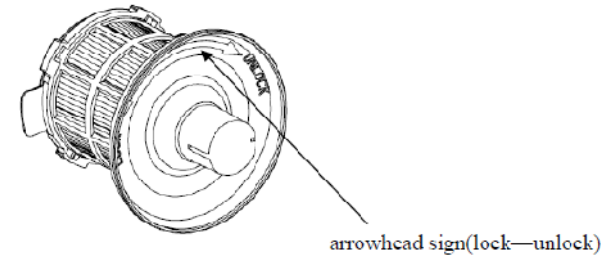 

 - (4) Rinse bracket and HEPA in lukewarm water and dry Filter and HEPA completely. (HEPA is rinsed by brush.)

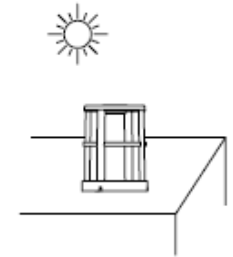



(5) Put the HEPA into the bracket or change new HEPA, then put them back.

### 4. Changing air outlet HEPA

 
 
(1) Open the grille for air-outlet.

(2) When open the grille for air-outlet, the filter for air-outlet is found.

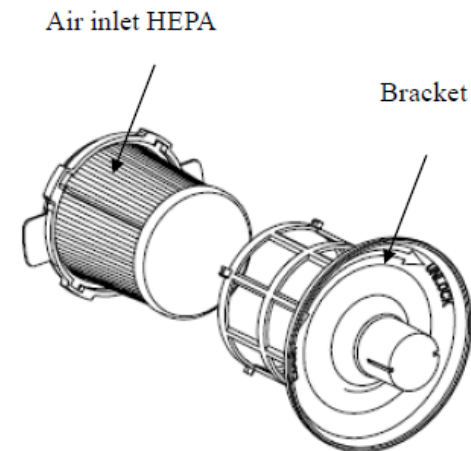

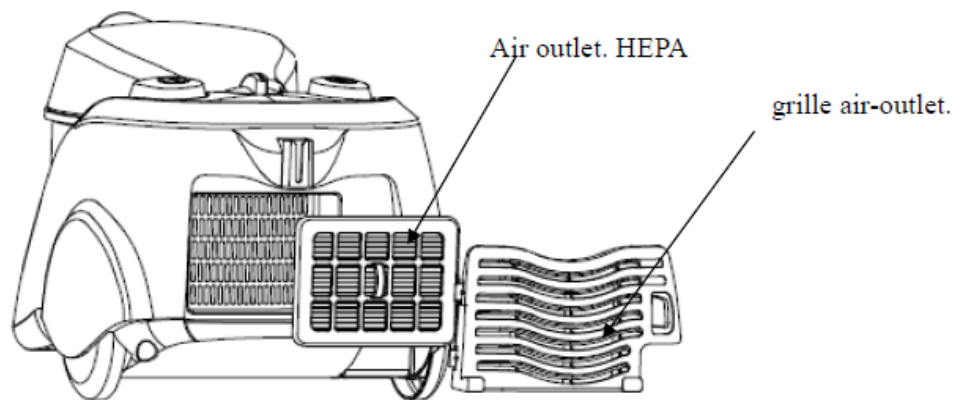

  (3) Rinse HEPA in lukewarm water and dry Filter and HEPA completely.  
 (HEPA is rinsed by brush.) grille air-outlet.

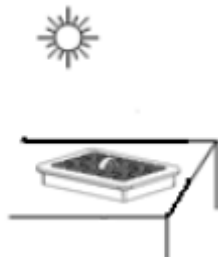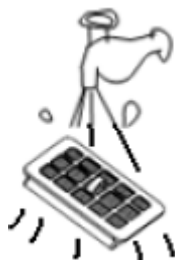

Air outlet HEPA

(4) Close the grille for air-outlet.

**Specifications**

Voltage: 220-230 V  
 Frequency: 50 Hz  
 Power consumption: 2000 W  
 Rated current: 9A

**Set**

Vacuum cleaner .....1  
 Instruction Manual .....1  
 Warranty Book .....1  
 Package .....1

**Environment friendly disposal**



You can help protect the environment!  
 Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.

**The manufacturer reserves the right to change the specification and design of goods.**

!

«Saturn».

 
- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 11.
- 12.
- 13.
- 14.

- 15.
- 16.
- 17.
- 18.
- 19.


- 20.
- 21.
- 
- 
- 

( )



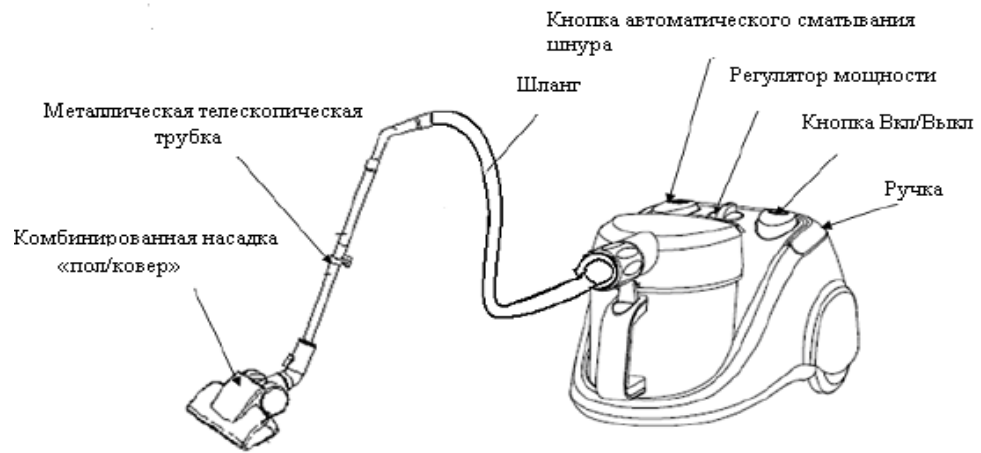

 1.

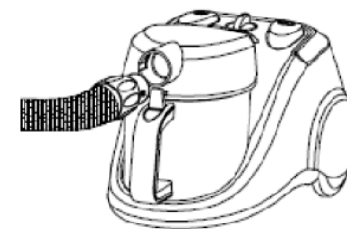



2.

1.


2.

3.

  4.

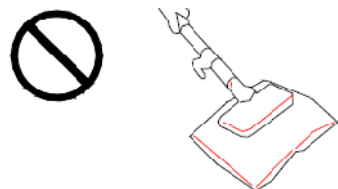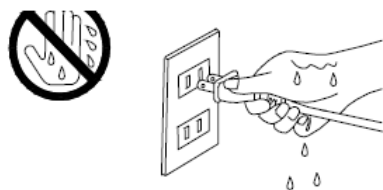



16

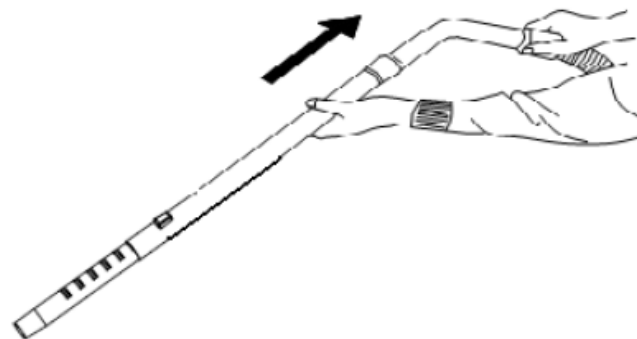 


b.

  17

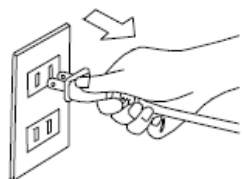

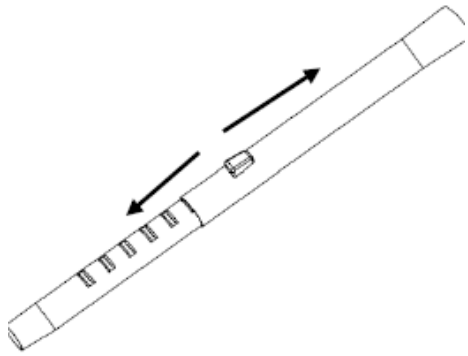

c.

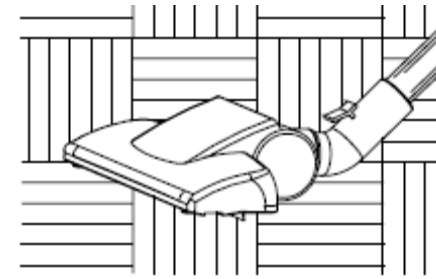 

2.

 
1.

Телескопическая трубка




d.

« / »

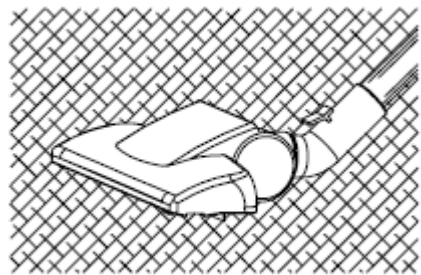


2.

 1.

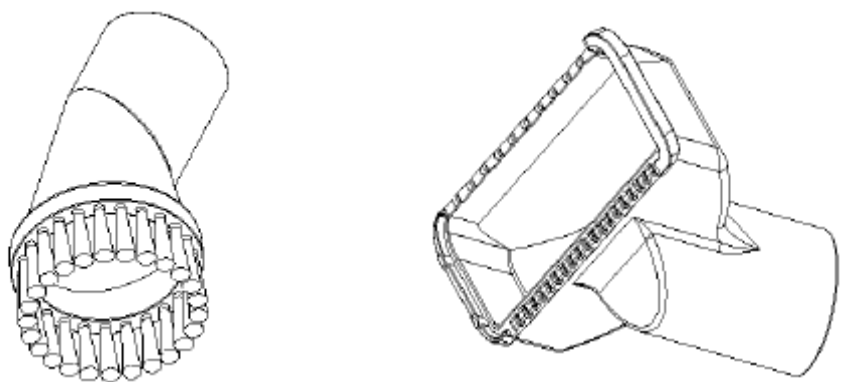


 1.

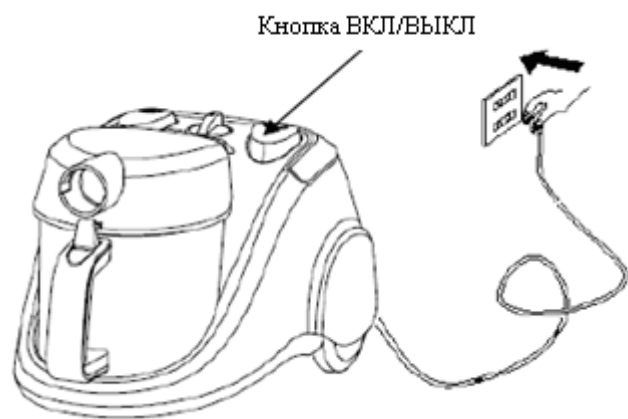


2.

 Кнопка сматывания шнура

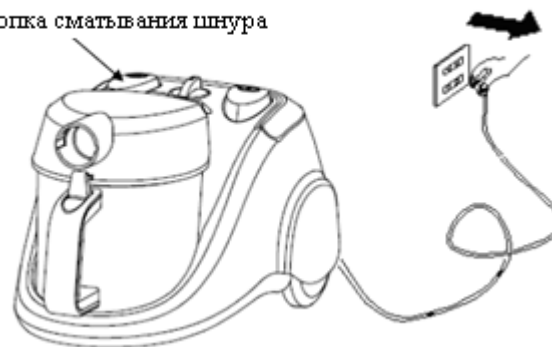


 1.

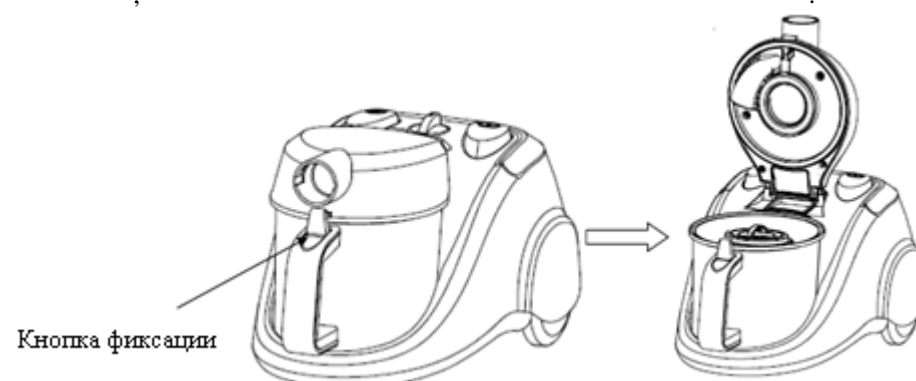

1.

 2.

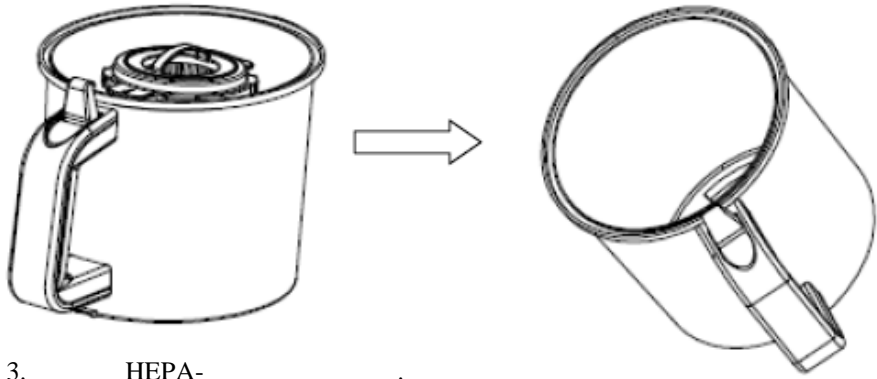


3. HEPA-  
4.  
5.



2. HEPA- HEPA-  
HEPA-

- HEPA- HEPA-
- HEPA- HEPA-
- ( )
- 
- 
- 
- 
- 

 3. (1) HEPA-  
(2)

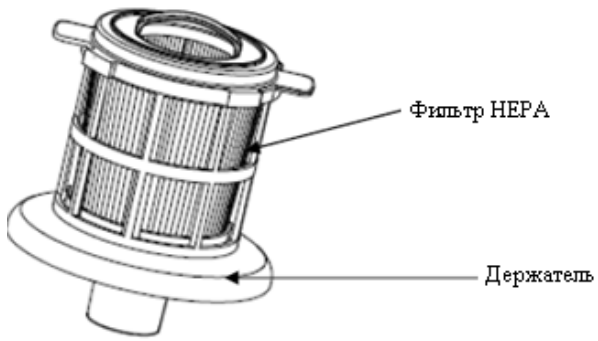


HEPA-  
Фильтр HEPA

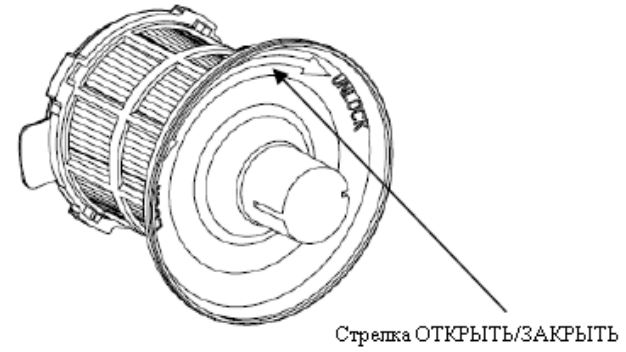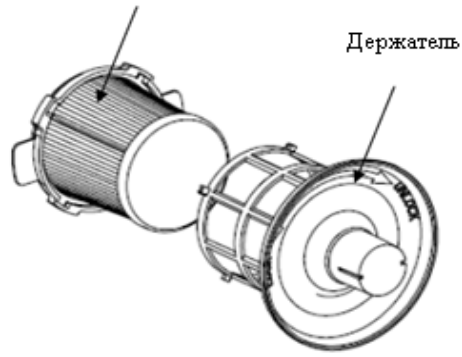  


(4) HEPA-  
HEPA- (HEPA - )  
(5) HEPA-



  
4. HEPA-  
(1)  
(2)

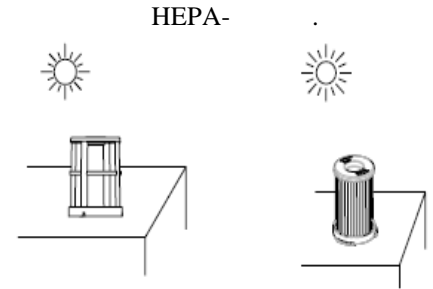

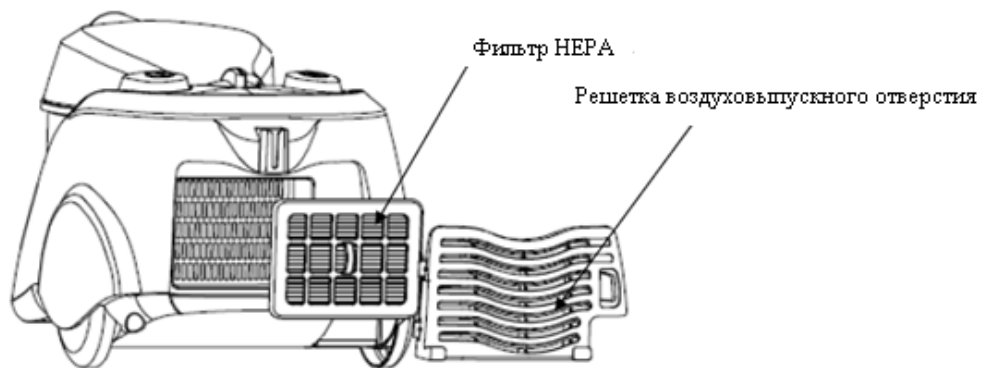

(3) HEPA-

 ( HEPA )

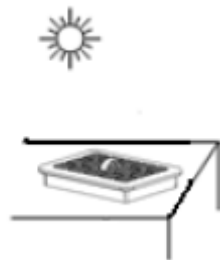

(4)

: 220-230  
 : 50  
 : 2000  
 : 9

..... 1 .  
 ..... 1 .  
 ..... 1 .  
 ..... 1 .

**Безопасное для окружающей среды удаление**



Вы можете помочь в охране окружающей среды!

Будьте любезны, соблюдайте местные правила:

передавайте неработающее электрическое оборудование в соответствующий центр удаления отходов.



 
**Производитель оставляет за собой право вносить изменения в технические характеристики и дизайн изделий.**

Шановний покупець!

«Saturn».

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 11.
- 12.
- 13.
- 14.

- 15.
- 16.
- 17.
- 18.
- 19.
- 20.
- 21.
- 
- 
- 

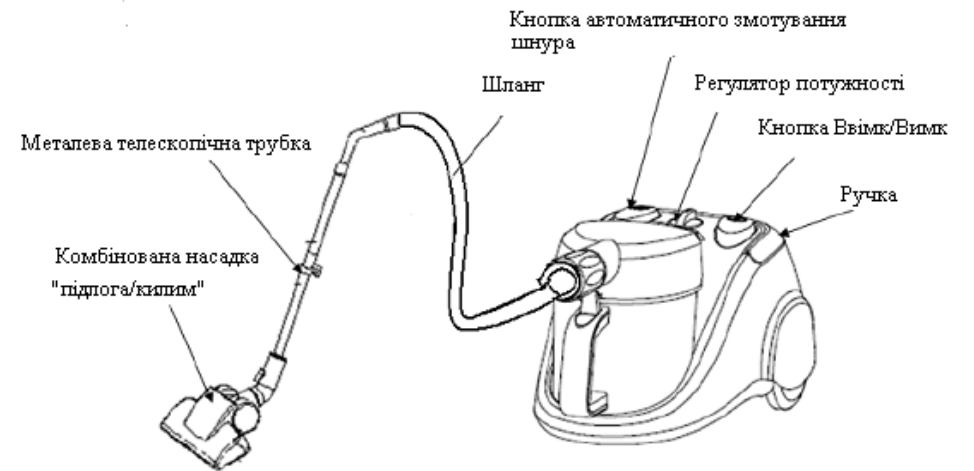

1.

 
2.

3.


4.

1.



2.

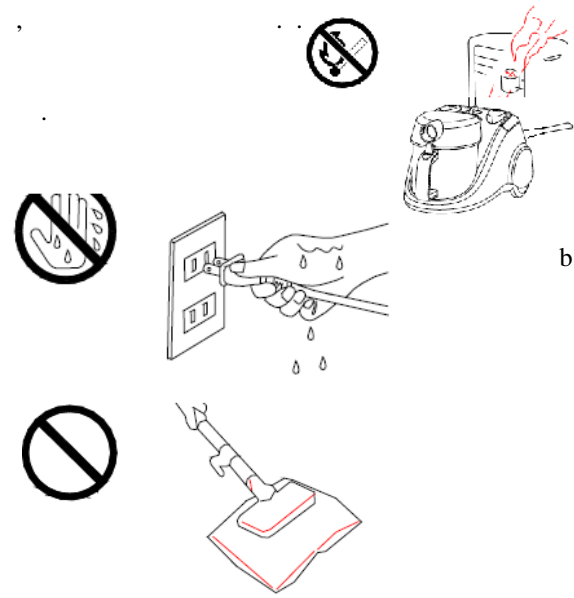


b.


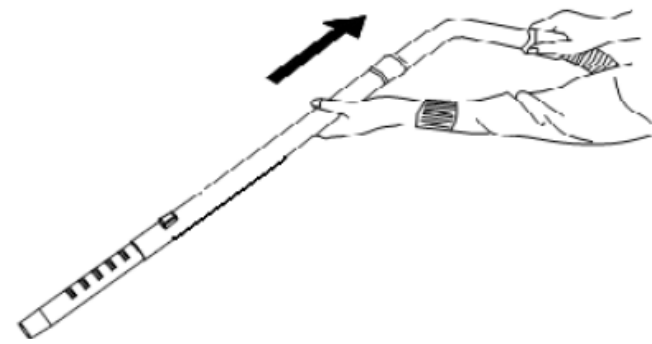 


c.

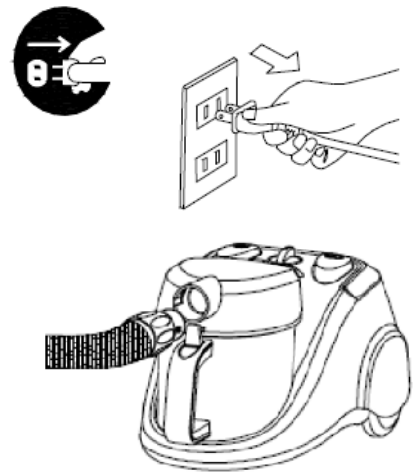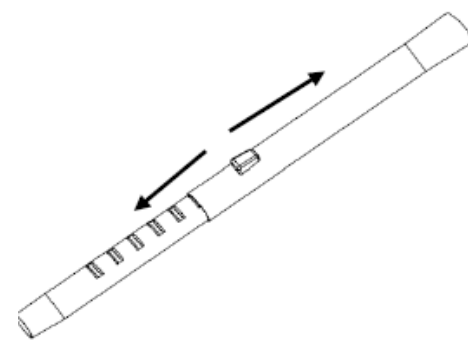  


d.

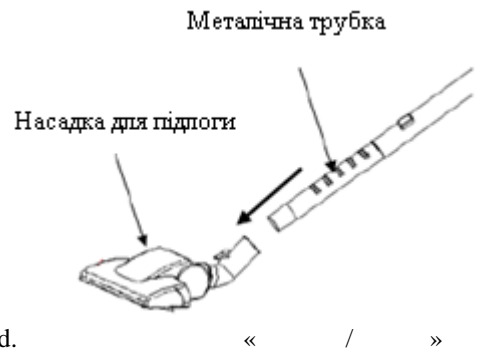 

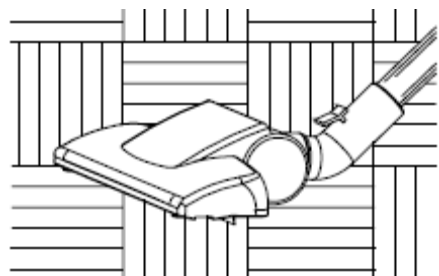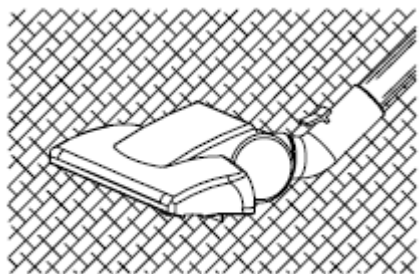  


2.

 1.

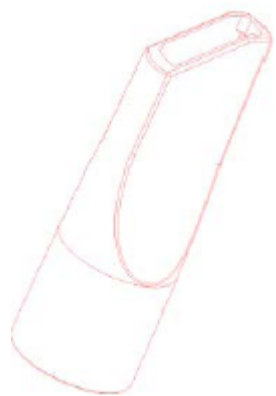


 2.

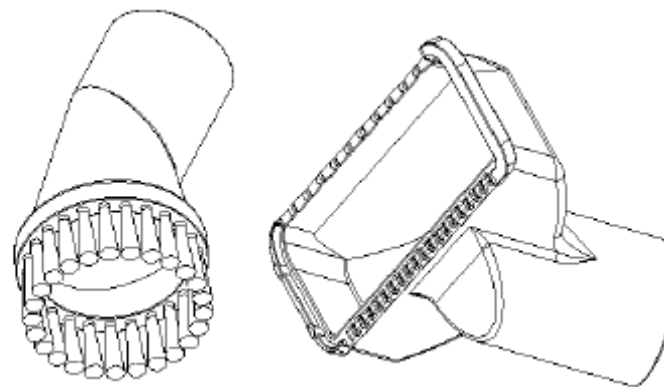

1.

 
Кнопка Ввімк/Вимк

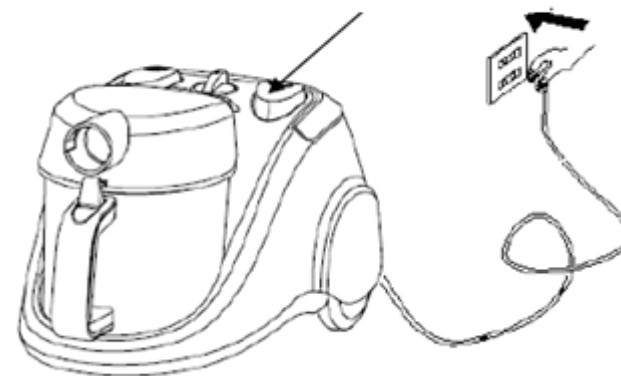


2.



 Кнопка змотування шнура

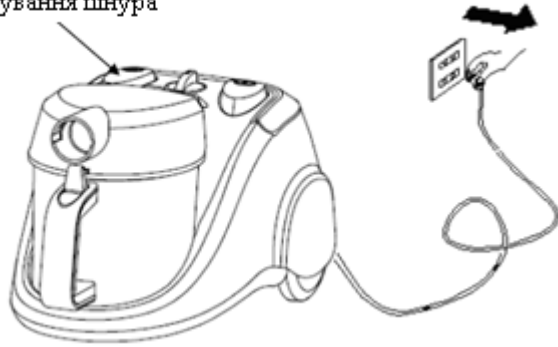

 1.

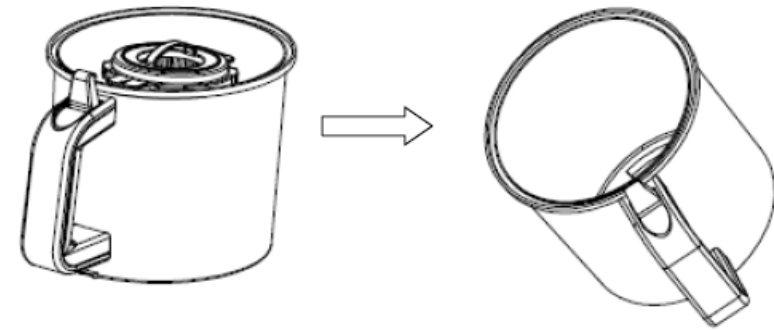

3. HEPA-  
4.  
5.

 
2. HEPA- HEPA- /

HEPA-  
HEPA- )


3.  
(1)  
(2) HEPA-

HEPA-

Кнопка фіксації

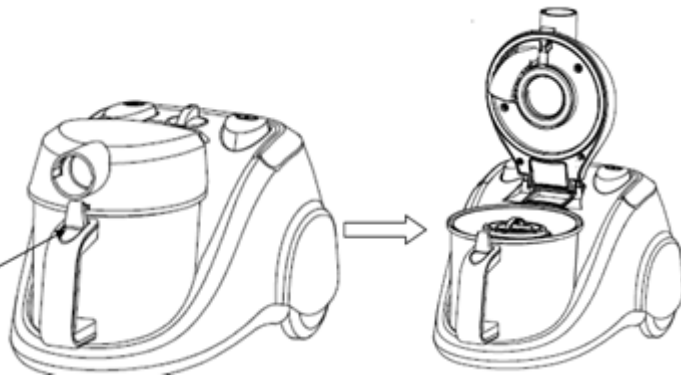


 1.  
2.

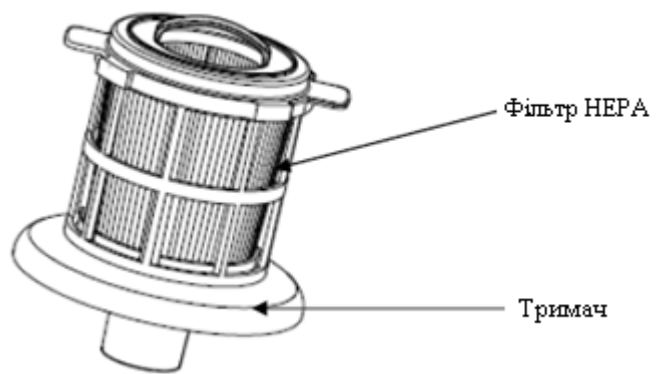


Фільтр HEPA

 Тримач


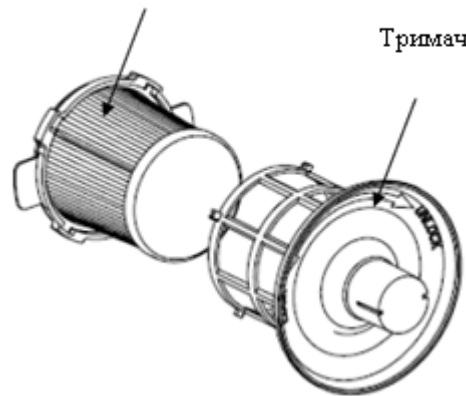


 (3) HEPA-

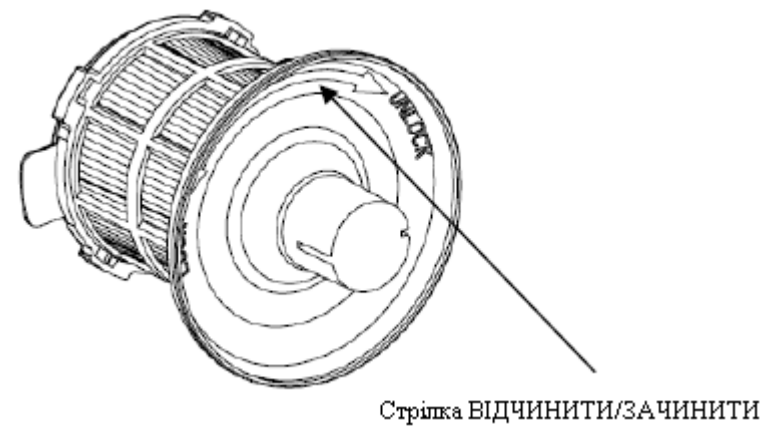


Стрілка ВІДЧИНІТИ/ЗАЧИНІТИ

  
(4) HEPA-  
HEPA-  
(HEPA-  
(5) HEPA-

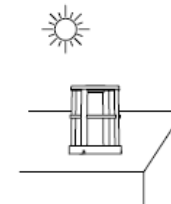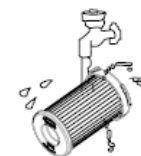

 4. HEPA-  
(1)  
(2)

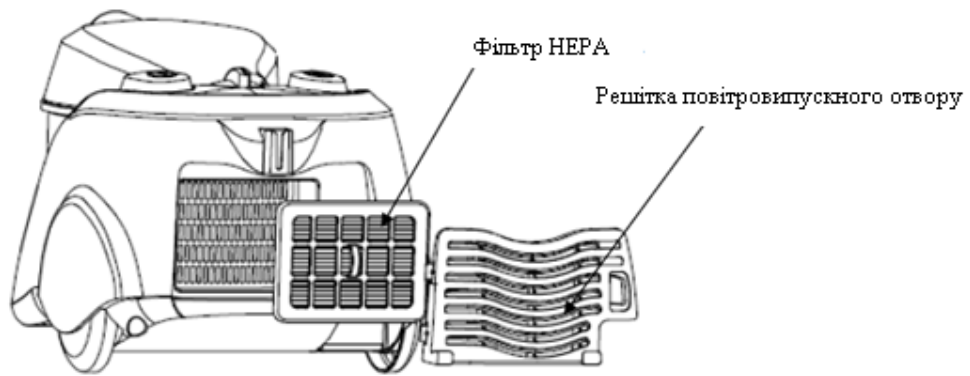

 (3) HEPA-

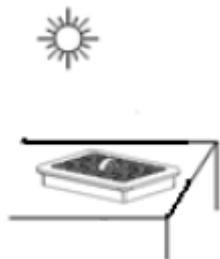

(4) HEPA )

: 220-230  
 : 50  
 : 2000  
 : 9

.....1 .  
 .....1 .  
 .....1 .  
 .....1 .

**Безпечне для навколишнього середовища видалення**



Ви можете допомогти в охороні навколишнього середовища!

Будьте люб'язні, дотримуйтесь місцевих правил: передавайте непрацююче електричне обладнання у відповідний центр видалення відходів.



Виробник залишає за собою право вносити зміни в технічні характеристики і дизайн виробів.