

**BenQ** DC E41 Digital Camera  
User's Manual

# Welcome

## Copyright

Copyright 2004 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of this company.

## Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of this company to notify any person of such revision or changes.

\*Windows, Internet Explorer and Outlook Express are trademarks of Microsoft Corporation. Others are copyrights of their respective companies or organizations.

## Taking Care of Your Camera

- Do not use your camera at temperatures below 0°C or above 40°C.
- Do not use or store your camera in the environments listed below:
  - Direct sunlight
  - High and dusty places
  - Next to an air conditioner, electric heater or other heat sources
  - In a closed car that is directly under the sun
  - Unstable locations
- If your camera becomes wet, wipe it with dry cloth as soon as possible.
- Salt or seawater may cause severe camera damage.
- Do not use organic solvents, such as alcohol, etc., to clean your camera.
- If the lens or viewfinder is dirty, use a lens brush or soft cloth to clean the lens. Do not touch the lens with your fingers.
- To prevent electrical shock, do not attempt to disassemble or repair your camera by yourself.
- Water may cause a fire or electric shock. Therefore, store your camera in a dry place.
- Do not use your camera outdoors when it is raining or snowing.
- Do not use your camera in or near water.
- If a foreign substance or water gets in your camera, please turn the power off immediately and disconnect the batteries and the transformer. Remove the foreign substance or water, and send it to the maintenance center.
- Transfer the data to the computer as soon as possible to avoid losing your image data.

# Table of Contents


<b>1</b>	<b>TOURING YOUR DC E41</b>	<b>1</b>
1.1	Checking the Package Contents	1
1.2	DC E41 Components	2
1.2.1	Front View	2
1.2.2	Rear View	2
1.2.3	Using the Mode Switch	3
1.2.4	Indicator LED Status	3
1.2.5	Using the Stylus	3
1.2.6	Using the Navigation Button	4
1.2.7	Using the Touch Screen	4
<b>2</b>	<b>PREPARING YOUR DC E41 FOR USE</b>	<b>5</b>
2.1	Inserting the Battery	5
2.2	Using an AC Power Adapter	6
2.3	Charging the Battery	6
2.4	Inserting an SD Memory Card	7
2.5	Attaching the Hand Strap	8
2.6	Setting the Date and Time	9
2.7	Turning the Camera On	9
<b>3</b>	<b>TAKING PHOTOS</b>	<b>10</b>
3.1	Photo Mode	10
3.2	Taking Photos	10
3.3	About the LCD Screen Icons	11
3.4	Switching the LCD Display Mode	13
3.5	Selecting Auto or Manual Photo Mode	13
3.6	Selecting the Scene Mode	14
3.7	Using the Flash	14
3.8	Using the Digital Zoom	15
3.9	Using the Self-Timer	16
3.10	Continuous Shots	16
3.11	Image Size	17
3.12	Image Quality	18
3.13	White Balance	18
3.14	ISO Setting	19
3.15	Photo Effect	20
3.16	EV Bias	20
3.17	Metering	21
3.18	Date Imprint	22
3.19	Macro and Normal Modes	22
3.20	Quick Review and Erase	23
<b>4</b>	<b>RECORDING MOVIE CLIPS</b>	<b>24</b>
4.1	Movie Recording Mode	24
4.1.1	Manual and Automatic Movie Recording Modes	25
4.1.2	Movie Recording Mode Camera Settings	25
<b>5</b>	<b>RECORDING SOUND CLIPS</b>	<b>26</b>
5.1	Sound Recording Mode	26

<b>6</b>	<b>PLAYING BACK PHOTOS, MUSIC, MOVIE AND SOUND CLIPS</b>	<b>28</b>
6.1	Viewing Photos	28
6.1.1	Zoom and Pan	29
6.1.2	Viewing Thumbnails	30
6.2	Viewing Movie Clips	31
6.3	Listening to Sound Clips	32
6.4	Special Playback Functions	33
6.4.1	Scrawling	34
6.4.2	Adding a Frame	36
6.4.3	Adding a Voice Memo	37
6.4.4	Listening to Voice Memos	38
6.4.5	Erasing Voice Memos	38
6.4.6	Playing a Slide Show	39
6.4.7	Locking and Unlocking Files	39
6.4.7.1	Locking a Single File	39
6.4.7.2	Locking all Files	40
6.4.7.3	Unlocking Single Files	40
6.4.7.4	Unlocking all Files	40
6.4.8	Erasing Single Files	41
6.4.9	Erasing All Files	41
6.5	Listening to Music	42
6.5.1	Transferring MP3 files to the Camera	42
6.5.2	Playing MP3 Files	42
<b>7</b>	<b>CAMERA SETTINGS</b>	<b>44</b>
7.1	Memory: Copying and Formatting	45
7.2	Setting the Date and Time	46
7.3	Date Format	46
7.4	LCD Brightness	47
7.5	Sound	47
7.6	File No. Reset	47
7.7	Audio/Video Output	48
7.8	Power Saving	48
7.9	Language	49
7.10	Default Setting	49
7.11	Software Version	50
7.12	Screen Calibration	50
<b>8</b>	<b>CONNECTING TO A TV</b>	<b>51</b>
<b>9</b>	<b>CONNECTING TO A COMPUTER</b>	<b>52</b>
9.1	Installing the Digital Camera Software	52
9.2	Bundled Software	53
9.3	Transferring Files To/From a Computer	54
9.3.1	Transferring Photos, Movie Clips, Sound Clips, and Music Files	54
9.3.2	Using the QLink Software	55
9.3.3	Using the QLink Frame	56
<b>10</b>	<b>TROUBLESHOOTING</b>	<b>58</b>
<b>11</b>	<b>SPECIFICATIONS</b>	<b>59</b>
11.1	System Requirements	59
<b>12</b>	<b>SERVICE INFORMATION</b>	<b>60</b>

## 1 TOURING YOUR DC E41

### 1.1 Checking the Package Contents

The package includes the following items:

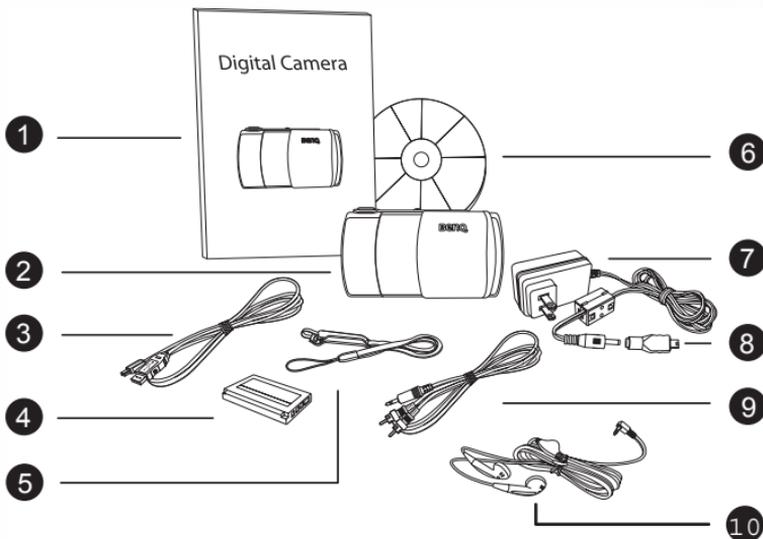


1. User's manual
2. DC E41 digital camera
3. USB cable
4. Lithium-ion battery (rechargeable)
5. Hand strap with stylus
6. DC E41 software CD-ROM
7. AC power adapter
8. USB converter
9. AV cable
10. Earphones

If anything is missing or appears damaged, contact your dealer. Save the packaging in the event you need to ship your camera for service.

## 1.2 DC E41 Components


### 1.2.1 Front View

1. Shutter button
2. Power button
3. Mode switch
4. Indicator LED
5. Microphone
6. Flash
7. Earphone Jack/TV out
8. Normal/macro switch
9. Lens
10. Speaker
11. Self-timer indicator LED / Video or sound recording on
12. Lens cover

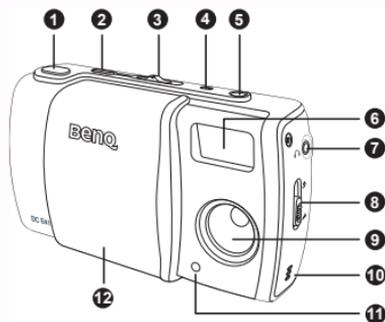

### 1.2.2 Rear View


1. Microphone
2. Indicator LED
3. Mode switch
4. Power button
5. Shutter button
6. Zoom/flash/review/navigation button
7. Battery/SD card cover
8. USB/charger port
9. Touch panel/LCD screen
10. Hand strap attachment

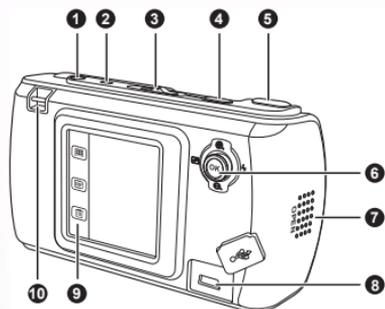

### Note

- The LCD on the digital camera is manufactured with sophisticated technology, however, the display may have some light spots or show unusual colors. This is normal and does not indicate display malfunction, nor will this affect the pictures you take with the camera.
- The Indicator LED displays the current status of the camera.

### 1.2.3 Using the Mode Switch
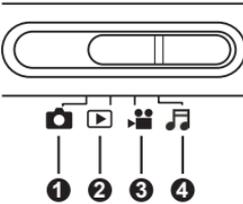
<b>1</b>		Snapshot Mode	Take photographs in manual or automatic mode. ➔ page 10	
<b>2</b>		Playback Mode	Replay photos, movie clips and sound clips stored in memory. ➔ page 28	
<b>3</b>		Recording Mode	Record movie and sound clips. ➔ page 24	
<b>4</b>		Music Mode	Play audio files. ➔ page 26	

### 1.2.4 Indicator LED Status


Status	Top Indicator LED (Green)	Top Indicator LED (Orange)	Front Indicator LED (Red)
Always On	Power is on, ready to use	Battery is charging	Recording movie or sound clip.
Fast Blinking	Processing data	Error/Warning or Low Power	—
Slow Blinking	—	Flash is charging	—
Slowest Blinking	—	AC adapter or USB cable attached with no battery	—

### 1.2.5 Using the Stylus

Use the stylus attached to the included hand strap to perform operations on the touch screen. You can also use your finger, but the stylus is more accurate and won't cause fingerprints on the screen.

Unfold the stylus from the clip to use it.


Operate the touch screen by tapping an icon with the stylus. Some features require tapping and holding an icon to change its value, and other icons, such as sliders, require tapping and dragging with the stylus to adjust the slider value.

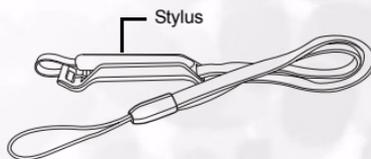

## 1.2.6 Using the Navigation Button


You can use the Navigation button to highlight an icon on the screen and then press OK (push the Navigation button) to select it.

Pressing Up/Down or Left/Right also adjusts values such as the zoom factor or EV bias.

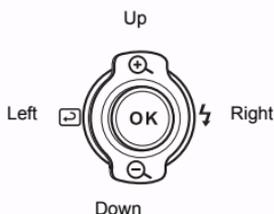

## 1.2.7 Using the Touch Screen

BenQ DC E41 is equipped with a touch-sensitive LCD screen that enables you to change your camera's settings and features quickly and conveniently. Tap the three buttons below the screen to access the following features:

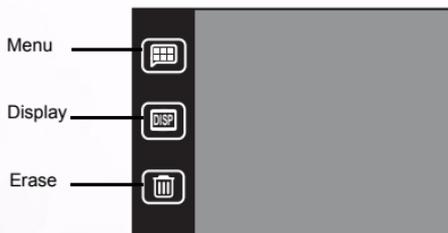

Icon	Name	Description
	Display	Tapping the Display button switches the LCD information display mode between Icons On, Icons Off or All Off.
	Menu	Tapping the Menu button turns DC E41's on-screen menu system off and on in any camera mode.
	Erase	Tapping the Erase button erases the currently displayed photo, movie clips, or sound clips from memory.


## 2 PREPARING YOUR DC E41 FOR USE

The lithium ion battery included with the DC E41 allows you to take photos, record movie and sound clips. Use the AC adapter whenever possible to conserve battery power.

### 2.1 Inserting the Battery

1. Turn the camera off.
2. Slide the battery cover in the direction of the arrow **A** and open the battery/SD card cover **B**.
3. Push the battery latch in the direction of the arrow **C** and insert the battery in the correct orientation as shown **D** with the notches facing up. If the battery is inserted incorrectly, the latch will not close.
4. Close the battery/SD card cover **E**.

To remove the battery: open the battery cover and push the battery latch. The battery pops out slightly; remove the battery.

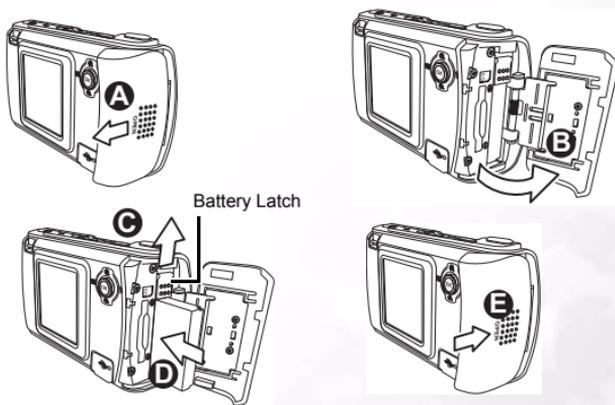

#### Note

- Use only the specified battery type (lithium-ion battery).
- If you are not going to use the battery for an extended time, remove it from the camera to prevent leakage or corrosion.
- Avoid using the battery in extremely cold environments. Low temperatures reduce battery life and performance.


## 2.2 Using an AC Power Adapter

The BenQ DC E41 comes with an AC power adapter that both powers the camera and recharges the battery. Connect the power adapter to the DC E41 as shown below.


1. Turn the camera off.
2. Connect the included USB converter to the power adapter connector **A**.
3. Plug the power adapter into a power outlet **B**.
4. Connect the USB adapter to the USB port at the back of the camera **C**.

### Note

- Use only the AC power adapter specified for the camera. Damage caused by the use of an incorrect adapter is not covered under the warranty.
- Dual Charging Mode allows you to charge the battery when transferring files to or from a computer through the included USB cable.

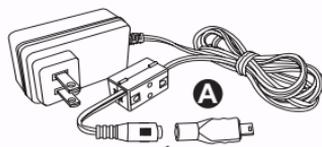

Connect the USB converter to the power adapter connector.

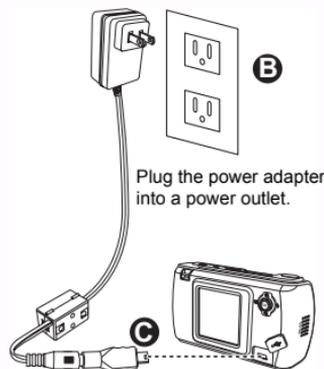

Plug the power adapter into a power outlet.

Connect the USB adapter to the USB port.

## 2.3 Charging the Battery

1. Turn the camera off.
2. Insert the battery as described on page 5.
3. Connect the AC power adapter as described in the section above, or connect the included USB cable to a computer USB port as described in “Transferring Files To/From a Computer” on page 54.

The Indicator LED at the top of the camera is orange while the camera is charging. When charging is complete, the LED turns off.




### Note

- Use only the AC power adapter specified for the camera. Damage caused by the use of an incorrect adapter is not covered under the warranty.
- The battery may not begin charging immediately if it is too hot. In this case, let the camera cool before charging the battery.
- When using the AC power adapter, the camera must be turned off in order to charge the battery.
- When connected to a PC with the USB cable, the battery will charge if the camera is either on or off.


## 2.4 Inserting an SD Memory Card

All images, movies, and sound clips taken by the camera can be stored in an SD (Secure Digital) memory card as well as in the camera's internal memory. Files stored on the SD card remain even if the camera's power is turned off.

1. Turn the camera off.
2. Slide the battery/SD card cover in the direction shown **A** and open the cover **B**.
3. Insert an SD card **C**:
  - The front side of the SD card (the side with the label) should be facing the front of the camera.
  - If the card does not slide into the slot, turn it around and try again.
4. Close the battery/SD card cover.

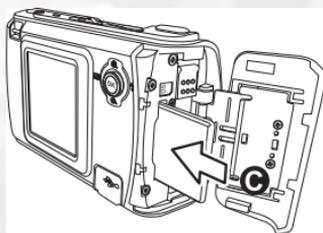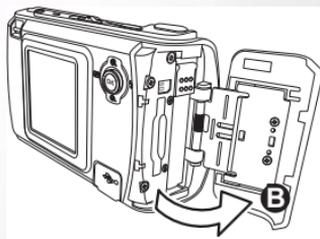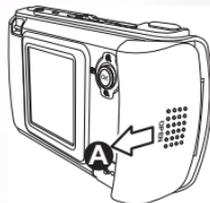


5. To remove the SD card, make sure the camera is turned off, open the battery/SD card cover, and press down lightly on the exposed edge of the card. The card will eject itself **D**.

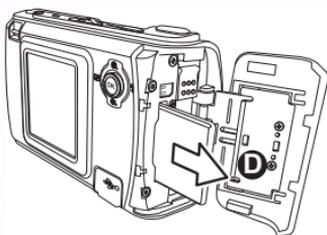

### Note

- To prevent data from being accidentally erased from the SD card, slide the write-protect tab to the “LOCK” position.
- The SD card must be unlocked in order to save, edit, or erase data.
- Format new SD cards using the camera’s format function before use. See “Memory: Copying and Formatting” on page 45 to learn how to format SD cards.


Press the tab in the direction of the arrow on the card to write protect the SD Memory Card.

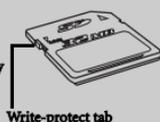

## 2.5 Attaching the Hand Strap

Always use the hand strap to prevent accidentally dropping the camera. The hand strap is also a good way to keep your stylus nearby.

1. Thread the small loop of the hand strap through the strap eyelet at the top left corner of the rear of the camera **A**.
2. Pull the stylus and large loop through the small loop until the strap is firmly secured **B**.

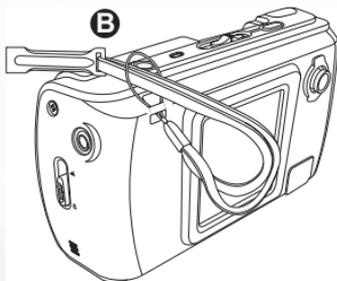



## 2.6 Setting the Date and Time

Before using your camera for the first time, set the date and time. For instructions, see “Setting the Date and Time” on page 46.

## 2.7 Turning the Camera On

Press and hold the Power button for two seconds to turn the camera on or off.

Sliding the lens cover **A** open and closed also turns the camera on or off.

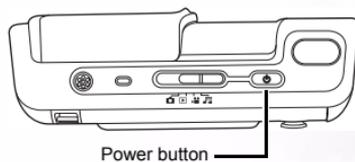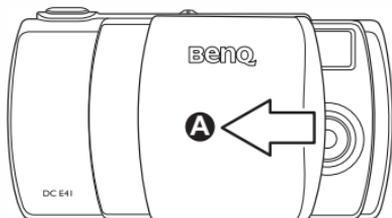

## 3 TAKING PHOTOS

This chapter describes the camera operating modes, and explains how to take pictures, record movie clips and sound clips, play back photos, movies and sound clips.

### 3.1 Photo Mode

Two photo modes are available: Auto mode **(A)** and Manual mode **(M)**.

In **Auto mode (A)**, all camera settings, such as focus and white balance, are automatically selected by the camera. Auto mode is suitable for photography beginners and for quick and easy snapshots.

**Manual mode (M)** allows you to adjust individual camera settings, such as focus metering and EV bias, in order to attain special photographic effects, or to fine-tune results to match specific lighting conditions.

This chapter describes the camera settings that are available in each photo mode.



#### Note

- Some settings can be changed only when the camera is in Manual mode **(M)**. These include White Balance, ISO Setting, EV Bias, and Metering.

### 3.2 Taking Photos


Before taking any photos, make sure the battery is charged, that an SD card is properly installed if needed, and that the lens cover is open **(A)**.

- Turn the camera on by pressing the Power button if necessary.
- Frame the shot in the LCD screen.
- Press the Shutter button down halfway **(B)**. Pressing the shutter button down halfway starts focus and exposure adjustments.
- Press the Shutter button completely down. The camera makes a shutter sound and the image freezes on the LCD screen for a few moments while the image is transferred to memory. The camera is then ready to take another shot.

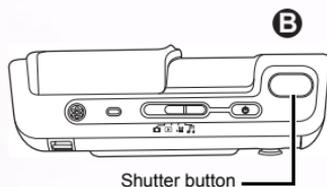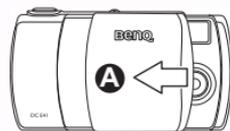

### 3.3 About the LCD Screen Icons

The LCD screen displays icons that show the camera's current settings. The diagram below shows all of the icon types available in Snapshot mode. Refer to the table on the following page for a complete description of each.

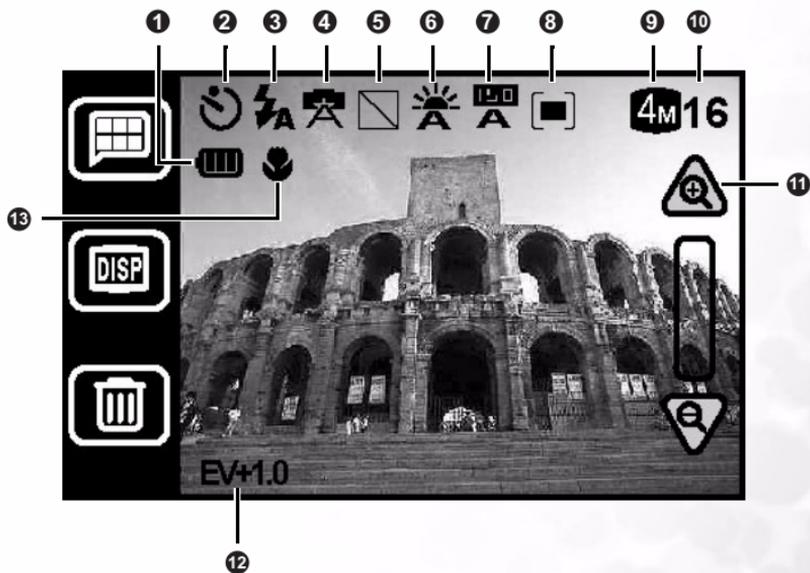

The following table shows all of the Snapshot mode icons that can be shown on the LCD screen. For more information, refer to the indicated page number.

Setting	Mode	Icon	Page
① Battery Level	Full		6
	2/3		
	1/3		
	Empty		
② Capture Mode	Single Shot		16
	Continuous		
	Self-Timer On		
	Continuous Self-Timer On		
③ Flash Mode	Auto		14
	Red-Eye Reduction		
	Forced On		
	Off		
④ Scene	Auto		14
	Sport		
	Landscape		
	Portrait		
	Back Light		
	Night Scene		
⑤ Photo Effect	Normal		20
	B&W		
	Sepia		
	Vivid		
⑥ White Balance	Auto		18
	Sunny		
	Cloudy		
	Tungsten Light		
	Fluorescent Light		
⑦ ISO Setting	Auto		19
	100		
	200		
⑧ Metering	Center Average		21
	Center Spot		
	Average		
⑨ Image Size	2848x2136		17
	2304x1728		
	1600x1200		
	1280x960		
⑩ Shots Remaining	[number]		5
⑪ Zoom	Zoom In		15
	Zoom Out		
⑫ EV bias	-2 ~ +2		20
⑬ Macro			22

### 3.4 Switching the LCD Display Mode

The camera setting icons can be turned off by pressing the Display button  to switch between display modes:



#### Note

- The image on the LCD screen may appear dark when used in sunlight or bright lighting. This is not a malfunction. You can adjust the brightness of the LCD screen as shown on page 47.
- Using the LCD screen for extended periods consumes battery power and therefore decreases the number of photos you can take. To conserve battery power, turn the LCD screen off when not taking photos.

### 3.5 Selecting Auto or Manual Photo Mode

1. Tap the Menu button .
2. Tap the Manual/Auto icon  / .
3. Select Manual  or Auto . The menu screen appears with the mode icon you chose.
4. Tap the Return icon  to exit the menu and return to Snapshot mode. The camera setting icons on the LCD screen show the current camera settings for the Photo mode you chose.



#### Note

To enable full control of camera setting in Snapshot mode, always select Auto Scene mode  (see “Selecting the Scene Mode” on page 14). Some camera settings cannot be changed when other Scene modes are selected.



### 3.6 Selecting the Scene Mode

The camera automatically adjusts settings for optimum results when capturing certain types of photographs, or scenes. The DC E41 offers six different Scene modes.

1. Tap the Menu button .
2. Tap the Scene icon .
3. Select the Scene mode. The menu screen appears with the mode icon you chose.
4. Tap the Return icon  to exit the menu and return to Photo mode. The camera setting icons on the LCD screen show the current camera settings for the Photo mode you chose.



All Scene modes except Auto Scene mode override the Flash settings. If you want to change the Flash setting, you must select Auto Scene mode . See 3.7 “Using the Flash” for more information on Flash settings.


Icon	Scene Mode	Description
	Auto	Select this mode to allow the camera to adjust all settings automatically.
	Portrait	Select this mode when taking photos of people.
	Landscape	Select this mode to take photos of distant scenery or landscapes in day-time.
	Sport	Select this mode to take photos of fast-moving subjects such as runners or cars. Sport mode is not suitable for indoor photography.
	Backlight	Select this mode to take photos in which the light source is behind the subject.
	Night Scene	Select this mode to take photos of subjects with a dark or poorly-lit background.

### 3.7 Using the Flash

Use the flash to brighten photos of subjects taken in dark or non-optimal lighting conditions. The DC E41 is equipped with four Flash settings that can be used in both Auto and Manual Photo modes.

The Scene mode must be set to Auto  in order to change the flash setting manually. Also note that the Flash setting can't be changed manually if it is set to Auto Flash mode.

1. Press the Navigation button to the right to change the Flash setting.

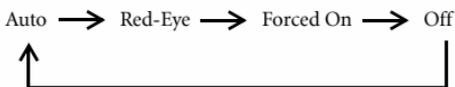

Press to the right to change the flash setting

2. The LCD screen icon shows the current Flash setting.

Icon	Flash Setting	Description
	Auto	The flash fires automatically according to the ambient light conditions. In some Scene modes (for example Portrait), Red-Eye Reduction is automatically selected.
	Red-Eye Reduction	The flash fires several times in quick succession before firing the main flash. This helps to avoid the phenomenon of eye pupils appearing red in photographs.
	Forced On	The flash fires regardless of the light conditions. Select this setting to take photos of high contrast subjects (back lighting) or dark shadows.
	Off	The flash does not fire. Choose this setting when taking photos in areas where flash photography is prohibited, or when the distance to the subject is beyond the effective range of the flash.

### Note

- You can change the flash setting only when the Scene mode is set to Auto .
- In Continuous Shot mode (see page 16), the flash is set to Off .
- Do not use the flash at close distances from young children.

## 3.8 Using the Digital Zoom

The DC E41 is equipped with a 4x digital zoom that enlarges images so that the subject appears to be closer.

1. Set the Photo mode (see page 13).
2. Frame the subject in the LCD screen.
3. Tap the Zoom In or Zoom Out icon on the LCD to adjust the zoom. You can also use the Navigation button to zoom in or out.
4. The zoom slider on the LCD moves up or down to indicate the zoom level.


### Note

- The zoom function is disabled when the image size is set to 6M . See “Image Size” on page 17.

### 3.9 Using the Self-Timer

The self-timer enables you to put yourself in the picture. When the Self-Timer is turned on, the camera takes the photo 10 seconds after the Shutter button is pressed.

1. Tap the Menu button .
2. Tap the Self-Timer icon .
3. Select On  or Off . The menu screen appears with the Self-Timer icon you chose.
4. Tap the Return icon  to exit the menu and return to Photo mode. The Self-Timer icon appears on the LCD screen.
5. Press the shutter button down halfway to focus, then press it down fully. The red Self-Timer indicator LED at the front of the camera blinks slowly for five seconds, and then quickly for five seconds before the camera takes the shot. A countdown timer also appears on the LCD screen. Press OK to cancel the Self-Timer.

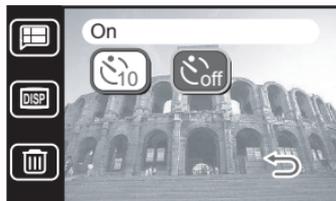

### 3.10 Continuous Shots

Use Continuous Shot mode to take two consecutive photos in rapid succession. This is used for take photos of fast moving objects.

1. Tap the Menu button .
2. Tap the Continuous Shot icon .
3. Select On  or Off . The menu screen appears with the Continuous Shot icon you chose.



4. Tap the Return icon  to exit the menu and return to Photo mode. The Continuous Shot mode icon appears on the LCD screen.
5. Press the shutter button down halfway to focus, then press it down fully. The camera takes two photos in rapid succession. When complete, a timer icon appears on the LCD for a few moments while the photos are processed.



### Note

- The flash is set to Off  when Continuous Shot mode is turned on.
- You can use the Self-Timer  function to take continuous shots.
- The continuous shot function cannot be used in Back Light Scene Mode.

## 3.11 Image Size

The DC E41 allows you to choose from four different image sizes, or resolutions. Higher resolution photos require more memory, so your camera will store fewer high resolution photos than lower resolution photos but the quality will be better.

1. Tap the Menu button .
2. Tap the Image Size icon .
3. Select the image size. The menu screen appears with the Image Size icon you chose.



Icon	Image Size	Icon	Image Size
	6M 2848x2136		2M 1600x1200
	4M 2304x1728		1M 1280x960

### Note

- Use a lower image size if you want to store more photos in a limited amount of memory.
- Continuous Shot mode  cannot be used when the image size is set to 6M (2848x2136) .

### 3.12 Image Quality

In addition to Image Size, you can also set the Image Quality, also known as the compression ratio. Higher quality (lower compression) images require more memory storage than lower quality (higher compression) images for images that are the same size (e.g. 2848x2136).

1. Tap the Menu button .
2. Tap the Image Quality icon .
3. Select the Image Quality setting. The menu screen appears with the Image Quality icon you chose.

Icon	Image Quality	Description
	Fine	lower compression
	Normal	higher compression

### 3.13 White Balance

White balance is a measure of the ‘coolness’ of white light. If your photos have a reddish tinge, it probably means that the white balance is set incorrectly.

1. Make sure the camera is in Manual mode , and that Scene mode is set to Auto .
2. Tap the Menu button , then tap the Next icon .
3. Tap the White Balance icon .
4. Select the White Balance setting. The menu screen appears with the White Balance icon you chose.



Icon	White Balance	Description
	Auto	Automatically adjusts the white balance.
	Sunny	Suitable for bright daylight conditions.
	Cloudy	Suitable for cloudy, twilight, or shady conditions.
	Tungsten Light	Suitable for subjects lit by tungsten (incandescent) lighting.
	Fluorescent Light	Suitable for subjects lit by fluorescent lighting.

### Note

To adjust the white balance, the camera must be set to Manual Photo mode  with the Scene mode set to Auto .

## 3.14 ISO Setting

The camera's sensitivity to light is configured by the ISO setting.

1. Make sure the camera is in Manual mode , and that Scene mode is set to Auto .
2. Tap the Menu button , then tap the Next icon .
3. Tap the ISO Setting icon .
4. Select the ISO setting. The menu screen appears with the ISO Setting icon you chose.




Icon	ISO Setting	Description
	Auto	Automatically sets the ISO value.
	100	Equivalent to color ISO100 film. Use for outdoor photography in bright sunlight.
	200	Equivalent to color ISO200 film. Use for outdoor or brightly lit indoor photography.

### 3.15 Photo Effect

The DC E41 enables you to apply a tone or color to your photos to create an artistic effect.

1. Tap the Menu button , then tap the Next icon .
2. Tap the Photo Effect icon .
3. Select the Photo Effect. The menu screen appears with the Photo Effect icon you chose.

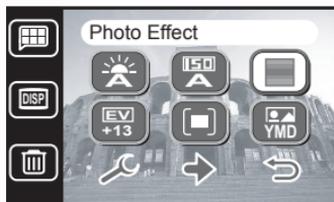

Icon	Photo Effect	Description
	Normal	Standard RGB color settings suitable for general photography.
	B&W	Black and white photos (with shades of grey).
	Sepia	Produces a warm, old-fashioned style of photo in which the colors are more brown and orange.
	Vivid	Produces sharper and more vibrant colors.

### 3.16 EV Bias

EV (exposure value) bias enables you to lighten or darken an image. Use this setting when the brightness between the subject and the background is not balanced or when the subject occupies only a small part of the photograph.

Use a positive (+) EV bias for:

- printed text (black type on white background)
- backlit portraits
- very bright scenes (such as snow) and highly reflective subjects (such as polished metal)
- shots made up predominantly of sky

Use a negative (-) EV bias for:


- spotlight subject, especially against dark backgrounds
- scenes with low reflectivity, such as green or dark foliage

The DC E41 supports the following EV values: -2.0, -1.6, -1.3, -1.0, -0.6, -0.3, 0.0, 0.3, 0.6, 1.0, 1.3, 1.6, and 2.0.

1. Make sure the camera is in Manual mode (M), and that Scene mode is set to Auto (A).
2. Tap the Menu button (☰), then tap the Next icon (➡).
3. Tap the ISO Setting icon (ISO).
4. Use the stylus or Navigation button to increase (▲) or decrease (▼) the value.
5. Tap OK to set the value. The menu screen appears with the ISO Setting icon you chose.
6. Tap the Return icon (↶) to exit the menu and return to Photo mode. The EV bias value appears in the bottom left corner of the LCD screen.



EV Bias value

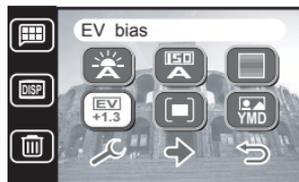

### 3.17 Metering

Metering enables you to adjust the region of the subject or frame on which the camera measures light.

1. Make sure the camera is in Manual mode (M), and that Scene mode is set to Auto (A).
2. Tap the Menu button (☰), then tap the Next icon (➡).
3. Tap the Metering icon (☐).
4. Select the Metering mode. The menu screen appears with the Metering icon you chose.




Icon	Metering Mode	Description
	Center Average	The camera metering is set for the average brightness of objects in the center region of the frame.
	Center Spot	The camera metering is set for the brightness of the object at the center of the frame.
	Average	The camera metering is set for the average brightness of all objects in the frame.

### 3.18 Date Imprint

You can automatically print the current date on the bottom right corner of photos you take.

1. Tap the Menu button , then tap the Next icon .
2. Tap the Date Imprint icon .
3. Select the Date Imprint On  or Off . The menu screen appears with the setting you chose.

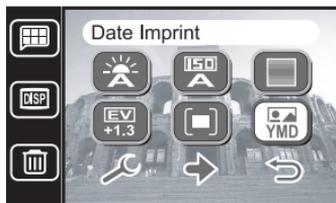

#### Note


For instructions on changing the date format, see page 46.

### 3.19 Macro and Normal Modes

A switch on the side of the DC E41 enables you to change between Macro  and Normal  modes.

Use Macro  for close-up shots of people or objects within 40 cm (15 inches) of the camera lens.

Normal mode  should be used for all photos of subjects more than 120 cm (48 inches) from the lens.

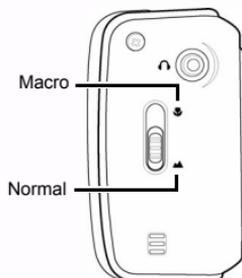


#### Note

- After taking a photo in Macro mode , remember to switch back to Normal mode  to avoid taking photos that are not in focus.
- Scene Mode is not available in Macro Mode . If you switch to Macro Mode , Scene Mode is automatically set to Auto Scene Mode .

### 3.20 Quick Review and Erase

After taking a photo you can review it on the LCD screen. If you don't want to keep the photo, you can delete it in order to make more memory available.

1. Take a photo and wait a few moments for the camera to finish processing it.
2. Press the Navigation button to the left **A**. The photo you just took appears on the screen.
3. To delete the photo, tap the Erase button  below the LCD screen **B**.
4. You are asked to confirm the delete action. Tap Yes to delete the photo, or press No to cancel.

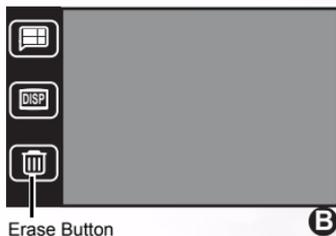


#### Note

- Deleting unwanted photos makes more memory available for storing additional photos.
- Deleting a photo cannot be undone.
- You can also delete photos at any time by using the Erase function in Playback mode. See “Erasing Single Files” on page 41 and “Erasing All Files” on page 41.

## 4 RECORDING MOVIE CLIPS


Switching the camera to Recording mode  allows you to record movie clips. The length of the recording depends on the amount of memory remaining on the installed SD memory card, or in the camera's built-in internal memory.

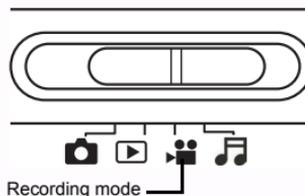

### 4.1 Movie Recording Mode

Follow these steps to record a movie clip.

1. Turn the camera on.
2. Set the Mode switch to Recording mode  and choose "Movie". The movie clip recording screen appears.

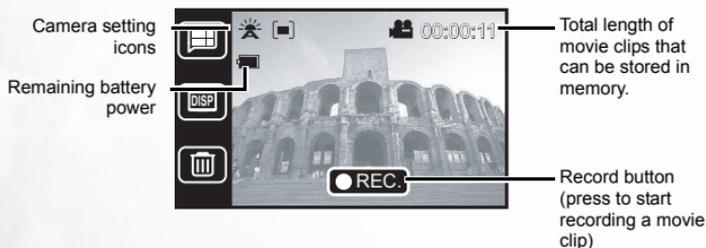

3. Frame the subject in the LCD screen and tap the record button  to begin recording the movie clip. You can also press OK (push the Navigation button) or the shutter button to start recording.
4. The elapsed recording time appears in red at the top right corner of the LCD screen.
5. Tap the stop button  to finish recording. You can also press OK or the shutter button to stop recording. The camera takes a few moments to process the movie clip.

#### Note

- In Movie Recording mode , the flash is automatically set to Off .
- Zoom is disabled in Movie Recording mode .

### 4.1.1 Manual and Automatic Movie Recording Modes

While in Movie Recording mode, setting the camera to Manual enables you to adjust white balance, EV bias, and metering. The camera automatically adjusts these values when it is set to Auto.

1. In Movie Recording mode , tap the Menu button  to display the Movie mode menu.
2. Tap the Manual/Auto icon  / .
3. Select Manual  or Auto . The menu screen appears with the icon you selected.
4. Press the Return icon  to exit the menu, or press another icon to change other settings.



### 4.1.2 Movie Recording Mode Camera Settings

To adjust the white balance, EV bias, and metering in Movie Recording mode, follow the instructions given in Snapshot mode.


Icon	Setting	Page
	White Balance	18
	EV Bias	20
	Metering	21

#### Note

- To adjust camera settings in Movie Recording mode , you must first select Manual mode . See “Manual and Automatic Movie Recording Modes” on page 25.
- If you change the White Balance, EV Bias, or Metering settings in Movie Recording mode, the settings will also be changed in Snapshot mode and vice-versa.

## 5 RECORDING SOUND CLIPS


Switching the camera to Recording mode  allows you to record sound clips. The length of the recording depends on the amount of memory remaining on the installed SD memory card, or in the camera's built-in internal memory.

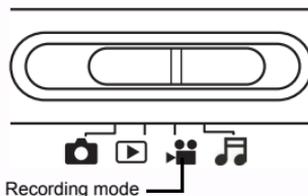

### 5.1 Sound Recording Mode

Sound Recording mode allows you to use the DC E41 as a voice recorder. Sound recordings are saved on the installed SD memory card or in the camera's internal memory.

Sound is recorded by the built-in microphone located at the top of the camera.

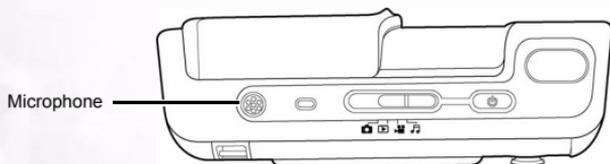

Follow these steps to record a sound clip.

1. Turn the camera on.
2. Set the Mode switch to Recording mode  and choose "Sound". The sound clip recording screen appears:



3. Tap the record icon  to begin recording the sound clip. You can also press OK to start recording (push the Navigation button), or press the shutter button.
4. The elapsed recording time appears in red next to the microphone icon in the center of the LCD screen.

5. Tap the stop icon , press OK, or press the shutter button to finish recording. The available remaining recording time at the top right corner of the LCD screen is updated.

### Note

- You cannot record a movie or sound clips with a length of less than 3 seconds.
- Movie or Sound clips will become damaged if you switch off power during the recording process.

## 6 PLAYING BACK PHOTOS, MUSIC, MOVIE AND SOUND CLIPS


In Playback mode, the DC E41 can:

- display photos on the LCD screen
- play movie clips on the LCD screen
- play sound clips through the built-in speaker

To use Playback mode, set the Mode switch to Playback mode  and turn the camera on.

Playback mode works with the lens cover open or closed.

In Playback mode you can review all of the images, movies, and sound clips stored in the camera's internal memory or on the installed SD memory card. Files are played back in the order in which they were recorded.

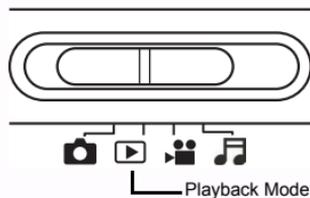


### Note

- Close the camera lens cover and turn the camera on by pressing the Power button in Playback mode to protect the lens from dust and accidental damage.

### 6.1 Viewing Photos

When viewing photos in Playback mode, the LCD screen displays information about the photo as well as navigation and zoom controls.

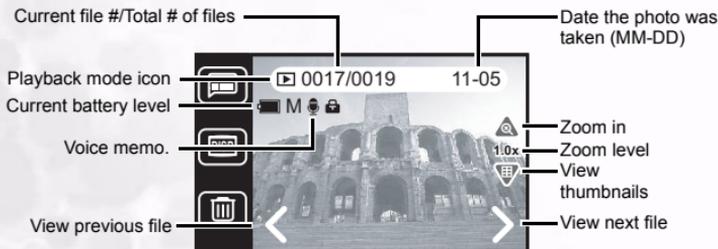

1. Set the Mode switch to Playback mode .
2. The most recently recorded file appears on the LCD screen.

- Press Next  $\blacktriangleright$  to view the next image, or press Previous  $\blacktriangleleft$  to go back one image. You can also press the Navigation button to the left or right to scroll forward or back.


### Note

- Press the Display button  $\text{DISP}$  to turn off the icons and view the photo only. When the icon is off, use the Navigation button to view the next or previous image.

## 6.1.1 Zoom and Pan

When a photo is displayed on the LCD screen in Playback mode, you can zoom in or out, and pan up, down, left, or right across the image to view it in closer detail.

- Tap the Zoom icon  $\text{Q}$  or press the Navigation button up. The zoom and pan controls appear on the LCD screen.

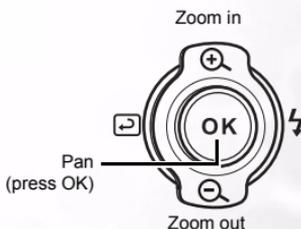

- Tap the Zoom in  $\blacktriangleup$  or Zoom out  $\blacktriangledown$  icons. The zoom factor is displayed.
- Tap the Pan  $\oplus$  icon to bring up the pan controls: left  $\blacktriangleleft$ , right  $\blacktriangleright$ , up  $\blacktriangleup$ , and down  $\blacktriangledown$ . You can also press OK on the Navigation button to turn panning on and press it left, right, up, or down to pan across the image.
- When you are finished panning across the photo, tap the 1.0x  $\text{1.0x}$  icon or press OK to return to Playback mode.

## 6.1.2 Viewing Thumbnails

Thumbnails are a quick way to view the files stored in your camera's memory.

1. In Playback  mode, press the Thumbnail  icon or press the Navigation button down. Thumbnail view appears on the LCD screen.



2. Tap  to scroll up or  to scroll down one page. You can also use the Navigation button to scroll up, down, left, and right. A red border appears around the selected file.

### Note

- In Thumbnail mode, photos, movies, and sound files appear as follows:



Photo (see “Viewing Photos” on page 28)



Movie clip (see “Viewing Movie Clips” on page 31)



Sound clip (see “Listening to Sound Clips” on page 32)

3. Tap on a thumbnail to view it at full-size in the LCD screen or press OK to view the selected file.

### Note

- You can also enter Thumbnail mode by pressing the Menu  button, and then pressing the Thumbnail  icon.
- You can erase a photo, movie clip, or sound clip in Thumbnail Mode by pressing the Erase  icon.

## 6.2 Viewing Movie Clips

You can play movie clips that are stored in the camera's internal memory or on the installed SD memory card when the camera is in Playback  mode.



To play a movie clip:

1. Set the Mode switch to Playback mode .
2. The most recently recorded file appears on the LCD screen.
3. Press Next  or Previous  to select a movie clip. You can also press the Navigation button to the left or right to scroll forward or back.
4. Tap Play  or press OK on the Navigation button to start playing the movie clip. The stop  button appears on the screen.
5. Press OK on the Navigation button will also pause playback.


### Note

- Tap the Display button  to turn off the icons and view the movie clip only.

## 6.3 Listening to Sound Clips

Audio clips can be played in Playback  mode through the camera's built-in speaker.

The LCD screen appears as follows when a sound clip is selected.

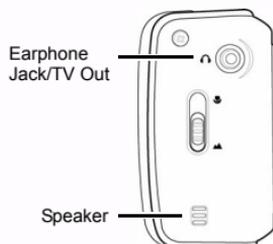

To play a sound clip:

1. Set the Mode switch to Playback  mode.
2. Scroll until you come to a sound clip. You will know it is a sound clip if you see the sound clip playback screen, or when you see a sound clip thumbnail (see "Viewing Thumbnails" on page 30).
3. Tap the Play  icon or press OK on the Navigation button.



4. Tap  to increase the playback volume, tap  to decrease the volume. You can also press the Navigation button up or down to adjust the volume.
5. Tap  to pause playback at any time or tap  to stop and return to the beginning of the clip. Pressing OK on the Navigation button will also pause playback.

## 6.4 Special Playback Functions


To access special functions in Playback mode , tap the Menu  icon. Depending on the type of file you are currently viewing (photo, movie clip, or sound clip) the following functions are available.

Icon	Function	Description	File Types	Page
	Scrawling	Use the stylus to write a note or sketch on top of a photo.	Photo	34
	Frame	Choose from up to 20 different frames to superimpose on a photo.	Photo	36
	Voice Memo	Record a voice annotation to accompany a photo.	Photo	37
	Slide Show	View an automatic slide show on the LCD screen.	Photo Movie Clip	39
	Lock	Lock files to prevent accidental deletion.	Photo Movie Clip Sound Clip	39
	Thumbnails	Toggle Thumbnail mode on and off.	Photo Movie Clip Sound Clip	30

## 6.4.1 Scrawling

Scrawling allows you to write a note or draw a sketch on top of a photograph. You can choose the thickness of the pen or eraser, the color, and decide to save the edited picture as a new file.

1. In Playback  mode, select a photo (not a movie or sound clip).
2. Tap the Menu  icon.
3. Tap the Scrawling  icon. The Scrawling edit menu appears.

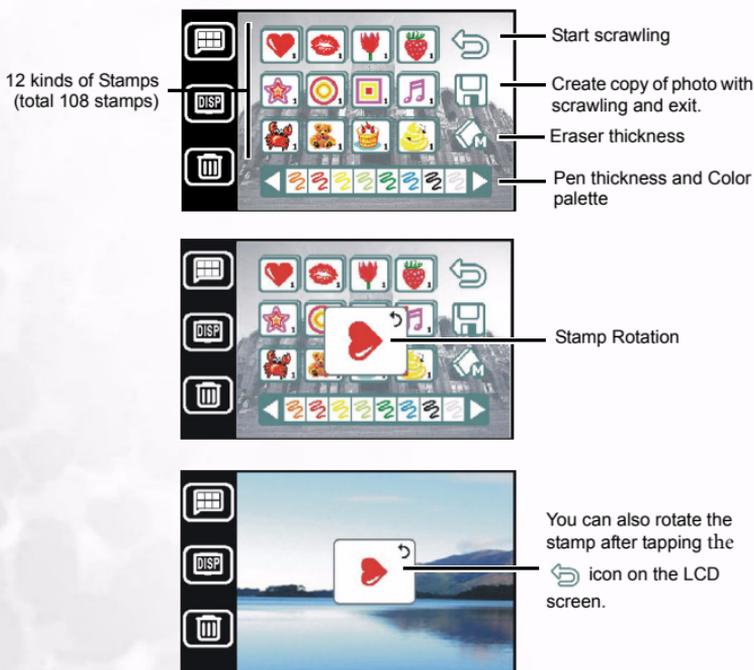

4. **Stamp function:** First select the stamp you want. Tap more times on the stamp icons (, , ..... ) to get different stamps (total 108 stamps), then tap  to begin stamping these icon on the photo you choose.
5. **Stamp rotation:** This function allows you to rotate these stamps as you want. Select a stamp and press the navigation button  to change the direction of the stamp. The

variation shows on the screen immediately. For examples, if you select the  stamp, press up/down/left/right of the navigation button and you get the following



variations in sequence. Then tap  to begin stamping these selected icons on the photo you choose. Please note that you can also rotate the stamp after tapping the  icon on the LCD screen.

- 6. Scrawling function:** Tap the  and  buttons to change pen size settings, then select the pen color you want and tap  to begin your scrawling.
- 7. Eraser Function:** There are three eraser size for you to choose. They are small , medium  and large . Select the eraser size you want and tap  to begin using the eraser function..
8. Tap the Menu  button when you are finished. You are asked if you want to save the new photo with the scrawl. Select Yes to save or No to cancel.
9. The Edited  icon appears on the top left of the LCD screen.




### Note

- When you save a photo after scrawling on it, the edited photo is saved as a separate file with a size of 640x480 pixels. The original file remains unchanged in the camera's memory.

## 6.4.2 Adding a Frame

The DC E41 comes with up to 20 different frame designs that you can add to your photos for a fun and interesting effect.

1. In Playback  mode, select a photo (not a movie or sound clip).
2. Tap the Menu  icon.
3. Tap the Frame  icon. The Frame edit menu appears.

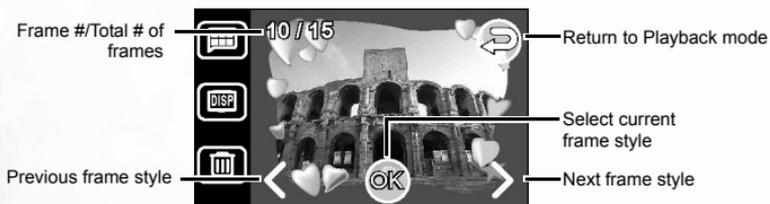

4. Tap  and  or use the Navigation button to scroll through the frame styles. Tap OK to choose a frame style and save the picture directly to a new file. Alternatively, tap the Menu  icon; you are prompted to save the framed picture as a new file.
5. Tap Yes to save the photo with the selected frame or tap No to cancel and return to Playback mode.
6. The Edited  icon appears on the top left of the LCD screen.




### Notes

- When you save a photo after adding a frame, the framed photo is saved as a separate file with a size of 640x480 pixels. The original file remains unchanged in the camera's memory.

### 6.4.3 Adding a Voice Memo

Adding a voice memo is a useful way of adding notes and reminders to photos.

1. In Playback  mode, select a photo (not a movie or sound clip).
2. Tap the Menu  icon.
3. Tap the Voice Memo  icon. The Record Voice Memo screen appears.
4. Tap the Record  icon to begin recording. The remaining recording time appears on the LCD screen. Tap Stop or press OK on the Navigation button to end recording.
5. Tap Return  to go back to the Playback menu.

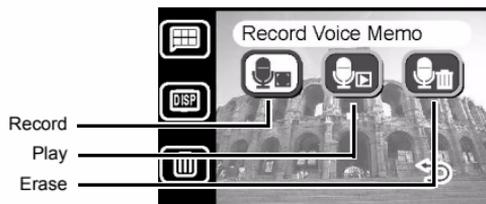

## 6.4.4 Listening to Voice Memos

Follow these steps to listen to a voice memo that was previously added to a photo.

1. In Playback  mode, select a photo with a voice memo. You will see the Voice Memo icon  in the top left corner of the LCD screen.
2. Tap the Menu  icon.
3. Tap the Voice Memo  icon. The Record Voice Memo screen appears.
4. Tap the Play Voice Memo  icon to play the voice memo for the photo using the camera's built-in speakers or attached headphones.
5. Tap Stop or press OK on the Navigation button to stop playback at any time.



### Note

- A photo can have only one voice memo. If you record a voice memo for a photo with an existing voice memo, the previous voice memo will be erased.

## 6.4.5 Erasing Voice Memos

Follow these steps to erase a voice memo that was previously added to a photo.

1. In Playback  mode, select a photo with a voice memo. You will see the Voice Memo icon  in the top left corner of the LCD screen.
2. Tap the Menu  icon.
3. Tap the Voice Memo  icon. The Record Voice Memo screen appears.
4. Tap the Erase Voice Memo  icon to erase the voice memo for the photo.
5. Tap Yes or to erase the voice memo, or tap No to cancel.

## 6.4.6 Playing a Slide Show

The camera can automatically display photos (or the first frame of movie clips) stored in memory in sequence at a two-second interval. Movie clips and sound clips are not played during slide shows.


1. In Playback  mode, tap the Menu  icon.
2. Tap the Slide Show  icon. The slide show begins.
3. Tap the Menu  icon or press OK to stop the slide show and return to the Playback mode menu.

## 6.4.7 Locking and Unlocking Files

Locking photos, movie clips, and sound clips stored in your camera's memory or on an installed SD memory card prevents them from being accidentally deleted. You can lock and unlock individual files, or all files.

### 6.4.7.1 Locking a Single File

1. In Playback  mode, select the photo, movie clip, or sound clip you want to lock.
2. Tap the Menu  button.
3. Tap the Lock  icon.
4. Tap the single Lock  icon. The screen returns to the Playback menu.
5. Tap Return . The Locked icon  now appears at the top left corner of the playback screen.

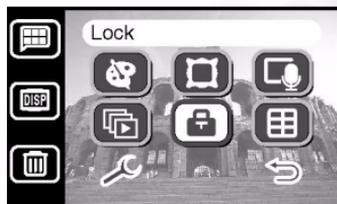

### Note

- To delete a file that is locked, you must first unlock it. See “Unlocking Single Files” on page 40.

### 6.4.7.2 Locking all Files

1. In Playback  mode, tap the Menu  button.
2. Tap the Lock  icon.
3. Tap the Lock All  icon.
4. Tap Yes to lock all files or tap No to return to the Lock menu.
5. Tap Return . The Locked icon  appears at the top left corner of the playback screen for all photos, movie clips, and sound clips.

### 6.4.7.3 Unlocking Single Files

1. In Playback  mode, select a file that is locked (the Locked icon  should be visible).
2. Tap the Menu  button.
3. Tap the Lock  icon.
4. Tap the Unlock  icon. The screen returns to the Playback menu.
5. Tap Return . The Locked icon  no longer appears at the top left corner of the playback screen.

### 6.4.7.4 Unlocking all Files

1. In Playback  mode, tap the Menu  button.
2. Tap the Lock  icon.
3. Tap the Unlock All  icon.
4. Tap Yes to unlock all files or tap No to return to the Lock menu.
5. The screen returns to the Playback menu.
6. Tap Return . The Locked icon  no longer appears at the top left corner of the playback screen for all photos.


#### Note

- You cannot add a voice memo for a locked image file.

## 6.4.8 Erasing Single Files

Erasing a photo, movie clip, or sound clip permanently removes the file from memory. It cannot be recovered. It is strongly suggested that you lock files that you are certain you want to keep. See “Locking and Unlocking Files” on page 39 for more information.

1. In Playback  mode, select the photo, movie clip, or sound clip that you want to delete.
2. Tap the Erase  button located below the LCD screen.
3. Tap Yes to erase the file or tap No to cancel and return to Playback mode.

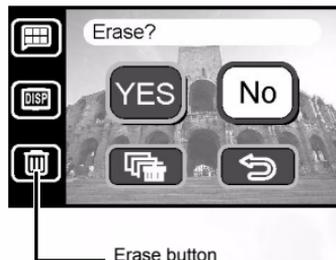


### Note

- To erase a file that is locked, you must first unlock it. See “Unlocking Single Files” on page 40.

## 6.4.9 Erasing All Files

Selecting this action will permanently remove all unlocked photos, movie clips, and sound clips from the camera’s memory.


1. In Playback  mode, tap the Erase  button located below the LCD screen.
2. Tap the Erase All  icon.
3. Tap Yes to erase all files or tap No to cancel and return to Playback mode.

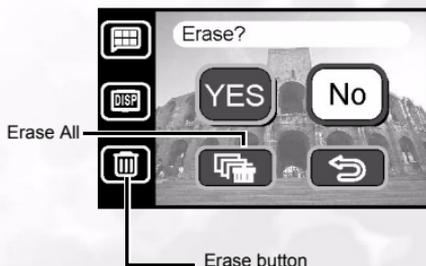

## 6.5 Listening to Music

The camera features MP3 playback. Copy MP3 files from your PC to the camera's internal or external memory using the USB cable.

Set the Mode switch to Music mode to enable the MP3 player.

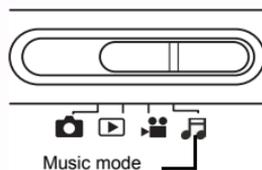

### 6.5.1 Transferring MP3 files to the Camera

1. Establish a connection between the camera and your computer.
2. There is a folder called 'MP3' on your camera's memory card. Transfer the MP3 files from your computer to the camera's MP3 folder.


#### Notes

- You can play MP3 music files through the camera's speaker or through the earphones.
- If power saving is enabled, the LCD turns on normally, and after 1 minutes of user inaction, the LCD screen enters suspend mode; press any button to awaken the LCD screen from suspend mode. If power saving is not enabled, the LCD screen does not turn off.
- When a warning message (such as battery power empty warning) occurs, the MP3 playback stops and the camera emits warning sounds.

### 6.5.2 Playing MP3 Files

Follow these instructions to play MP3 files.

1. Power on the camera and select Music mode . The music mode screen appears.

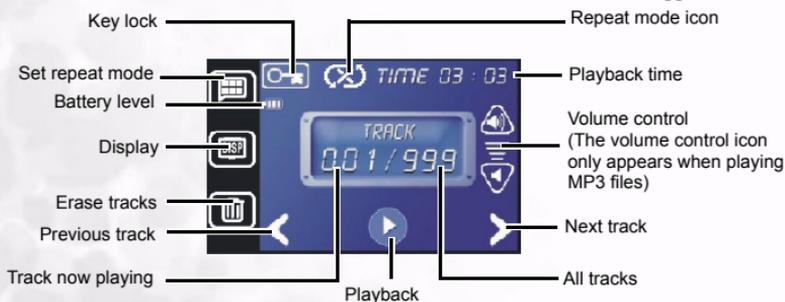

2. After the first MP3 track appears, tap and to select your desired MP3 track. Then tap to play the selected MP3 track. While playing the MP3 tracks, tap to pause or to stop.


3. The camera offers four different repeat mode of MP3 playback, tap the Menu button

 to set:

①		Repeat All Mode	Repeat all MP3 tracks.
②		Repeat One Mode	Repeat one selected MP3 track.
③		Repeat Random Mode	Repeat MP3 tracks randomly.
④		Repeat Off Mode	Set the repeat function off.

4. To prevent the sudden halt or changes of the MP3 music caused by incidentally tap on the LCD screen while playing MP3 tracks, the camera offers “Key Lock” function which allows you to lock all keys on the screen when listening to MP3 music.

- To set “Key Lock” function while playing MP3 tracks, tap on the  icon on the screen. You are asked if you want to set the key lock function or not. Select Yes to set or No to cancel.

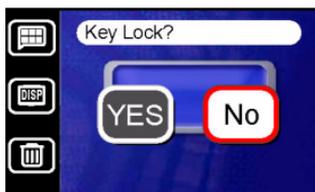

- After setting the key lock function on, the  icon turns red  to show the camera is under key lock status.
- To set the keys unlocked, tap on the LCD screen or push the navigation button, then the unlock procedure shows on the LCD screen. Please follow the procedures below to reset the lock open:



**Step 1:** Press the navigation button as illustrated.



**Step 2:** Press the shutter button as illustrated.

## 7 CAMERA SETTINGS

Camera settings can be accessed in any mode by tapping the Menu  button and then tapping the Setup  icon. Some settings are located on the second setup screen, accessed by tapping Next .

You can change or adjust a number of basic camera settings including:

Icon	Setting	Description	Page
	Memory	Copy files from internal memory to an installed SD card. Format an SD card or internal memory.	45
	Date/Time	Adjust the camera's date and time.	46
	Date Format	Select the date format used for the Date Imprint feature (page 22).	46
	LCD Brightness	Set the LCD screen to Bright or Normal.	47
	Sound	Turn the camera's system sound effects on or off.	47
	File Number Reset	Reset the automatic file counter.	47
	Audio/Video Output	Select Audio output or video output (NTSC or PAL).	48
	Power Saving	Set the camera to automatically power off after three minutes of disuse.	48
	Language	Select the default menu language.	49
	Default Setting	Return all camera settings to factory preset values.	49
	Software Version	Display the installed firmware version number.	50
	Screen Calibration	Reset the touch screen point and tap settings.	50

## 7.1 Memory: Copying and Formatting

This function enables you to:

- copy files from the camera's internal memory to an installed SD memory card
- format an installed SD memory card or the camera's internal memory

Follow the steps below.


1. Tap Menu , then tap Setup .
2. Tap Memory .
3. To copy files from the camera's internal memory to an installed SD memory card, tap .

You are prompted to confirm the action.

4. To format an installed SD memory card, tap .

You are prompted to confirm the action.

5. To format the camera's internal memory, make sure an SD card is not installed, and follow steps 1 to 3 above. The internal memory icon  appears.

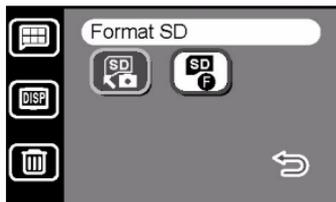



### Note

- Formatting an SD card or internal memory permanently removes all files, even if files are locked (see “Locking and Unlocking Files” on page 39).
- If an SD card is corrupted or you are having problems storing files on the camera, formatting the card will usually solve the problem.
- Always format the SD card using the camera's function. Formatting the SD card with another camera or with a computer may make it unusable with the DC E41.

## 7.2 Setting the Date and Time

Setting the date and time correctly is important as this information is stored with the photos you take, and is used if you have turned Date Imprint on (see “Date Imprint” on page 22).

1. Tap Menu , then tap Setup .
2. Tap Date/Time .
3. Tap the year. The value adjust screen appears.
4. Tap  to increase the year or tap  to decrease the year. You can also use the Navigation button to adjust the values.
5. Repeat Step 4 for the remaining values.
6. Tap  to save the changes or tap  to cancel and return to the Setup menu.

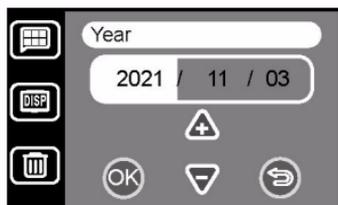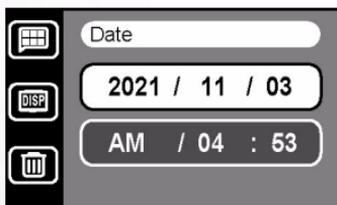

## 7.3 Date Format

The camera can store and display the current date in three different formats:

-  Year - Month - Day (e.g. 04 01 31)
-  Month - Day - Year (e.g. 01 31 04)
-  Day - Month - Year (e.g. 31 01 04)

Follow these steps to change the date format:

1. Tap Menu , then tap Setup .
2. Tap Date Format .
3. Tap the format you prefer.



## 7.4 LCD Brightness

The brightness of the LCD screen can be set to Bright or Normal. The Bright setting is useful for use in brightly-lit areas, however, battery power is consumed at a faster rate.

1. Tap Menu , then tap Setup .
2. Tap LCD Brightness .
3. Tap Bright  or Normal .



## 7.5 Sound

The Sound function enables you to toggle system sound effects (such as the beep when tapping or scrolling) on or off.

1. Tap Menu , then tap Setup .
2. Tap Sound .
3. Tap On  or Off .




### Note

- The shutter and warning sounds cannot be turned off.

## 7.6 File No. Reset

The DC E41 automatically assigns incrementing numbers to the file names of all photos, movie clips, and sound clips that you record. You can choose to reset the auto numbering to start from 1. This can be useful if you have erased all files from memory or formatted the SD card.

1. Tap Menu , then tap Setup .
2. Tap File No. Reset .
3. Tap Yes  or No .

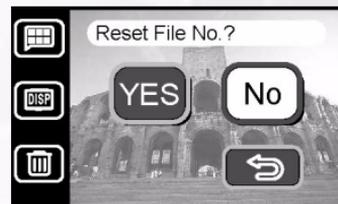

## 7.7 Audio/Video Output

The camera's Audio/Video out port provides audio and video output for listening to sound clips and viewing photos or video clips on a standard TV screen, or listen to music through earphones. Use the Audio/Video setup function to set the operating mode.

Set the video output mode to either NTSC or PAL. Refer to your local authorities for information on whether NTSC or PAL is used in your region.

For information on connecting your camera to a TV, see “Connecting to a TV” on page 51.

1. Tap Menu , then tap Setup  and tap Next .
2. Select Audio/Video out Format . The following options are available:



**Audio:** The Earphone Jack/TV Out port will output audio for earphone use only. (default)



**NTSC:** The Earphone Jack/TV Out port will output NTSC format video and audio.



**PAL:** The Earphone Jack/TV Out port will output PAL format video and audio.



## 7.8 Power Saving

When power saving is turned on, the LCD screen will turn off after three minutes of disuse, and will shut down completely after five minutes. It is recommended that power saving be turned on to avoid accidental discharging of the battery.


1. Tap Menu , then tap Setup  and tap Next .
2. Tap Power Saving .
3. Tap On  or Off .



## 7.9 Language

The DC E41's on-screen menus and messages can be displayed in eight different languages, including: English, Spanish, German, French, Italian, Portuguese, Simplified Chinese, and Traditional Chinese.

1. Tap Menu , then tap Setup  and tap Next .
2. Tap Language .
3. Tap the language icon you prefer.

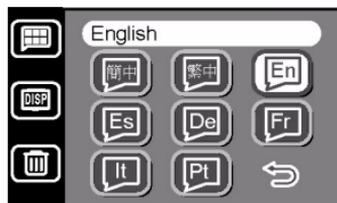

### Note

- If you accidentally set the language to one that you don't understand, you can restore your preferred language by tapping the appropriate language icon.

## 7.10 Default Setting

Selecting this functions returns all camera settings to the condition they were in at the factory.


1. Tap Menu , then tap Setup  and tap Next .
2. Tap Default Setting .
3. Tap Yes  or No .



## 7.11 Software Version

This function displays the version number of the software installed in the DC E41. Should you ever require technical assistance (see “Service Information” on page 60), the technician you speak to may request this information.


1. Tap Menu , then tap Setup  and tap Next .
2. Tap Software Version .
3. The software version appears on the screen. Tap Return  to exit.

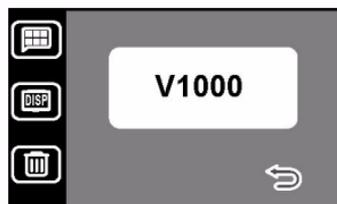

## 7.12 Screen Calibration


Over time, the LCD touch screen may become uncalibrated, making it difficult to tap on icons, sliders, or other objects. If this occurs, you should calibrate the screen as follows.

1. Tap Menu , then tap Setup  and tap Next .
2. Tap Screen Calibration .
3. Follow the instructions that appear on the screen.
4. If the calibration succeeds, the camera will restart itself. If it fails, repeat steps 1 to 3.

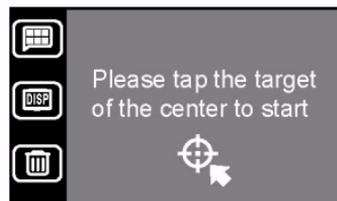

## 8 CONNECTING TO A TV

You can connect the DC E41 to a television and view photos and movie clips on a large screen. Use the included AV to connect the DC E41 to your television as illustrated below. Your own television input jacks may differ from the illustration. Refer to your television's user manual for assistance.

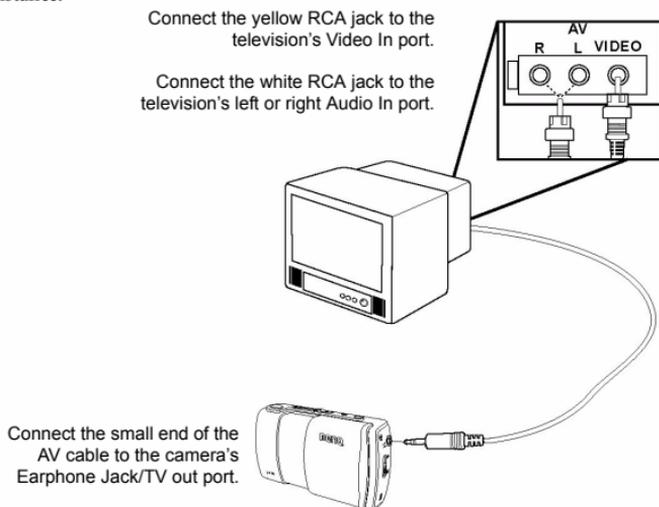

1. Turn the camera off and connect the AV cable's mini-plug to the camera's Earphone Jack/TV out port.
2. Connect the two RCA jacks to your television as illustrated above.
3. Turn the camera on. Everything you can see on the camera's LCD screen also appears on the television. The image on the camera LCD screen indicates that the TV has been successfully connected. Then the LCD screen turns off; view the previous or next image by pressing the Navigation button.
4. Use the DC E41's playback functions to view photos, movie clips, etc. Refer to "Playing Back Photos, Music, Movie and Sound Clips" on page 28 for more information.

### Note

- Turn the camera off before disconnecting it from the TV.
- You may need to change the camera's PAL or NTSC video format setting depending on your region. For information, see "Audio/Video Output" on page 48.
- The DC E41 supports mono audio output only.

## CONNECTING TO A COMPUTER


Connecting the DC E41 to your computer enables you to perform the following functions:

- Upload photos, movie clips, and sound clips to your computer for storage and organization.
- Download MP3 music files from your computer.
- Update built-in photo-frames.

Before connecting to a computer running Microsoft Windows, you must first install the software that is included on the software installation CD-ROM that came with the DC E41.

### 9.1 Installing the Digital Camera Software

- It's recommended that you set up the driver and software before connecting the digital camera to your PC. Normally, a software installation menu appears automatically after this installation CD is inserted into your CD-ROM drive. If the menu does not appear, browse the CD with Windows Explorer, find a program file named "Autorun.exe" in the root directory and double-click it. The setup menu appears.

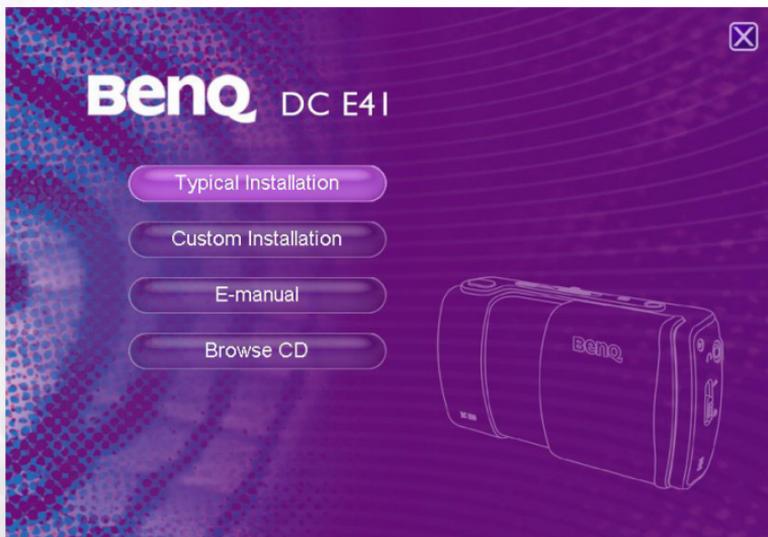

- Click each item to install the software program of your choice.

To browse the content of this CD and install software manually, refer to the descriptions of the CD content in the next section.

## 9.2 Bundled Software

The software installation CD-ROM included with the DC E41 includes the following software. Please refer to the software's help or electronic user manual for instructions.

Software	Description
<b>DC E41 Driver</b>	If your operation system is Windows 98SE, please setup the DC E41 driver first. If the operation system is Windows ME/2000/XP, then it's not necessary for you to setup driver in advance. But if you want to update the built-in photo-frames, please set up the driver first.
<b>Ulead Photo Express</b>	Ulead® Photo Express is a complete photo project software for digital images. Acquire photos effortlessly from digital cameras or scanners. Edit and enhance images using easy-to-use editing tools and cool photographic filters and effects. Assemble creative photo projects and share results via e-mail and multiple print options.
<b>Ulead Photo Explorer</b>	Ulead® Photo Explorer provides an efficient way to transfer, browse, modify and distribute digital media. It is the all-in-one tool for owners of digital cameras, WebCams, DV camcorders, scanners or anyone who strives to effectively handle digital media.
<b>Microsoft DirectX</b>	Microsoft DirectX is an all-in-one and cross-platform media tool.
<b>Microsoft Media Player</b>	Microsoft Media Player is a Windows utility that plays audio, video, and streaming formats as well as many other popular audio and video formats, including MP3, CD audio, and MIDI files.
<b>Acrobat reader</b>	Adobe Acrobat Reader is a "must have" utility to read files in the popular cross-platform PDF file format.
<b>QLink</b>	BenQ QLink is a utility for your smart photo downloads, and has printout and edit functions. Share via e-mail with others, for photos folders management and show slide show photos on screen.
<b>QMusic</b>	BenQ QMusic lets you manage your music selections, transfer MP3 files with your camera, create and manage playlists, convert your CDs tracks into MP3s, apply sound effects, and more.


## 9.3 Transferring Files To/From a Computer

This section explains how to transfer images, movies between your camera and a PC using Windows XP/ME/2000/98SE.

### 9.3.1 Transferring Photos, Movie Clips, Sound Clips, and Music Files

This section shows you how to use the Windows Explorer utility to manipulate files between your camera and a PC.

1. Turn on the computer.
2. Turn on the camera.
3. Connect the camera to the PC with the included USB cable. Ensure that the connection is secure.
4. Tap “QLink-Storage” on the camera’s LCD screen.
5. A new disk appears in Windows Explorer labelled “Removable Disk.” (See note below).
6. Stored photos, movie clips, and sound clips can be found in the directory “Removable Disk\DCIM\100MEDIA”.

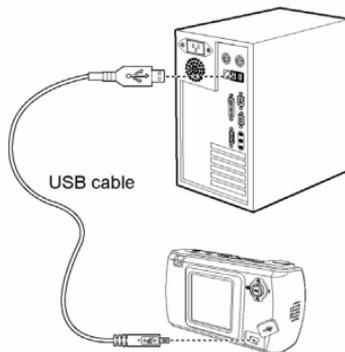

Copy, view, delete, and move images, movie clips, sound clips, and music files using standard drag and drop Windows Explorer commands.

#### Note

- Photo files have the suffix “.jpg”
- Voice Memo files have the suffix “.htm”
- Downloaded frame files have the suffix “.bqf” (not built-in frame files)
- Movie clips have the suffix “.asf”
- Sound clips have the suffix “.wav”
- MP3 files have the suffix “.mp3”
- Refer to your computer’s Help for information on viewing or playing multimedia files on your computer.

### 9.3.2 Using the QLink Software

The included QLink software is a useful tool for downloading photos from your camera to your computer, and then displaying, e-mailing, printing, or editing them.

After successfully installing the software (see “Installing the Digital Camera Software” on page 52), follow the steps below to get started with QLink.

1. Turn on the computer and start the QLink software.
2. Turn on the camera.
3. Connect the camera to the PC with the included USB cable. Ensure that the connection is secure.
4. Tap “QLink-Storage” on the camera’s LCD screen. The software takes a moment to detect and mount the camera.
5. A new disk appears in the navigation panel on the left labelled “Removable Disk.”
6. Photos, movie clips, and sound clips stored on your camera are displayed in the preview screen at center.



7. The buttons at the left of the screen allow you to view a slide show, e-mail selected photos, print selected photos, edit photos, change program settings, and exit the program.
8. Refer to the built-in QLink help for more information on all of QLink’s features.

#### Note


- SD memory cards in the following sizes are supported: 8MB, 16MB, 32MB, 64MB, 128MB, 256MB, and 512MB. The DC E41 is compatible with SD memory cards manufactured by Panasonic, Toshiba, and Sandisk. Please contact your local dealer for purchasing information.

### 9.3.3 Using the QLink Frame

The included QLink software is also the tool for transferring downloaded frames from your computer to your camera.

After successfully installing the software (see “Installing the Digital Camera Software” on page 52), follow the steps below to get started with QLink.

1. Turn on the computer and start the QLink software.
2. Turn on the camera.
3. Connect the camera to the PC with the included USB cable. Ensure that the connection is secure.
4. Tap “QLink-Frame” on the camera’s LCD screen. The software takes a moment to detect and mount the camera.
5. The QLink Frame software will automatically launch as below.

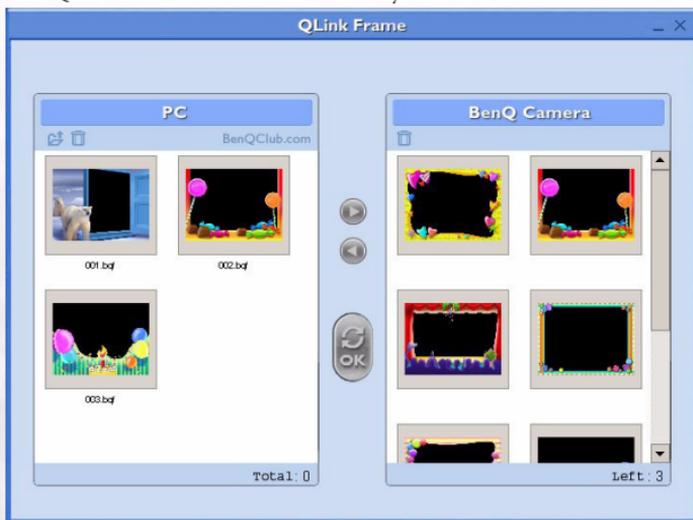

6. If you’ve downloaded frames from our Web site (refer to 9.3.3.1 “Downloading Frames” ), click  and browse to the location of the downloaded frames to transfer them to the QLink Frame PC window.
7. Select frames in either the PC or BenQ Camera window, and click  to copy frames from the PC to the camera or click  to transfer frames from the camera to the PC. Click a frame and drag it to  in either window to remove the frame from the window.
8. When you have finished copying frames between the PC and BenQ Camera window, click  to transfer the files.

9. When you have finished transferring files, detach the camera from the PC; then turn the camera on to make the changes effective.

#### Note

- You can also import frames from the bundled CD in the directory CD-ROM/PHOTO-FRAMES.

### 9.3.3.1 Downloading Frames

The DC E41 comes with 10 fun photo frames pre-installed in the camera's internal memory. You can download and install up to 10 more frames styles and also get more information about downloading frames at other locations on the BenQ Web site at the following address:

*[www.BenQ.com](http://www.BenQ.com)*

# 10 TROUBLESHOOTING

Symptoms	Causes	Solutions
<b>The power won't turn on.</b>	<ul style="list-style-type: none"> <li>The battery is out of power.</li> <li>The AC power adapter is not connected or is damaged.</li> <li>The USB cable is not properly connected to the camera or PC.</li> </ul>	<ul style="list-style-type: none"> <li>Use the AC power adapter to charge the battery.</li> <li>Make sure the AC power is connected and it's not damaged.</li> <li>First turn on the PC, then connect the camera and PC with the USB cable.</li> </ul>
<b>The power turns off during use.</b>	<ul style="list-style-type: none"> <li>The battery is out of power.</li> <li>Power Saving mode is enabled.</li> <li>The battery/SD card cover is opened when in use.</li> <li>The adapter has not been connected properly.</li> </ul>	<ul style="list-style-type: none"> <li>Use the AC power adapter to charge the battery.</li> <li>Switch on the power.</li> <li>Do not open the battery/SD card cover when the camera is in use.</li> <li>Connect the adapter correctly.</li> </ul>
<b>The battery power is being used up too quickly.</b>	<ul style="list-style-type: none"> <li>The external temperature is too cold.</li> <li>The battery is not used for a long time.</li> </ul>	<ul style="list-style-type: none"> <li>Keep the camera away from extreme temperatures.</li> <li>Recharge the battery with the AC power adapter or USB cable.</li> </ul>
<b>The camera does not take pictures when the shutter button is pressed.</b>	<ul style="list-style-type: none"> <li>The camera is not in Snapshot Mode.</li> <li>The battery is weak.</li> <li>The power has not been switched on.</li> </ul>	<ul style="list-style-type: none"> <li>Set the Mode switch to Snapshot mode.</li> <li>Replace the battery.</li> <li>Switch on the power.</li> </ul>
<b>The close-up image is blurred.</b>	<ul style="list-style-type: none"> <li>Select the correct focus range.</li> </ul>	<ul style="list-style-type: none"> <li>If the subject is within 30 to 100 cm (12 to 40 inches), select Macro mode.</li> </ul>
<b>The flash does not fire.</b>	<ul style="list-style-type: none"> <li>The camera flash is turned off.</li> <li>The light source is sufficient.</li> <li>The flash is not fully charged.</li> </ul>	<ul style="list-style-type: none"> <li>Set the flash mode to Auto Flash, Forced Flash, or Red-Eye Reduction mode.</li> <li>Wait for the flash to fully charge.</li> </ul>
<b>There is something wrong with the color of the captured image.</b>	<ul style="list-style-type: none"> <li>White balance is not set properly.</li> </ul>	<ul style="list-style-type: none"> <li>Set the white balance to Auto mode or other suitable mode.</li> </ul>
<b>The picture is too bright or too dark.</b>	<ul style="list-style-type: none"> <li>There is excessive or inadequate exposure.</li> </ul>	<ul style="list-style-type: none"> <li>Reset EV bias value.</li> </ul>
<b>The LCD screen is not clear.</b>	<ul style="list-style-type: none"> <li>The LCD screen plastic cover is dirty.</li> <li>The LCD screen has hot spots.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the LCD screen with a soft cloth.</li> <li>Hot spots are normal and do not affect the camera's functionality.</li> </ul>
<b>The camera cannot download images to the PC.</b>	<ul style="list-style-type: none"> <li>The cable is not connected properly.</li> <li>The camera is off.</li> <li>OS is not Windows 98SE /2000/ME/XP or the PC is not equipped with a USB port.</li> <li>USB driver is not installed (Windows 98SE only).</li> </ul>	<ul style="list-style-type: none"> <li>Check the cable connection.</li> <li>Turn on the power.</li> <li>Install Windows 98SE/2000/ME/XP and USB port.</li> <li>Install the USB Driver (Windows 98SE only).</li> </ul>

## 10 SPECIFICATIONS

<b>Image Sensor</b>	1/2.5-inch 4.23 megapixel CCD with 4.0 megapixel effective resolution
<b>Lens</b>	f=35 mm (35 mm film equivalent) F 3.2/F 6.4
<b>Digital Zoom</b>	Digital: 4X
<b>LCD Monitor</b>	2.0-inch color LTPS LCD
<b>Focus Range</b>	Macro: 40 cm, Normal: 120 cm to infinity
<b>Shutter Speed</b>	1/3 ~ 1/600 seconds (2~1/600 seconds for Night Scene)
<b>Exposure</b>	Metering: Spot, Center-Weighted Average, Average Exposure compensation $\pm 2$ EV (0.3 EV / step)
<b>ISO Equivalent</b>	Auto, 100, 200
<b>White Balance</b>	Auto / Daylight / Cloudy / Tungsten / Fluorescent
<b>Flash</b>	Auto / Forced Flash / Flash Off / Red - Eye Reduction
<b>Self-Timer</b>	10 seconds
<b>File Format</b>	Still image: JPEG (EXIF 2.2)
<b>Movie Mode</b>	ASF format Size: 320x240 with sound (continuous)
<b>Music Mode</b>	MP3 format
<b>Image size</b>	2848 x 2136 pixels, 2304 x 1728 pixels 1600 x 1200 pixels, 1280 x 960 pixels
<b>Dictaphone</b>	WAV format (continuous)
<b>Voice Memo</b>	WAV format (20 seconds)
<b>Storage Type</b>	Built-in 8MB / SD card compatible
<b>Interface</b>	Digital out: USB 1.1 TV out: Audio/Video output DC power input: 5V
<b>Power Source</b>	Rechargeable Lithium-ion battery / AC adapter / USB cable
<b>Dimensions (WxHxD)</b>	100.9 x 55.8 x 33.2 mm
<b>Weight</b>	127g (without battery)

### 11.1 System Requirements

- Pentium 166 MHz MMX class or higher CPU
- 64 MB RAM
- CD-ROM drive
- 100 MB free hard disk space
- Available USB port
- Windows 98SE/2000/ME/XP

## 11 SERVICE INFORMATION

If you encountered problems using DC E41 and the camera driver program, please visit the following website for technical support, answers to frequently asked questions and download services:

<http://support.BenQ.com>

For free driver program updates, product information and news release, please visit the following web address:

<http://www.BenQ.com>