

Elenberg

МИНИ СТИРАЛЬНАЯ МАШИНА
MWM-1800

ИНСТРУКЦИЯ ПОЛЬЗОВАТЕЛЯ

ПРАВИЛА БЕЗОПАСНОСТИ

Шнур питания

- Когда Вы решили отключить машинку, не тяните за шнур, выньте штепсель из розетки.
- Не ставьте тяжелые предметы на шнур.

Не используйте воду, горячее 50 °C

Горячая вода, может деформировать пластиковые части.

Не позволяйте детям играть с машиной

Присматривайте за детьми.

Не ставьте машину в ванной комнате

В ванной комнате, слишком много влаги. Это может привести к короткому замыканию или сбоям в работе.

Материалы, которые нельзя стирать в машине


Не стирайте одежду с огнеопасными материалами, такими как: бензин, керосин, растворитель и т.п.

НАЗВАНИЯ ЧАСТЕЙ



УСТАНОВКА

- Разместите машину на возвышении с устойчивом основании.
- Не меняйте ни каких частей машины.
- Поместите шнур питания так, чтобы на него не попадала вода.
- Используйте розетку с заземлением.

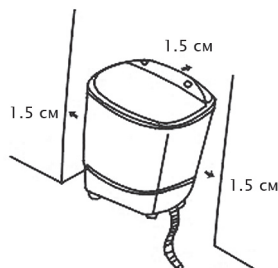

ИСПОЛЬЗОВАНИЕ МАШИНЫ

Подготовка перед стиркой

- Повесьте отводящий шланг на крючок.
- Соедините один конец подводящего шланга к машине, а другой к крану с водой.
- Подключите шнур питания и включите питание.

Стирка

- Установите время стирки в зависимости от материала, из которого сделана одежда, и степени загрязненности.
- Положите одежду в резервуар для стирки, заполните его водой и засыпьте нужное количество стирального порошка.
- Поверните ручку таймера, чтобы установить время, начнется стирка.
- После завершения стирки, положите сливной шланг вниз (в раковину) и дайте воде стечь.

СОВЕТЫ ПО СТИРКЕ

- Перед стиркой лучше разделить вещи на группы по типам ткани (шерсть, синтетика, хлопок).
- Сначала стирайте легкие ткани, затем остальные.
- Проверьте карманы, выньте монеты, закладки и т.п.
- Застегните молнии и пуговицы.
- Застирайте воротники и рукава вручную.
- Предварительно разведите нужное количество моющего средства в теплой воде, а затем влейте ее в машину.
- При стирке джинсов, постирайте их 2–3 минуты, затем замочите их на 20–30 минут и продолжите стирку.
- Используйте моющие специальные средства для деликатных и шерстяных тканей.

ПОЛНЫЙ ЦИКЛ СТИРКИ

Стирка—Полоскание—Полоскание

ТАБЛИЦА РАСЧЕТА СТИРКИ


Степень загрязнения	Состав	Время стирки и кол-во раз		Время полоскания	
		Кол-во раз	Время (мин.)	Кол-во раз	Время (мин.)
Легкая	шелк, шерсть, синтетика	1	5-7	1	4-6
	хлопок, лен	1	7-10	1	6-8
Сильная	шелк, шерсть, синтетика		8-12	2	6-8
	хлопок, лен	1	10-15	2	9-12

УХОД ЗА МАШИНОЙ

- Вынимайте штепсель из розетки, после окончания стирки.
- Не мойте машинку с водой.
- Не ставьте машину во влажное помещение.
- Не добавляйте слишком много моющего средства, используйте порошок с низким пенообразованием.
- Не используйте поливинилхлоридную пленку, чтобы накрывать машину, это не дает влаге выходить из машины.
- Протирайте машину мягкой тряпочкой. Не используйте спирто-содержащие вещества, чтобы протирать машину.

МОНТАЖНАЯ СХЕМА

Монтажная схема

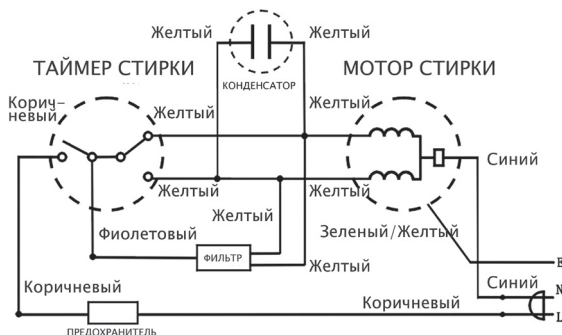

УСТРАНЕНИЕ НЕПОЛАДОК

Проблема	Причина	Решение
Машинка не работает	Не подключено питание	Подключите его
	Слетел ремень двигателя	Установите ремень на место
	Ослабло крепление ремня	Подтяните крепление ремня
	Заблокирован пульсатор	Удалите помеху
Не хватает мощности при стирке	Ослаб ремень	Подтяните или замените ремень
	Ослабли крепления мотора	Натяните ремень и закрепите винты
Шум	Что-то забилося между пульсатором и резервуаром для стирки	Удалите помеху
Протекает вода	Плохое крепление шлангов	Перекрепите шланги
Вода сливается не полностью	Засорился сливной шланг	Прочистите его
	Пережат сливной шланг	Разместите шланг по другому



Изготовитель "ЭЛЕНБЕРГ ЛИМИТЕД", Великобритания
 Адрес: 35 Бромптон Роад, Кнайтсбридж Лондон СВ3 ИДЕ
 Сделано в Китае. "ЭЛЕНБЕРГ ЭЛЕКТРИК КОМПАНИ ЛТД"
 A08 P2-Б4 билдинг, Кеджинан 2 Роад, С энд Т Индастри Парк,
 Шензень, Гуандонг Провинс, Китай.

Elenberg

MINI WASHING MACHINE MWM-1800 INSTRUCTION MANUAL

SAFETY PRECAUTIONS

Power cord

- Do not cut off the power by pulling the power cord. You should take the plug out from the outlet.
- Do not put heavy object on the power cord.

Do not use water hotter than 50 °C

Very hot water may make the plastic parts deformed and aged.

Do not let the children to play the washing machine

Take special care of the children.

Do not place the washing machine in the bathroom

There is much humidity and water in the bathroom. It may cause the risk of bad insulation and electrical leakage.

Do not wash the following clothes


Do not wash the clothes with volatile materials (such as gasoline, kerosene, alcohol and solvent) in order to prevent fire.

NAME OF PARTS



INSTALLATION

- Place the washing machine on a flat/ level solid surface.
- Do not change any part of the washing machine.
- Carefully protect the power cord in order to prevent electrical leakage.
- The power cord is Y connection which is not dismountable.
- The outlet should be correctly connected and the grounding must be reliable.

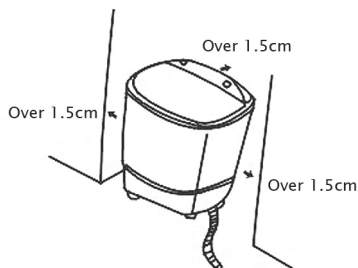

OPERATION

Preparation before washing

- Hang the drain hose on the hook.
- Put one end of the water inlet hose into the water inlet and connect the other end to the tap.
- Put the plug into the outlet and turn on the power supply.

Washing

- Select the wash time according to the materials of the clothes and the dirty condition.
- Put the clothes into the wash tub, fill the tub with water up to suitable water level and add proper amount of detergent.
- Turn the wash timer to proper time and then the washing begins.
- After washing, put the drain hose down and discharge the water.

SUGGESTIONS FOR WASHING

- When washing, it is better to wash the laundries of different materials (Such as woolen , nylon , cotton)
- Separately wash fine laundries first then wash common laundries.
- Clear the pocket take out the coins hair pins etc.
- Fasten the buttons and zippers.
- Before washing, use a little detergent to wash the collar and the sleeve by hands.
- Prepare some warm water and a container, add the detergent in the container and stir to fully dissolve it. And then pour it in the wash tub.
- When you wash jeans, it is better to wash for 2–3 minutes, soak for 20–30 minutes and then continue to wash.
- Select special detergent to wash fine and woolen laundries.

COMPLETE WASH CYCLE

Wash—Rinse—Rinse

PARAMETER SELECTION


Dirty condition	Material of laundries	Wash times and time		Rinse times and time	
		Times	Time (min.)	Times	Time (min.)
Little dirty	Silk. woolen. chemical fiber	1	5-7	1	4-6
	Cotton, linen	1	7-10	1	6-8
Very dirty	Silk. woolen. chemical fiber		8-12	2	6-8
	cotton, linen	1	10-15	2	9-12

MAINTENANCE

- After washing, pull the plug out.
- Never wash it with water.
- Do not put the machine at damp place.
- Do not add too much detergent it is better to use the little bubble concentrated washing powder.
- Do not use pvc film to cover the machine in order to prevent from damaging the surface of the case and release the humidity out.
- Clean the washing machine with soft cloth. Do not use the thinner, kerosene, gasoline, alcohol, etc to clean the machine.

WIRING DIAGRAM

WIRING DIAGRAM

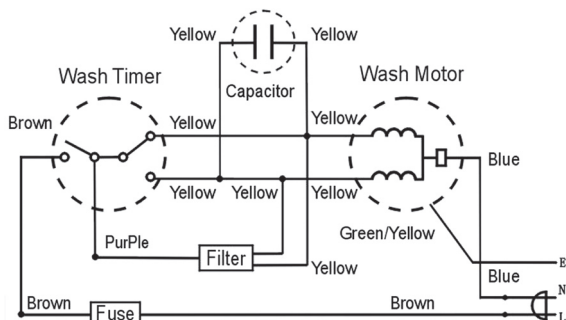

TROUBLESHOOTING

Problem	Reason	Solution
The machine does not work	No electricity or plug falls off	Insert the plug well
	The driving belt falls off	Mount the belt well
	The belt pulley looses	Fix well the screw of the pulley
	The pulsator is blocked by an article	Remove it
No strong power during washing	The belt looses	Adjust the belt or change the belt
	The fixing screw of the motor looses	Pull the belt and fix the screw well
Noise	There is some articles in the gap between the pulsator and the wash tub	Remove the article
Water leakage	The joint of hose and wash tub is not good	Rejoin them
Draining is not smooth	The drain hose is blocked	Clean the drain hose
	The drain hose is twisted	Arrange the drain hose well