




Hard Drive Installation Guide For Popcorn Hour C-200

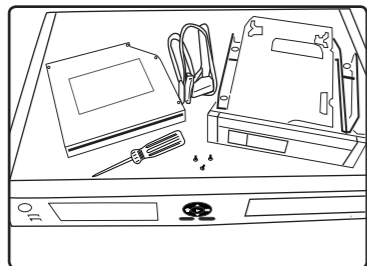

- Step 1**
What you need:
- 1) Popcorn Hour C-200.
 - 2) HBR-200 HDD BD Combo Rack.
 - 3) BDR-200 Slim BD Slot-in.
 - 4) SATA & Power cable.
 - 5) 3 screws.
 - 6) Philip screw driver.

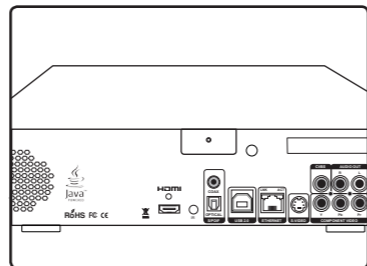


- Step 2**
Remove the screw as shown, and slide open the top cover of C-200.

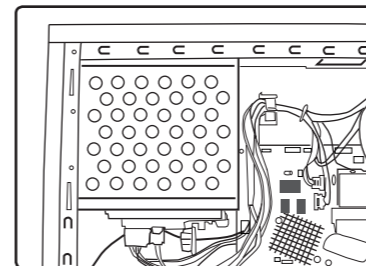


- Step 3**
Removing the existing HDD rack.
- 1) Remove all 4 screws as shown.
 - 2) Remove SATA and Power Cable, please take note of the cables as you will need it later.
 - 3) Set aside the screws.

Tip: You may like to remove the cable clip for easy access of the screws.

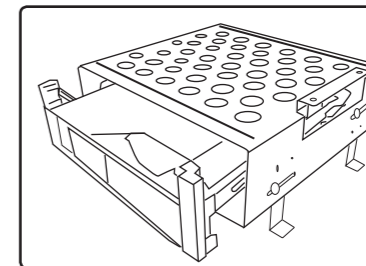


- Step 4**
Removing existing HDD rack from cage and replacing it with HBR-200*
- 1) Remove all screws that secure the HDD rack.
 - 2) Slide in the HBR-200 and replace all screws, make sure its tight.

Note: Please skip this step, if your Popcorn Hour C-200 comes pre-install with HBR-200.

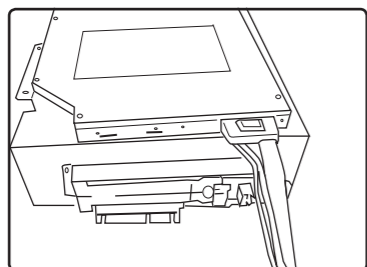


- Step 5**
Connect the SATA and Power cable as shown to the BDR-200 prior sliding into the HBR-200.

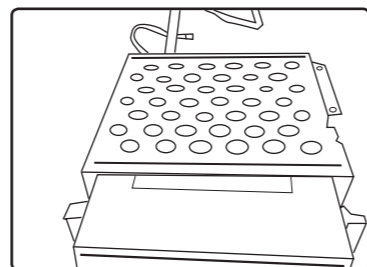


- Step 6**
Slide in the BDR-200 on top of HBR-200, make sure that the SATA and power cable are properly extended towards the end.


Tip: Slide in the cable first, it will be easier!

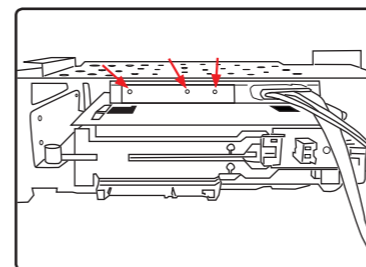


- Step 7**
Installing the BDR-200.
- 1) Ensure that the screw holes are align.
 - 2) Using the supplied screws, please secure the BDR-200 to the combo rack.
 - 3) Make sure the face plate is flush flat with the combo rack at the front.

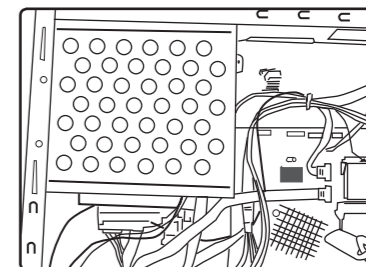


- Step 8**
Reverse the whole process in step 3 to fasten your new combo rack to your Popcorn Hour C-200.

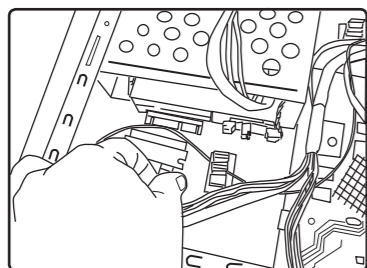

- Step 9**
Setting aside the BDR-200 SATA and power cable, please reconnect the HDD rack SATA and power cable to your HBR-200 as shown.

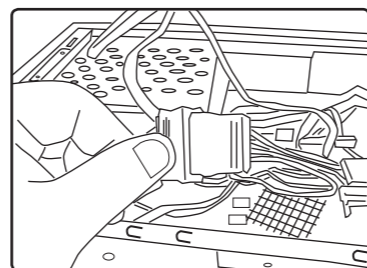


- Step 10**
Connecting power to the BDR-200.
- 1) The supplied power cable from BDR-200, it's a female connector.
 - 2) Your Popcorn Hour C-200 comes factory pre-fitted with a extra male power cable.
 - 3) Connect the both together, and make sure its secure as shown.

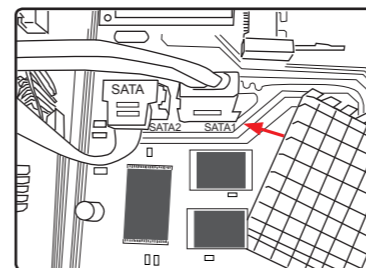

- Step 11**
Connecting the SATA cable from your BDR-200 to your Popcorn Hour C-200.
- 1) On your C-200 mainboard, locate the SATA connectors.
 - 2) Remove SATA1 as shown (SATA2 connects to the HBR-200).
 - 3) Replace it with the SATA cable from BDR-200.
 - 4) Now it's good time to organize the cables in your C-200 by using the factory supplied clips.

Tip: You may like to cut the cable tight to remove the factory fitted SATA cable which is no longer needed.

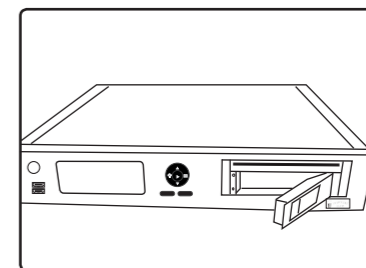

- Step 12**
Now your Popcorn Hour is truly a Hybrid Networked and Blu-Ray media player!

Congratulations on your purchase !