

MY WEIGH ELITE SERIES 1-STEP BATHROOM SCALES

JUST STEP & WEIGH™



*élite*

## WARNING - ATTENTION - IMPORTANT

### SCALE IS SLIPPERY WHEN WET

This scale has a beautiful glass weighing platform that may become slippery when wet. Do not step on the scale with wet feet or if the glass surface is wet. Dry your feet and the weighing surface if necessary before use.

### LCD FULL DISPLAY



### IMPORTANT:


Before first use, place the scale on the flat level surface where you intend to use the scale. Then cycle the power of the scale (turn it on and let it turn off). Repeat this whenever you move the scale from one location to another. Otherwise your first weight result will be inaccurate.

This and all digital bathroom scales must be used on a flat, hard surface. Carpeting and any soft or non-level surfaces will cause inaccurate weight readings.

### FEATURES & SPECIFICATION


- Auto ON – ONE STEP AUTO ON & WEIGH!
- Extra Large LCD: 76×40mm
- Weight Units: kg, lb, st: lb (stone pounds for the UK)
- Capacity: 180kg/400lb/28st: 8lb
- Graduation: 0.1kg/0.2lb/0.2lb (1lb, ≥20st)
- Overload indication: " — — — — "
- Low battery indication " LO "
- Blue LCD backlight
- Batteries: 2 x CR 2032 lithium batteries

## TO CHANGE BATTERIES

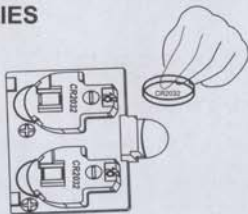

- Ensure +/- terminals are correct .
- If necessary, use proper tools to help release the batteries from the compartment.
- Please remove the shipping-battery-drain-protective-sheet before first use.

## FUNCTION KEYS

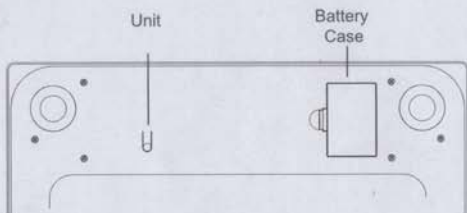

## OPERATION INSTRUCTIONS

- <1> Press UNIT to select the weighing unit.
  - <2> Place the scale on a solid and flat surface, let the scale turn off automatically.  
The scale will automatically turn off after about 10 seconds of non-use.
- NOTE:** The scale must be on a flat, stable, non-carpeted surface. Carpet and soft weighing surfaces will affect the accuracy and performance of the scale.
- <3> Step onto the scale, place both feet evenly on either side of the scale and stand perfectly still. Your weight will be display on the LCD. After a few moments the final weight will flash on the LCD and then display steadily.
  - <4> Please step off of the scale. The scale will automatically power off after about 10 seconds.
  - <5> For proper scale storage please store it on a flat level surface, preferably in the spot where you take your weight readings and do not leave any objects on the scale

**Reminders:**

- \* Don't use the scale on carpet or any soft surfaces.
- \* In order to ensure accurate readings, if you move the scale, please cycle the power of the scale (turn it on and then let it turn off) before taking your weight readings.

For further information or troubleshooting please visit our website at [www.myweigh.com](http://www.myweigh.com)