




UP-308FEW



UP-316FEW

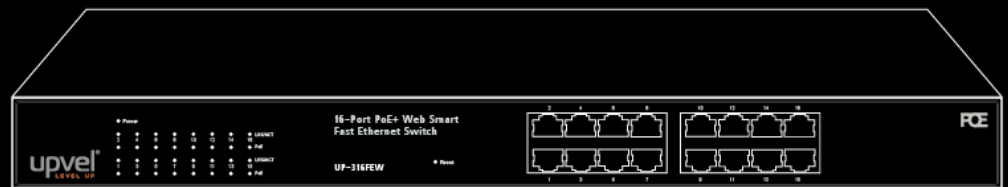

PoE+ Web Smart Fast Ethernet Switch

User Manual

Table of Contents

Product Overview	4
Package Contents	4
Features	5
External Components Description	6
LED Description	7
Installation	8
Installation Site Requirements	8
Desktop installation	8
Rack mounting	8
Power connection	8
Connecting to end nodes	9
Accessing the switch Web management GUI	10
Switch configuration	11
Administrator	11
Authentication Configuration	11
System IP Configuration	12
System Status	13
Load Default Setting	13
Firmware Update	14
Reboot device	14
PoE	15
PoE Status	15
PoE Setting	16
PoE Power Delay	17
PoE Scheduling	18
NTP	18
Port Management	19
Port Configuration	19
Port Mirroring	21
Bandwidth Control	22
Broadcast Storm Control	23

VLAN Setting	24
VLAN Mode	24
VLAN Member	26
Multi to 1 Setting	29
Per Port Counter	30
QoS Setting	31
Priority mode	31
Class of Service	32
Security	34
MAC Address Binding	34
TCP/UDP Filter	35
Web Security	36
Spanning Tree	37
STP Bridge Settings	37
STP Port Settings	38
Loopback Detection	40
Trunking	41
DHCP Relay Agent	43
DHCP Relay Agent	43
Relay Server	44
VLAN MAP Relay Agent	44
Backup/Recovery	45
Miscellaneous	46
SNMP Settings	48
Logout	49
Specifications	50

Product Overview



UP-308FEW



UP-316FEW

Package Contents

- 8-/16-port PoE+ Switch
- Power cord
- Rack mounting kit: L-brackets (2 pcs) and screws (8 pcs)
- Rubber feet (4 pcs)
- Quick Installation Guide
- Warranty Certificate

Note. If any of the listed items are damaged or missing, please contact your distributor.

Features

Upvel PoE+ 802.3at Web Smart Switches UP-308(316)FEW with 8-(16-)port configurations significantly reduce cost of ownership for small and medium size business and professional home PoE installations. Designed to provide easy accessible management and security features, ample power supply, and bandwidth for high-power PoE outdoor Wi-Fi access points, IP-cameras, and VoIP equipment, while complying with latest Green Ethernet Energy savings features.

Management features include conditional monitoring of PoE power supply (available power of ports, power supply delay, priority, and scheduling), Port Mirroring, broadcast storm protection, VLAN (tag / port), QoS, TCP/UDP packet filtering, Spanning Tree, Port Trunking, DHCP Relay, IGMP Snooping, SNMP, and many more.

All PoE+ ports automatically detect the class of connected Powered Devices and provision up to 30 watts of power on each port as required per 802.3at. The total available power regiment is limited at 140 watts for UP-308FEW and 260 watts for UP-316FEW. Electrical power is transmitted along with data in one single cable allowing you to expand your network where there are no power lines or outlets

For non-PoE devices the power feed is auto-blocked and only data is transmitted. Green Ethernet technology features detect idle ports and cable length on each port and reduces energy consumption by up to 75%.


The total available backbone bandwidth of 1.6 (3.2) Gbps provides necessary throughput while limiting network overload. LED status displays on the front panel facilitate troubleshooting of network connectivity and activity. Rack-mountable 1U steel housing provides proper heat dissipation, and the fanless design guarantees zero operation noise.

Upvel UP-308(316)FEW switches facilitate fast deployment of high-performance secured networks for both PoE and non-PoE devices. Proven performance, advanced control features and high quality workmanship of switching components make it a great choice for expanding office and home networks.

- 8 (16) x RJ-45 10/100 Mbps PoE+ ports w/ Auto MDI-X and Auto-negotiation, up to 30 W per port
- Compliant with IEEE 802.3at and IEEE 802.3af Power over Ethernet standards
- 140 (260) watts total PoE power budget
- Automatically identifies the PoE class level of Powered Device connected
- Supports two-event classification for IEEE802.3at powered devices
- PoE power supply function management and condition monitoring using Web GUI and SNMP
- Ability to set the maximum available power for each port
- Supports IEEE802.3x flow control for Duplex Mode and backpressure for Half-duplex Mode
- 1.6 (3.2) Gbps switching capacity
- Up to 75% energy saving with Green Ethernet technology
- Rack-Mountable 1U Steel Housing (brackets and screws included)
- Built-in power supply
- Fanless design – zero operation noise


External Components Description

Front panel of UP-308FEW

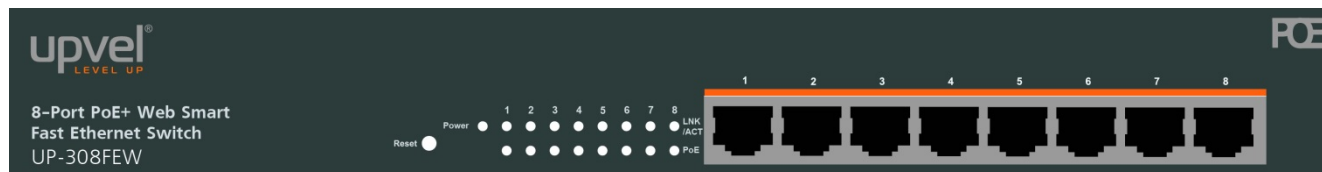

1~8	RJ-45 PoE+ 10/100 Mbps ports
Power	Power LED indicator
LNK/ACT 1~8	Ethernet connection/activity LEDs of the corresponding ports
PoE 1~8	PoE-enabled device connection LEDs of the corresponding ports
Reset	Factory Defaults Restore button

Front panel of UP-316FEW

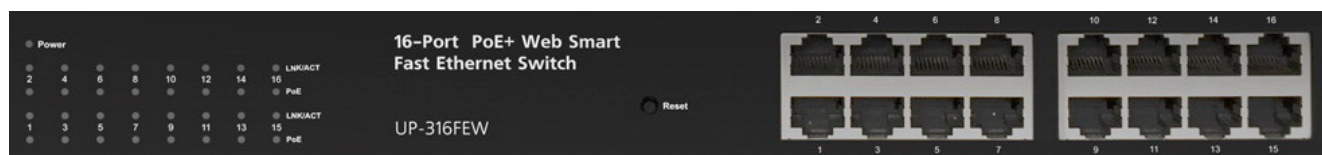


1~16	RJ-45 PoE+ 10/100 Mbps ports
Power	Power LED indicator
LNK/ACT 1~16	Ethernet connection/activity LEDs of the corresponding ports
PoE 1~16	PoE-enabled device connection LEDs of the corresponding ports
Reset	Factory Defaults Restore button

Rear panel



The rear panel of the switch contains the AC power connector. The switch supports 100~240 V AC, 50/60 Hz.

LED Description

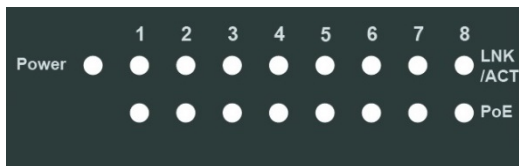

Indicator	Color	Status	Description
Power	Green	On	Power on
		Off	Power off
LNK/ACT	Green	On	Connection is established
		Off	Connection is not established
		Flashing	Data is being transmitted
PoE	Green	On	PoE-enabled device is detected
		Flashing	The power is insufficient for operation of PoE device
		Off	PoE-enabled device is not connected / detected

Installation

Installation Site Requirements

Ensure that the location where you plan to install the switch meets the following requirements:

- Air temperature and humidity should be within the specified ranges (see technical specifications on pp. 52, 53)
- Vent holes in the switch housing should not be blocked. Make sure that there is enough space around the switch for proper ventilation and heat dissipation. Leave at least 10 cm (4 inches) of space at the front and rear of the switch.
- The outlet should be close enough for the power cord to reach. The length of the power cord supplied is 150 cm (59 inches).

Desktop installation

Place the switch on a sturdy, level surface that can support at least 5 kg (11 pounds). For better stability, stick four rubber feet to the bottom of the switch near the corners.

Rack mounting


Attach the brackets to the switch using the included screws and then mount the switch on the 19-inch rack using the screws provided with the rack.

Power connection

1. Connect one end of the power cord to the AC power connector on the rear panel of the switch, and then connect the other end of the power cord to an AC power outlet.
2. Check whether the **Power** LED is ON. When it is steady ON, it indicates the power connection works properly.

Connecting to end nodes

Use standard Cat.5/5e twisted pair cable (UTP/STP) to connect the switch to end nodes. Switch ports will automatically adjust to the characteristics (MDI/MDI-X, speed, duplex) of the connected devices.

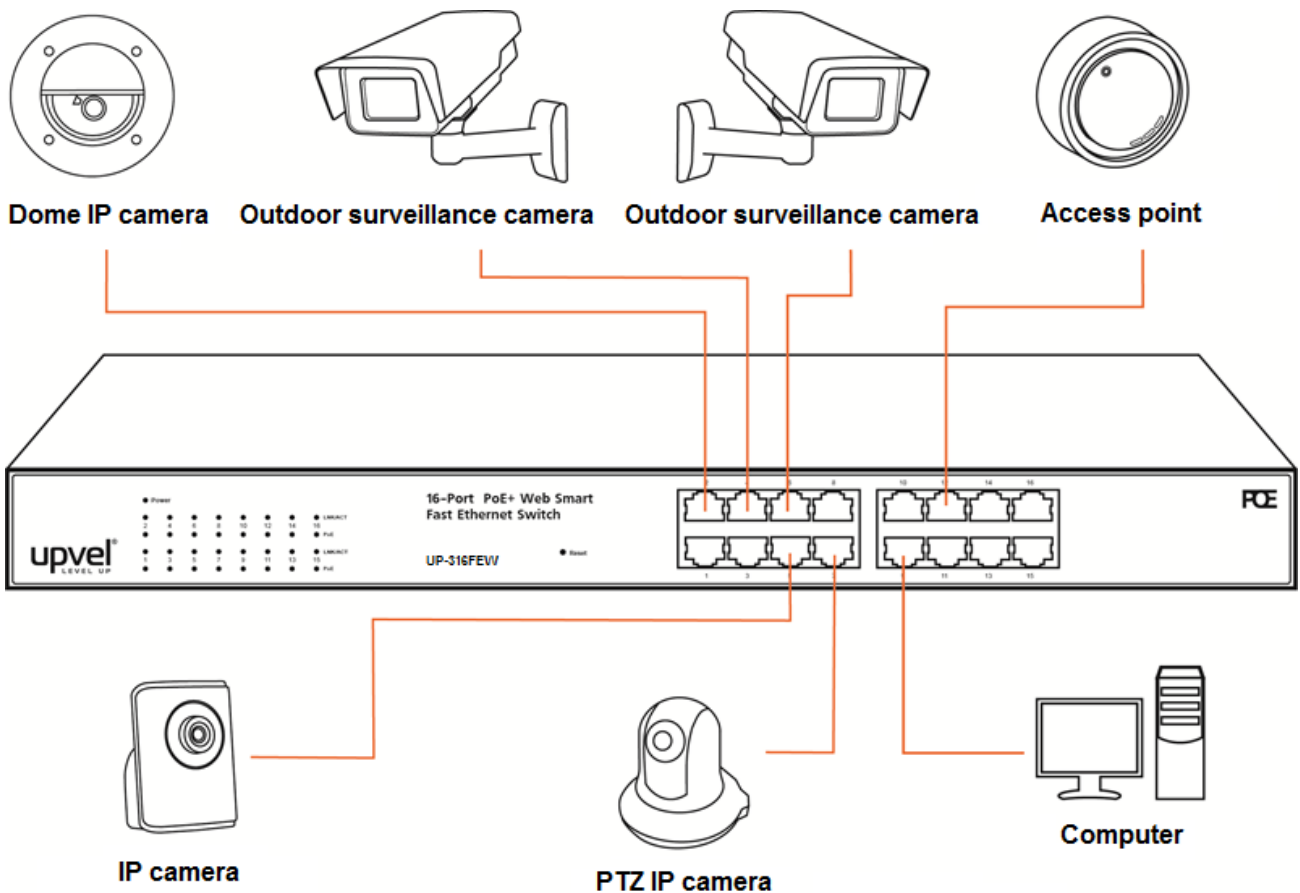

After connecting all the devices required, you can configure various features of the switch using its Web management interface. Management features include conditional monitoring of the PoE power supply (available power of ports, power supply delay, priority, and scheduling), Port Mirroring, broadcast storm protection, VLAN (tag / port), QoS, TCP/UDP packet filtering, Spanning Tree, Port Trunking, DHCP Relay, IGMP Snooping, SNMP, and many more.

Accessing the switch Web management GUI

1. Connect the switch to the computer, which you will use for configuring the switch.
2. Assign a Static IP address to the computer's network adapter in the subnet of 192.168.10.x (e.g. 192.168.10.100) and a subnet mask of 255.255.255.0
3. Open your web browser, type the IP address of the switch in the address bar, and then press Enter. The default IP address is **192.168.10.250**.
4. Enter **ID** and **Password**, and then click OK.
By default:

ID: admin

Password: admin

Note: ID and Password are case sensitive.



USER LOG IN

Site: 192.168.10.250

ID:

Password:

5. The main page of Web management GUI will appear, as shown below.


The screenshot shows the main page of the Web management GUI. At the top left is the upvel logo. Below it is a navigation menu with 'Administrator' selected, showing options like Authentication Configuration, System IP Configuration, System Status, Load default setting, Firmware Update, and Reboot Device. Other menu items include PoE, Port Management, VLAN Setting, Per Port Counter, QoS Setting, Security, Spanning Tree, Trunking, DHCP Relay Agent, Backup/Recovery, Miscellaneous, SNMP Settings, and Logout. At the top right, there are 16 status indicators for ports, with ports 3, 12, and 15 highlighted in green. The main content area is titled '16-Port 10/100Mbps Ethernet Switch' and lists features under 'Advanced Features' (Bandwidth control, Port based & 802.1Q based VLAN, Statistics Counter, Firewall, VLAN Uplink) and 'Basic Features' (Embedded HTTP web Management, Backup/Recovery Configuration, TFTP Software upgradeable, Secure Management, Password security).

Switch configuration

Administrator

Authentication Configuration

This page allows to change the current username and password that are used to login the switch web management interface.

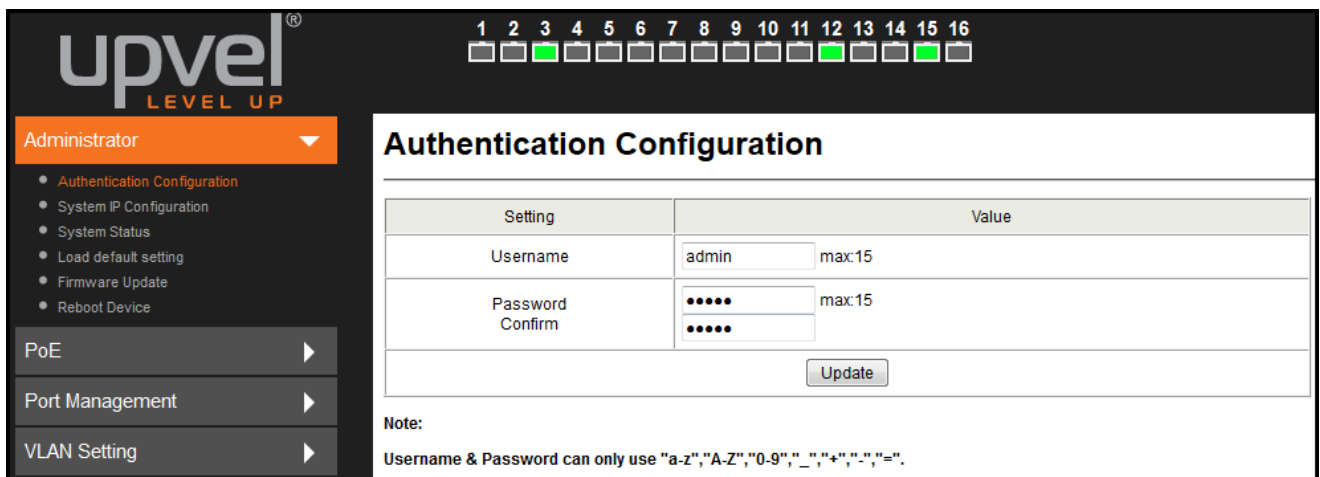


The screenshot shows the upvel web management interface. At the top, there are 16 status indicators for ports 1 through 16. The left sidebar has a menu with 'Administrator' selected, and sub-items: Authentication Configuration, System IP Configuration, System Status, Load default setting, Firmware Update, and Reboot Device. Below the menu are sections for PoE, Port Management, and VLAN Setting. The main content area is titled 'Authentication Configuration' and contains a table with the following data:

Setting	Value
Username	admin max:15
Password Confirm max:15

Below the table is an 'Update' button. A note below the table reads: 'Note: Username & Password can only use "a-z","A-Z","0-9","_","+", "-", "=", "."'

Enter new **Username** and/or **Password** and then click **Update** to confirm changes. The "Update Successfully" message will appear, as shown below. Click **Reboot** to reboot the switch and re-login with the new settings.

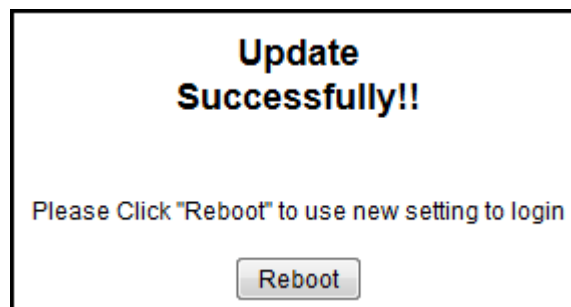

System IP Configuration

This page shows the current IP configuration of the switch including the IP Address, Subnet Mask, Gateway and IP Configuration type (Static or DHCP).

The screenshot shows the upvel web interface. At the top, there is a status bar with 16 indicator lights, where lights 3, 12, and 15 are green. The left sidebar contains a navigation menu with the following items: Administrator (selected), Authentication Configuration, System IP Configuration, System Status, Load default setting, Firmware Update, Reboot Device, PoE, Port Management, and VLAN Setting. The main content area is titled "System IP Configuration" and contains the following table:

Setting	Value
IP Address	192 . 168 . 10 . 250
Subnet Mask	255 . 255 . 255 . 0
Gateway	192 . 168 . 10 . 1
IP Configure	<input checked="" type="radio"/> Static <input type="radio"/> DHCP

Below the table is an "Update" button.

You can change the IP settings of the switch according to your network configuration. If you choose **DHCP** in the **IP Configure** field, the switch will act as DHCP client and will get the IP address from the network DHCP server.

After changing the settings, click **Update** to confirm changes. The "Update Successfully" message will appear, as shown below. Click **Reboot** to reboot the switch for the new settings to take effect.

**Update
Successfully!!**

Please Click "Reboot" to use new setting to login

System Status

This page shows the information about the switch: MAC address, firmware version and number of ports.

The **Comment** field allows to set the switch name so that it could be easily identified in your network.

You can also configure the **Idle Time Security** function here. If there is no user activity in Web GUI for the specified **Idle Time**, the system will auto logout or back to the last display.

Click **Update** for the new settings to take effect.

The screenshot shows the 'System Status' configuration page in the upvel web GUI. At the top, there is a row of 16 port status indicators, with ports 3, 12, and 15 shown as green. The left sidebar contains a navigation menu with 'Administrator' selected. The main content area is titled 'System Status' and contains a table with the following information:

MAC Address	10:f0:13:f0:18:26
Number of Ports	16
Comment	<input type="text" value="switch"/>
System Version	vIP17POE_16P_136.11-d141206
Idle Time Security	Idle Time: <input type="text" value="0"/> (1~30 Minutes) <input type="checkbox"/> Idle Time Security <input type="radio"/> Auto Logout(Default). <input type="radio"/> Back to the last display.

Below the table is an 'Update' button and a 'Note' section stating: 'Comment name can only use "a-z","A-Z","0-9","_","+","-","=".

Load Default Setting

This page allows to restore the factory default settings of the switch. Click **Load** to execute factory defaults reset procedure. All current settings will be erased, excluding System IP Configuration and Authentication Configuration. Then click **Reboot** to reboot the switch for the new settings to take effect.


The screenshot shows the 'Load Default Setting' configuration page in the upvel web GUI. At the top, there is a row of 16 port status indicators, with ports 3, 12, and 15 shown as green. The left sidebar contains a navigation menu with 'Administrator' selected. The main content area is titled 'Load Default Setting' and contains the following text:

recover switch default setting excluding the IP address, User name and Password

At the bottom of the main content area is a 'Load' button.

Firmware Update

This page allows to update the firmware of the switch.

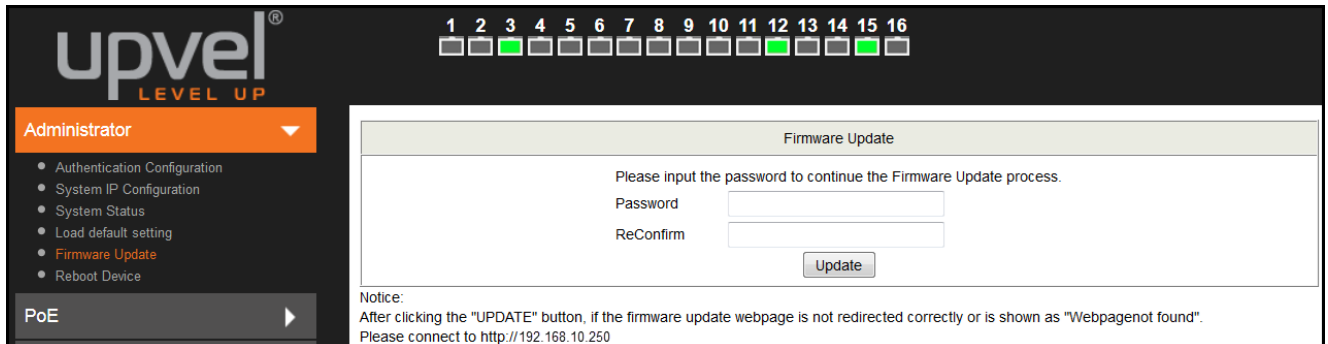

To execute the firmware update, you should enter the password in both **Password** and **Reconfirm** fields, and then click **Update**.

The pop-up warning window will appear for making sure you want to proceed the firmware updating procedure. Confirm to proceed the update.


The switch will erase the current firmware from its flash memory. **Note.** *There is a self-protection mechanism in the Boot Loader. Even if the power is turned off or the cable link fails during the firmware update procedure, the Boot Loader will restore the code to firmware update page.*

Then another page will appear to select the firmware image file for upload. Click **Browse** to select the file, and then click **Update** to continue the firmware updating procedure.

Upon completion of the firmware update, click **Continue** to reboot the switch and re-login.

Reboot device

This page is used to reboot the switch. Click **Confirm** to reboot.

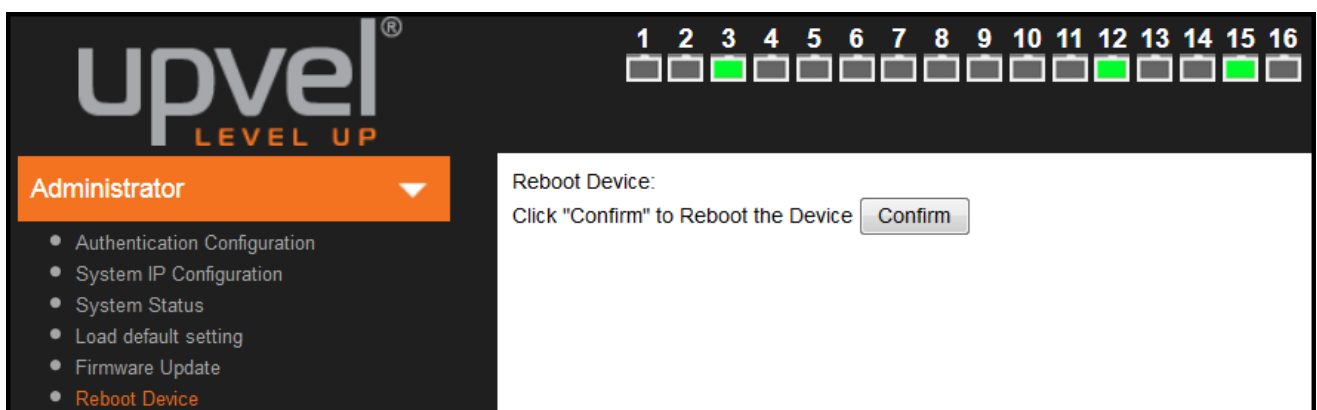

PoE


PoE Status

This page contains information about PoE functionality and allows to set the maximum available power of all ports.

PoE Status	
Max available Power	240 Watt <input type="button" value="Update"/>
System operation status	On
Main Power consumption	4.0(Watt)
Device Temperature	
Device #1	37(C)
Device #2	45(C)

System operation status	Shows the PoE function status (On / Off).
Main Power Consumption	Indicates the total power consumption of PoE devices connected to the switch.
Device Temperature #1 & #2	Readings of built-in temperature sensors.

Note. Changing the maximum available power requires reboot of the switch. Enter the required value and click **Update**. In the pop-up message window, click **OK** to reboot the switch for the new setting to take effect.

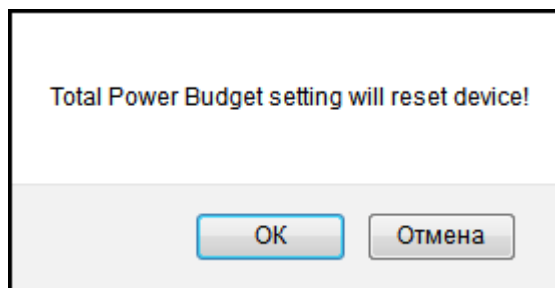

PoE Setting


This page allows to configure the PoE function for each port.

Port No.	Status	Mode	Priority	Power Consumption(Watt)	Power Budget(Watt)
1	Enable	AF	High	0.0	15.4
2	Enable	AF	High	0.0	15.4
3	Enable	AF	High	0.0	15.4
4	Enable	AF	High	0.0	15.4
5	Enable	AF	High	0.0	15.4
6	Enable	AF	High	0.0	15.4
7	Enable	AF	High	0.0	15.4
8	Enable	AF	High	0.0	15.4
9	Enable	AF	High	0.0	15.4
10	Enable	AF	High	0.0	15.4
11	Enable	AF	High	0.0	15.4
12	Enable	AF	High	1.4	15.4
13	Enable	AF	High	0.0	15.4
14	Enable	AF	High	0.0	15.4
15	Enable	AF	High	2.6	15.4
16	Enable	AF	High	0.0	15.4

Status	Enable/disable PoE for selected ports.
Mode	Select AF or AT mode according to the PoE standard (802.3af or 802.3at) supported by the device connected to the port. The port provides up to 15.4 watts in AF mode and up to 30 watts in AT mode.
Priority	Select the priority (Low, High or Critical) of powering the devices through the selected ports.
Power Budget	The maximum power provided by each of the selected ports. The value specified in this field is multiplied by 0.1, thus for 10 W you should enter 100.
Port No.	Select the ports to which the settings should be applied.

All of the settings, excluding **Mode**, take effect immediately after clicking **Update**.

Changing the port mode requires reboot of the switch. After clicking **Update** the following pop-up message appears:

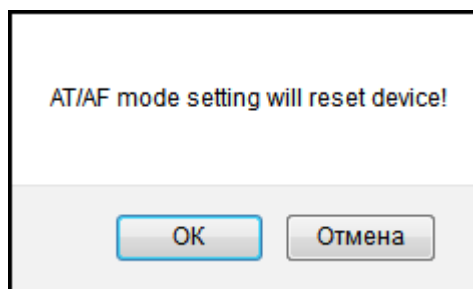

Click **OK** to reboot the switch for the new settings to take effect.

PoE Power Delay

This page allows to set a delay before supplying power to the ports once the switch is powered on.

This may be useful if there are multiple high-power PoE devices connected to the switch (e.g. outdoor surveillance cameras installed in enclosures with heater and fan). The start-up power consumption of these devices is higher than their rated power, and simultaneous power-on of multiple such devices may result in an overload of the switch power supply, which, in turn, will activate the power supply overload protection.

Setting of PoE Power Delay prevents an overload of the switch power supply, since the high-power PoE devices are powered on sequentially.

To set a delay, select ports in **Port No.** field, choose **Enable** in **Delay Mode** field, enter the desired **Delay Time** for the selected ports and click **Update** for the settings to take effect.

PoE Power Delay

Function: [-----] Delay Mode: [-----] Delay Time(0~300): [] second

Port No. [01] [02] [03] [04] [05] [06] [07] [08] [09] [10] [11] [12] [13] [14] [15] [16]

[Update]

Port	Delay Mode	Delay Time (second)
1	Disable	0
2	Disable	0
3	Disable	0
4	Disable	0
5	Disable	0
6	Disable	0
7	Disable	0
8	Disable	0
9	Disable	0
10	Disable	0
11	Disable	0
12	Disable	0
13	Disable	0
14	Disable	0
15	Disable	0
16	Disable	0

PoE Scheduling

The PoE scheduling feature provides an hourly/weekly scheduling mechanism for advanced power control. You can configure each PoE port to be ON or OFF on an hourly basis for energy conservation and provision power only when needed.

PoE Scheduling

Schedule on Port: 01

Schedule Mode: Disable

Schedule AM/PM: A.M.

Select all

Hour	Mon.	Tue.	Wed.	Thu.	Fri.	Sat.	Sun.
00	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
01	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
02	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
03	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
04	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
05	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
06	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
07	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
08	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
09	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
10	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
11	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Update

NTP

This page allows you to select your local time zone and set the IP addresses of NTP servers to synchronize the switch clock.

NTP Setting

NTP Server: #1 128.138.141.1, #2 59.124.196.85

Time Zone: UTC+3:00


System Time: Tue, 09 Dec 2014 17:37:24

Update

Port Management

Port Configuration

This page allows to configure the operating mode of each physical port.

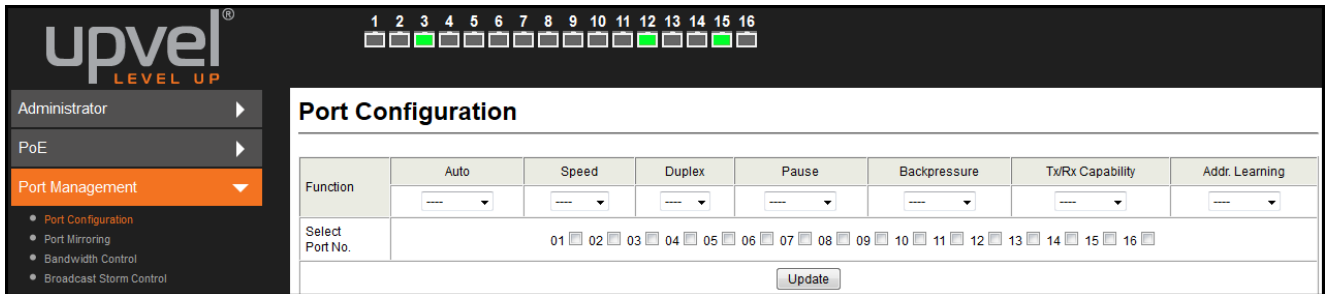

Auto	Auto-Negotiation Enable / Disable. If set to Enable, the Speed, Duplex mode and Flow Control are negotiated automatically. If set to Disable, you have to assign these parameters manually.
Speed	When Auto-Negotiation is set to Disable, you have to set the connection speed for the selected ports. When Auto-Negotiation is set to Enable, this item is read-only.
Duplex	When Auto-Negotiation is set to Disable, you have to set the connection mode (Half or Full) for the selected ports. When Auto-Negotiation is set to Enable, this item is read-only.
Pause	Flow Control in Full Duplex mode. When Flow Control is enabled, the switch can synchronize the speed with its peer to avoid the packet loss caused by congestion
Backpressure	Flow Control in Half Duplex mode. A condition wherein a switch causes a transmitting device to hold off on sending data packets until the switch bottleneck is eliminated.
Tx/Rx Capability	Enable / Disable port. The default is Enable. If set to Enable, the port can freely transmit and receive packets. If set to Disable, there will no access to the network through the selected ports.
Addr. Learning	Address learning is a service that characterizes a learning bridge, in which the source MAC address of each received packet is stored so that future packets destined for that address can be forwarded only to the bridge interface on which that address is located.

Select Port No.: select the ports to which you want to apply the settings.

Click **Update** for the settings to take effect. The settings will be reflected in the status table.

Port	Current Status				Setting Status						
	Link	Speed	Duplex	FlowCtrl	Auto-Nego	Speed	Duplex	Pause	Backpressure	Tx/Rx Cap.	Addr. Learning
1	---	---	---	---	Auto	100M	full	on	on	on	on
2	---	---	---	---	Auto	100M	full	on	on	on	on
3	●	100M	Full	ON	Auto	100M	full	on	on	on	on
4	---	---	---	---	Auto	100M	full	on	on	on	on
5	---	---	---	---	Auto	100M	full	on	on	on	on
6	---	---	---	---	Auto	100M	full	on	on	on	on
7	---	---	---	---	Auto	100M	full	on	on	on	on
8	---	---	---	---	Auto	100M	full	on	on	on	on
9	---	---	---	---	Auto	100M	full	on	on	on	on
10	---	---	---	---	Auto	100M	full	on	on	on	on
11	---	---	---	---	Auto	100M	full	on	on	on	on
12	●	100M	Full	ON	Auto	100M	full	on	on	on	on
13	---	---	---	---	Auto	100M	full	on	on	on	on
14	---	---	---	---	Auto	100M	full	on	on	on	on
15	●	100M	Full	ON	Auto	100M	full	on	on	on	on
16	---	---	---	---	Auto	100M	full	on	on	on	on

Current Status: displays the status of each port.

For example:

3	●	100M	Full	ON
---	---	------	------	----


This field indicates that the port 3 is linked up and run at 100 Mbps in Full Duplex mode with Flow Control enabled.

Setting status: displays the configuration of each port.

Port Mirroring

Port mirroring is used to send a copy of packets from one switch port (or an entire VLAN) to a network monitoring connection on another switch port.

This feature allows to analyze and debug data and diagnose errors on a network, thus helps network administrators keep a close eye on network performance and alerts them when problems occur. It can be used to mirror either ingress or egress traffic (or both) on single or multiple ports.

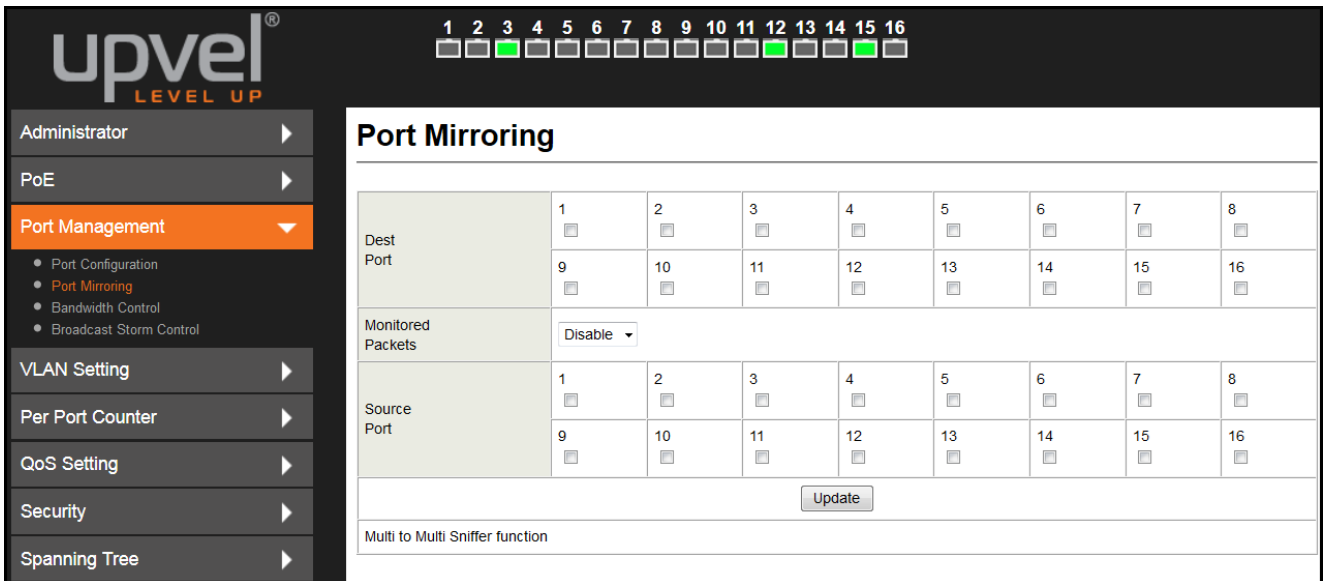

The Port mirroring function is accomplished by assigning the following items:

- **Destination port (mirror port).** A port that will be used to monitor traffic coming from the source port(s). Theoretically, it is possible to set multiple destination ports in a network, but actually the port mirroring function will lower the network throughput, and therefore it is recommended to set only one destination port.
- **Monitored packets.** The type of traffic to be monitored: **Rx** – Received packets, **Tx** – Transmitted packets, **Tx & Rx** – both Transmitted and Received packets. **Disable** means the port mirroring function is disabled.
- **Source port.** The port to be monitored. All monitored port traffic will be copied (mirrored) to the destination port. You can select multiple source ports, but note that port mirroring function is bandwidth consuming. When multiple source ports are assigned, the destination port may be congested.

Click **Update** to make the setting effective.

Bandwidth Control

This page allows to set the maximum transmit/receive rate for each port.

Select the **port number** you want to configure, enter the desired values of **Tx** (transmit) and **Rx** (receive) rates, select **high** or **low speed base** and click **Update** to make the settings effective.

The actual port speed can be calculated by multiplying Tx/Rx Rate by the selected speed base (32 or 512 kbps).

The screenshot shows the 'Bandwidth Control' configuration page in the upvel web interface. The sidebar on the left lists various configuration options, with 'Port Management' selected. The main content area shows the configuration for port 01. The 'Tx Rate' and 'Rx Rate' fields are set to '0-255 (0:full speed)'. The 'Speed Base' is set to 'Low', with a tooltip indicating 'Low:32Kbps' and 'High:512Kbps'. Below the form are 'Update' and 'LoadDefault' buttons. A note states: 'If the link speed of selected port is lower than the rate that you setting, this system will use the value of link speed as your setting rate.'

Port No	Tx Rate(Kbps)	Rx Rate(Kbps)	Link Speed	Port No	Tx Rate(Kbps)	Rx Rate(Kbps)	Link Speed
1	Full Speed	Full Speed	---	9	Full Speed	Full Speed	---
2	Full Speed	Full Speed	---	10	Full Speed	Full Speed	---
3	Full Speed	Full Speed	100M	11	Full Speed	Full Speed	---
4	Full Speed	Full Speed	---	12	Full Speed	Full Speed	100M
5	Full Speed	Full Speed	---	13	Full Speed	Full Speed	---
6	Full Speed	Full Speed	---	14	Full Speed	Full Speed	---
7	Full Speed	Full Speed	---	15	Full Speed	Full Speed	100M
8	Full Speed	Full Speed	---	16	Full Speed	Full Speed	---

Broadcast Storm Control

The broadcast storm control is used to block excessive broadcast packets. If the number of broadcast packets exceeds the defined threshold during one time unit, all excessive broadcast packets will be dropped. The time unit is 500 μs for 100 Mbps link speed and 5000 μs for 10 Mbps link speed.

Each port's broadcast storm protection function can be enabled individually.

Example:

In the picture below, the Broadcast Storm Control is enabled for ports 1~6 and threshold is set to 10. If the number of broadcast packets exceeds the threshold setting, all excessive packets will be dropped (packet length is 64 bytes).

The screenshot shows the 'Broadcast Storm Control' configuration page in the upvel web interface. The left sidebar contains navigation options: Administrator, PoE, Port Management (selected), VLAN Setting, Per Port Counter, QoS Setting, and Security. The main content area is titled 'Broadcast Storm Control' and features a threshold input field set to '10' (range 1~63) and a table for enabling the feature on ports 1 through 16. Ports 1-6 have their 'Enable Port' checkboxes checked, while ports 7-16 are unchecked. An 'Update' button is located below the table. A note at the bottom explains the time unit and provides a warning about long broadcast packets.

Threshold	10 1~63							
Enable Port	1	2	3	4	5	6	7	8
	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	9	10	11	12	13	14	15	16
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Note: This effect may be not significant for long broadcast packet, since the broadcast packet count passing through the switch in a time unit is probably less than the specified number.

How to change one time unit to pps:


The port 1 is 100M port. The one time unit of it is 500 μs, it indicates that 2000 packets can be sent within one second. Setting the threshold 10 for port 1 means that 10x2000 packets can be sent in one second.

VLAN Setting

A Virtual LAN (VLAN) is a logical grouping of network devices where the members can be on different physical segments. It allows to isolate network traffic, so only the members of the same VLAN will receive traffic from the ones of the same VLAN. Basically, creating a VLAN from a switch is logically equivalent to reconnecting a group of network devices to another Layer 2 switch. However, all the network devices are still plugged into the same switch physically.

VLAN Mode

The switch supports Port-based and Tag-based VLAN modes. In port-based VLAN mode, the tag setting is useless, since this mode is for separating traffic only on this single switch and there is no handover of network traffic within VLAN groups to other switches. For traffic handover to other switches, the tag-based VLAN mode should be used. When the tag-based VLAN is selected, the user can define the handling method of a VLAN tag to the specified port, including "Add Tag", "Remove Tag" or "Don't care".

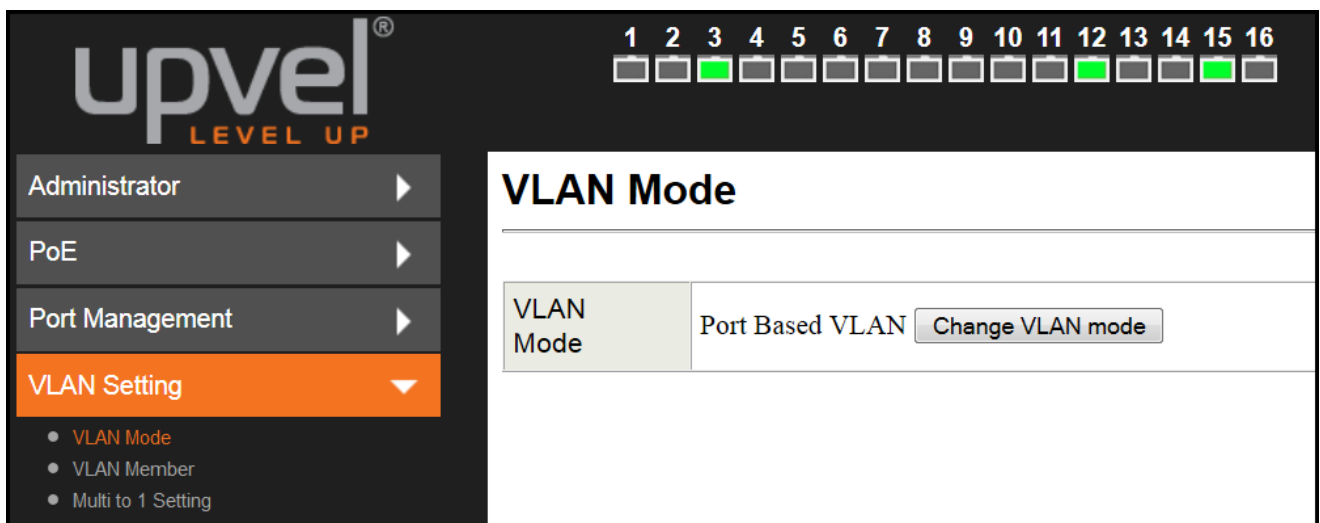

The screenshot shows the upvel web interface. At the top right, there is a status bar with 16 ports, numbered 1 to 16, each with a corresponding indicator light. Port 3 and port 15 are lit green. On the left, there is a navigation menu with the following items: Administrator, PoE, Port Management, VLAN Setting (highlighted in orange), VLAN Mode, VLAN Member, and Multi to 1 Setting. The main content area is titled 'VLAN Mode' and contains a table with the following content:

VLAN Mode	
VLAN Mode	Port Based VLAN <input type="button" value="Change VLAN mode"/>

The default VLAN mode is port-based VLAN. To switch to tag-based VLAN mode, click **Change VLAN mode** button. The following message will appear to ask for confirmation of changing the mode.

WARNING!

Current Port-base VLAN Setting will be reset to default setting, if you click on "Continue" button to change to Tag-base VLAN mode. Otherwise, click on "Back" button to cancel.

Click **Continue** to proceed.

After having switched to Tag Based VLAN Mode, the screen changes. On this screen, you can define and configure Uplink and Downlink ports. These are important since here the handover between the switches of your network takes place.

Tag Based VLAN Mode

VLAN Mode								
VLAN Mode	Tag Based VLAN <input type="button" value="Change VLAN mode"/>							
Tag Mode	Port 01 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 02 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 03 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 04 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 05 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 06 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 07 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 08 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag
	Port 09 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 10 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 11 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 12 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 13 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 14 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 15 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag	Port 16 <input type="radio"/> AddTag <input checked="" type="radio"/> don't care <input type="radio"/> RemoveTag
<input type="button" value="Update"/>								
<p>Note: If the link partner is a network interface card, it probably cannot recognize the VLAN tag. In this case, it is strongly recommended the network administrator to remove the VLAN tag of the corresponding port.</p>								

VLAN Mode	Displays VLAN mode: Port-based / Tag-based VLAN. Here you can also switch back to Port-based VLAN Mode
Tag Mode	<ul style="list-style-type: none"> • Add Tag means the 802.1Q tag will be inserted in the outgoing packet of the selected port. Use this setting for Up- and Downlink Ports in your VLAN Tagged Network. • Don't care means the outgoing packet of the selected port will be kept original. This is the default setting when starting VLAN configuration. You should change to either Add or Remove Tag. • Remove Tag means the 802.1Q tag will be removed from the outgoing packet of the selected port. Use this setting for network connections to PCs. Only packets of the VLAN Group the port is a member of will be sent.

VLAN Member

This page is used to assign ports as members of VLAN groups. The screen here looks different whether you run Tag Based or Port Based Mode.

VLAN Member Setting in Port Based Mode

On the top screen, select the port you want to configure, click **Read**, and then select or deselect the ports that are on the same VLAN group. In this configuration mode, there is no need to worry about defining VLAN groups and VLAN IDs.

Click **Update** to make the configuration effective.

To clear the VLAN member selection, click **Load Default**.

In the following figure, ports 1~3 are set to same VLAN group and ports 4~8 are set to another VLAN group.

VLAN Member Setting (Port Based)

Port	08 <input type="button" value="Read"/>							
Dest PORT	01	02	03	04	05	06	07	08
select	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Dest PORT	09	10	11	12	13	14	15	16
select	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

VLAN MEMBER

Port	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
1	v	v	v	-	-	-	-	-	-	-	-	-	-	-	-	-
2	v	v	v	-	-	-	-	-	-	-	-	-	-	-	-	-
3	v	v	v	-	-	-	-	-	-	-	-	-	-	-	-	-
4	-	-	-	v	v	v	v	v	-	-	-	-	-	-	-	-
5	-	-	-	v	v	v	v	v	-	-	-	-	-	-	-	-
6	-	-	-	v	v	v	v	v	-	-	-	-	-	-	-	-
7	-	-	-	v	v	v	v	v	-	-	-	-	-	-	-	-
8	-	-	-	v	v	v	v	v	-	-	-	-	-	-	-	-

VLAN Member Setting in Tag Based Mode

In Tag-based Mode, you need to define and configure VLAN groups. Assign the VLAN ID, select the VLAN member ports, assign the PVID and check the configuration result.

In the following figure, ports 1~7 are in the same VLAN group.

The port 2 tag VID number is 123.

VLAN Member Setting (Tag Based)									
VID: <input type="text" value="123"/> (1~4094) <input type="button" value="Add"/>		123 <input type="button" value="Delete"/>		<input type="button" value="Update"/>					
Add: Enter a VID, select the VLAN member for this entry and then press this button to add a VLAN entry to the table. Del: Select a VID in the table and then press this button to remove a VID entry from the table. Update: Modify the existing VID entry, select VID and then press the button.									
VLAN Member Port	01	02	03	04	05	06	07	08	
select	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
VLAN Member Port	09	10	11	12	13	14	15	16	
select	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Note: If you do not select any port, this VID will be treated as a VID embedded in a 802.1Q tag.									
VID Source port	01	02	03	04	05	06	07	08	
select	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
VID Source port	09	10	11	12	13	14	15	16	
select	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

- **VLAN ID (VID)**

For the handover to other switches to take place smoothly, the VLAN IDs (Numbers) need to be like in the rest of your network.

On the other switches there may be was an option to set the names. These are just for your reference. Only the numbers are important!

Add: Enter a VID, select the VLAN member for this entry and then press this button to add a VLAN entry to the table. The available VID range is 1~4094.

Delete: Select a VID in the table and then press this button to remove a VID entry from the table. After deleted, the VLAN and its member port settings are cancelled.

Update: This is for modifying the existing VLAN settings. Select the VID, the settings will be displayed below, change the settings and then press the Update button to update the settings.

- **VLAN Member Port**

Select the VLAN Member here.

VLAN Member Port	01	02	03	04	05	06	07	08
select	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
VLAN Member Port	09	10	11	12	13	14	15	16
select	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

• **VID Source Port**

This table allows to set PVID of the port. Select the port number while you add VLAN and select VLAN member ports. The selected ports' PVID will be the VID you typed.

Please note that one port can have only one PVID. While one port joins multiple VLAN groups, the PVID is important to identify where the incoming traffic will be forwarded to.

For example: Port 3 is the member of VLAN 100 and 200, PVID of port 3 is 100. The traffic received from the connected PC is usually untagged, the incoming packets will then be tagged with PVID within the switch and then follow the VID table for traffic forwarding.

VID Source port	01	02	03	04	05	06	07	08
select	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

• **Port VID Map**

This table shows the PVID of the ports.

Port VID Map.								
Port	01	02	03	04	05	06	07	08
VID	200	200	100	100	---	---	---	---

• **VLAN Member Table**

This table shows the VID and its member ports.

VLAN MEMBER										
VID \ Port	1	2	3	4	5	6	7	8	9	10
2	v	v	v	v	v	v	v	v	v	v
3	v	v	v	v	-	-	-	-	-	-
100	v	v	v	v	v	v	v	v	v	v
200	v	v	-	-	-	-	-	-	-	-

Configuration Steps:

First, add your VLAN Groups, identified throughout your network by unique and constant numbers. It often starts with IDs from 100 and up. Starting with 100 gives enough free number space and less compatibility issues.

Second, enter 100 in the VID field, then select or deselect which ports are the members of that group. All uplink and downlink ports must be the members of every existing group. If the port joins different VLAN groups, the VID Source Port field allows to define the PVID.

After VLAN group is configured and member ports are selected, click **Add** to create the table and related port mapping. The new group and its settings will be displayed in the table at the bottom of the screen.

Multi to 1 Setting

Multi-to-1 VLAN is used on CPE side of Ethernet-to-the-Home and is exclusive to VLAN setting on "VLAN member setting". When the VLAN member setting is updated, Multi-to-1 setting will be void and vice versa. The "disable port" means the port, which will be excluded in this setting. All ports excluded in this setting are treated as the same VLAN group. In a normal Tag Based VLAN network you will not need this configuration option.

Multi to 1 Setting

Destination PortNo.	01 ▾							
Current Setting	Port:-							
Disable Port	01	02	03	04	05	06	07	08
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	09	10	11	12	13	14	15	16
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Note: "Disabled port" defines the switch physical port which is disabled.

1.A example for Multi-to-1 structure

**Destination Port/
Current Setting**

(N)

Ports

(01)

(02)

⋮

(M)

VLAN Groups

1

2

⋮

M

2.The original setting of the VLAN Group will be cleared and replaced by this special structure if you enable this function.
On the other hand, If you set the VLAN Group again, this special structure will be cleared and replaced by your newest setting.

3.This configuration is port base VLAN only.

There are two limitations for this setting:

- 1) The original setting of the VLAN group will be cleared and replaced by this special structure if you enable this function. Conversely, if you set the VLAN Group again, this special structure will be cleared and replaced by your newest setting.
- 2) This configuration is for Port-based VLAN only.

Per Port Counter

This page shows packet statistics for each port.

The screenshot shows the 'Per Port Counter' page in the upvel web interface. At the top, there is a navigation menu with options like Administrator, PoE, Port Management, VLAN Setting, Per Port Counter (selected), QoS Setting, Security, Spanning Tree, Trunking, DHCP Relay Agent, Backup/Recovery, Miscellaneous, SNMP Settings, and Logout. Above the main content, there is a 'Counter Category' section with a dropdown menu set to 'Receive Packet & Transmit Packet' and a note: 'Note: The counter will be cleared when you change the counter mode.' Below this is a table with 16 rows, one for each port. The table has three columns: 'Port', 'Receive Packet', and 'Transmit Packet'. The data in the table is as follows:

Port	Receive Packet	Transmit Packet
01	49740	139711
02	0	0
03	186256	43942
04	0	0
05	30206	21562
06	0	0
07	0	0
08	0	0
09	0	0
10	0	0
11	0	0
12	66	265198
13	0	0
14	0	0
15	113	265256
16	0	0

At the bottom of the table, there are 'Refresh' and 'Clear' buttons.

Statistics are grouped into the following categories:

- **Receive Packet & Transmit Packet:** This category shows both the received packets count (excluding the incorrect packets) and the transmitted packets count.
- **Transmit Packet & Collision Count:** This category shows the packets outgoing from the switch and the count of collisions.
- **Receive Packet & Drop Packet:** This category shows the number of received valid packets and the number of dropped packets.
- **Receive Packet & CRC Error Packet:** This category shows the number of received correct packets and CRC errors. If you see an increased number of CRC errors, there may be hardware issue. The possible reason could be a switch port failure, broken cable, cable/fiber connector failure, etc.

Click **Refresh** to update the counter value.

Click **Clear** to reset the counter to **0**.


Once you change the statistics category, the counter will be cleared automatically.

QoS Setting

Here you can configure QoS priority mode and CoS (Class of Service). QoS (Quality of Service) refers to mechanisms in the network software that make the actual determination of which packets have priority. CoS refers to feature sets, or groups of services, that are assigned to users based on company policy. If a feature set includes priority transmission, then CoS winds up being implemented in QoS functions within the routers and switches in the network. In an enterprise network, class of service (CoS) differentiates high-priority traffic from low-priority traffic. Tags may be added to the packets to identify such classes, but they do not guarantee delivery as do quality of service (QoS) functions, which are implemented in the network devices.

Priority mode

There are three priority modes available to specify the priority of packets being serviced. Those include **First-In-First-Out**, **All-High-Before-Low (Strict Priority)** and **4 Queue Weighted Round Robin**.

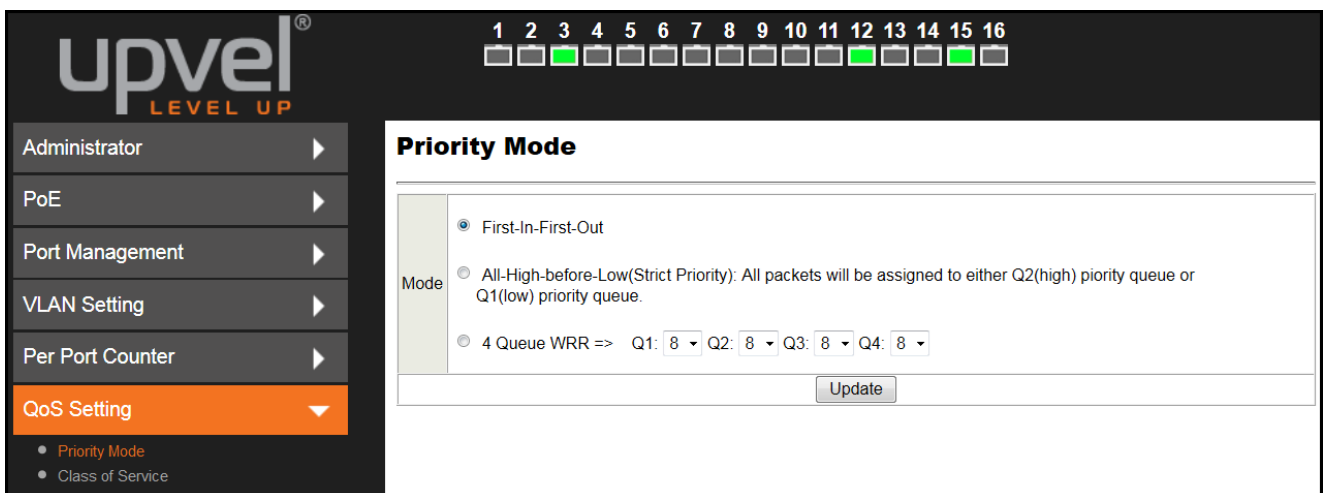

- **First-In-First-Out:** Packets are queued and serviced in the order they were received.
- **All-High-Before-Low (Strict priority):** All packets will be assigned to either high priority queue (Queue 2) or low priority queue (Queue 1). The packet in the low priority queue will not be forwarded until the high priority queue is empty.
- **4 Queue WRR:** There are 4 priority queues for Weighted-Round-Robin (WRR) mode. Q3 and Q4 are Low-weight queues (weight range: 0~8), Q1 and Q2 are High-weight queues (weight range: 0~8).

In this mode, the switch will forward a specified number of high priority packets and then a specified number of low priority packets. The switch repeats this cycle continuously.

Terms "low weight" and "high weight" mean the ratio of the packet in the transmit queue. For example, if "low weight" and "high weight" are set to "3" and "5", the ratio of the transmit packet for the low priority to high priority is 3/5.

When the queue weight is set to **0**, it will be treated as **8**.

Class of Service

There are four Class of Service schemes provided: TCP/UDP port, IP ToS/DS, 802.1p and Physical port. The switch treats CoS schemes in the following priority: *TCP/UDP port > IP ToS/DS > 802.1p > Physical port*. It means that TCP/UDP CoS will override all other settings.

Any of three CoS schemes – TCP/UDP port, IP ToS/DS and 802.1p – is mapped to "high", so if the data packet hit any of these CoS rules, it will be treated as high priority packet.

1) TCP/UDP Port

The Class of Service for TCP/UDP port number allows the network administrator to assign the specific application to a priority queue.

Class of Service

The switch treats TCP/UDP, IP TOS/DS, 802.1p and physical port CoS scheme in the following priority.
 TCP/UDP > IP TOS/DS > 802.1p > Physical port.
 This means TCP/UDP CoS will override all other settings.

(1) TCP/UDP port

Protocol	Note:	Priority Queue
FTP	(1) Q1 – Q4 options are effective for the selected physical port only. (2) "Drop" option is the global setting for all physical ports.	Q1
SSH		Q1
TELNET		Q1
SMTP		Q1
DNS		Q1
TFTP		Q1
HTTP		Q1
POP3		Q1
NEWS		Q1
SNTP		Q1
NetBIOS		Q1
IMAP		Q1
SNMP		Q1
HTTPS		Q1
MSN		Q1
XRD_RDP		Q1
QQ		Q1
ICQ		Q1
Yahoo		Q1
BOOTP/ DHCP		Q1
User-defined A TCP/UDP		Q1
User-defined B TCP/UDP		Q1
User-defined C TCP/UDP		Q1

Note: These user-defined TCP/UDP port are the same as that used in TCP/UDP filter

User-defined Port range (65535~1)	User-defined A Port: ~ Port:	User-defined B Port: ~ Port:	User-defined C Port: ~ Port:

The TCP/UDP port will be checked on the following physical port

01	02	03	04	05	06	07	08
09	10	11	12	13	14	15	16

TCP/UDP port number QoS function

The Class of Service for TCP/UDP port number allows the network administrator to assign the specific application to a priority queue.

2) IP ToS/DS

The switch will follow the IP ToS / DiffServ of the incoming packets to forward traffic.

IPv4 DS and IPv6 TC values: high priority → 10, 18, 26, 34, 46, 48, 56; low priority → others.

(2) IP TOS/DS

IP TOS/DS Priority Setting	6'b001010: <input type="text" value="Q1"/> 6'b010010: <input type="text" value="Q1"/> 6'b011010: <input type="text" value="Q1"/> 6'b100010: <input type="text" value="Q1"/> 6'b101110: <input type="text" value="Q1"/> 6'b110000: <input type="text" value="Q1"/> 6'b111000: <input type="text" value="Q1"/> Other Values: Q1							
IP TOS/DS Port Setting	01	02	03	04	05	06	07	08
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	09	10	11	12	13	14	15	16
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="button" value="Update"/>								

3) 802.1p

The switch will follow the 802.1Q VLAN tag of the incoming packets to forward traffic.

VLAN Tag priority: high priority → 4~7; low priority → 0~3

(3) 802.1p

For 802.1p priority field, the switch utilizes the following priority mapping table.
 6 and 7 are mapped to the "Q4" priority queue.
 4 and 5 are mapped to the "Q3" priority queue.
 0 and 3 are mapped to the "Q2" priority queue.
 1 and 2 are mapped to the "Q1" priority queue.

Port No.	1	2	3	4	5	6	7	8
Mode:802.1p	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port No.	9	10	11	12	13	14	15	16
Mode:802.1p	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="button" value="Update"/>								

4) Physical port

Here you can assign physical ports of the switch to either high- or low-priority queue.

(4) Physical port

Port 1	Port 2	Port 3	Port 4	Port 5	Port 6	Port 7	Port 8
<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>
Port 9	Port 10	Port 11	Port 12	Port 13	Port 14	Port 15	Port 16
<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>	<input type="text" value="Q1"/>
<input type="button" value="Update"/>							

Security

MAC Address Binding

This feature is also called Port Security on some other switches. It allows to bind up to three MAC addresses to one physical port. Once the MAC address is bound to the port, only the packets with the source MAC address specified in the table will be forwarded through this port.

The bound MAC addresses will not be aged out from the MAC address table.

"ff ff ff ff ff ff", "00 00 00 00 00 00" or blank will not be saved to the table.

The screenshot shows the 'MAC Address Binding' configuration page in the upvel web interface. The sidebar on the left has 'Security' highlighted, with sub-options for 'MAC Address Binding', 'TCP/UDP Filter', and 'Web Security'. The main area contains a table for configuring MAC addresses for port 1, with a 'Read' button. Below this is a control bar with 'Select Port 01', 'Binding Disable', and an 'Update' button. A note states: 'Note: If you enable the MAC address binding function, the address learning function will be disabled automatically. Then both RSTP/STP and address learning will be affected.' At the bottom, a table shows the filter status for all 16 ports, all currently set to 'Disable'.

Port No.	Filter Status	Port No.	Filter Status
1	Disable	9	Disable
2	Disable	10	Disable
3	Disable	11	Disable
4	Disable	12	Disable
5	Disable	13	Disable
6	Disable	14	Disable
7	Disable	15	Disable
8	Disable	16	Disable

MAC Address	Enter the MAC address(es) you want to bind to the specific port.
Select Port	Select the port to which you want to bind the MAC address(es)
Binding	Enable or Disable . Select Enable to enable the MAC Address Binding feature.
Update	After selecting the port, enabling Binding and entering MAC Address(es), click Update to update and save the settings.
Read	Clicking Read button will show MAC addresses associated with the selected port (if you've already entered any).

TCP/UDP Filter

TCP/UDP filter allows to block some specific applications. There are two filtering rules provided. The "Allow" rule makes the switch to forward the selected protocols and drop other protocols. The "Deny" rule makes the switch to drop the selected protocols and forward other protocols. The protocol is checked at the selected secure port.

The screenshot shows the 'TCP_UDP Filter Configuration' page in the upvel web interface. The left sidebar has 'Security' selected, with sub-items 'MAC Address Binding', 'TCP/UDP Filter', and 'Web Security'. The main configuration area is as follows:

- Function Enable:** A dropdown menu set to 'Disable'.
- Port Filtering Rule:** A dropdown menu set to 'Deny'. Below it, text explains: "Deny" means the outgoing packets to the selected port with selected protocol will be dropped and other protocols will be forwarded. "Allow" means the selected protocol will be forwarded and other protocol will be dropped. A note follows: "Note: 1. The secure WAN port should be set at the physical port which is connected to the server. 2. Once this function is enabled, the switch will check the destination TCP/UDP port number at the outgoing direction of the secure WAN port. If the condition matches, this packet will be dropped or forwarded."
- Secure Port:** A grid of checkboxes for ports Port01 through Port16.
- Protocol:** A grid of checkboxes for protocols: FTP, SSH, TELNET, SMTP, DNS, TFTP, HTTP, POP3, NEWS, SNMP, NetBIOS, IMAP, User-defined A TCP/UDP, User-defined B TCP/UDP, User-defined C TCP/UDP, and BOOTP/DHCP.

An 'Update' button is located at the bottom right of the configuration area.

Function Enable	Enable / Disable the function.
Port Filtering Rule	<p>The outgoing packet with selected protocol will be either forwarded or dropped at secure port.</p> <ul style="list-style-type: none"> "Deny" means the selected protocol will be dropped and other protocols will be forwarded. "Allow" means the selected protocol will be forwarded and other protocol will be dropped.
Secure Port	Select the port(s) to which the filtering rule will be applied.
Protocol	Select the predefined protocol or User-defined Protocol, which will be included in the filtering rule.

Click **Update** for the configuration to take effect.

Web Security

This page allows to select which ports of the switch can be used to access the Web Management GUI. With Web security enabled, the switch Web Management GUI will be accessible only through the selected Access Ports.

The screenshot displays the 'Web Management Filter' configuration interface. At the top, there is a row of 16 port status indicators, with ports 3 and 15 highlighted in green. The left sidebar contains a navigation menu with 'Security' selected. The main panel features a 'State' dropdown menu currently set to 'Disable'. Below this is a table for selecting access ports:

Access Port:	01	02	03	04	05	06	07	08
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	09	10	11	12	13	14	15	16
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Below the table is an 'Update' button and a user instruction: 'User select port which enable to access web management, unselect port can not access web managemnt'.

Spanning Tree

This switch supports IEEE 802.1D-2004 Rapid Spanning Tree Protocol (RSTP) and is backward compatible with legacy Spanning Tree Protocol (STP) standards.

STP Bridge Settings

This page allows to configure STP Mode and time settings. See the description below.

Spanning Tree Settings

STP Mode	Bridge Priority (0-61440)	Hello Time (1~10 Sec)	Max Age (6-40 Sec)	Forward Delay (4-30 Sec)
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Submit

Note: $2 * (\text{Forward Delay} - 1) \geq \text{Max Age}$,
 $\text{Max Age} \geq 2 * (\text{Hello Time} + 1)$

Note: If you enable the MAC address binding function, the address learning function will be disabled automatically. Then both RSTP/STP and address learning will be affected.

Bridge Status

STP Mode	Bridge ID	Hello Time	Max Age	Forward Delay
RSTP	32768:10 F0 13 F0 18 26	2	20	15

Root Status

Root ID	Hello Time	Max Age	Forward Delay
I'm the root bridge!	2	20	15

STP Mode: Disable, STP, RSTP. Select the STP version you want to enable. The default setting is **Disable**.

Bridge Priority: This parameter defines the spanning tree priority globally for this switch. The switch with the lowest value has the highest priority and is selected as the root device. If all devices have the same priority, the device with the lowest MAC address will then become the root device. According to the protocol standard rule, the value must be a multiple of 4096 in the range of 0 to 61440. Thus, there are 16 distinct values. If the value is changed, the switch must be rebooted.

Hello Time: Interval (in seconds) at which the root device transmits a configuration message (BPDU frame) to check current STP status. Enter a value between 1 through 10 (the default is 2).

Max Age: The maximum time (in seconds) a switch waits without receiving Spanning-tree Protocol configuration messages before attempting to reconfigure. That also means the maximum life time for a BPDU frame. Enter a value between 6 through 40 (the default is 20).

Forward Delay: The maximum time (in seconds) the root device will wait before changing from its Rapid Spanning Tree Protocol learning and listening states to the forwarding state. Enter a value between 4 through 30 (the default is 15).

Click **Submit** for the configuration to take effect.

The **Bridge Status** table shows the STP configuration of the switch. The **Root Status** table shows the Root Switch's Information of the STP domain.

STP Port Settings

This page allows to set the STP port priority and its path cost.

After STP/RSTP is enabled, the priority and path cost are automatically assigned to the port. Normally, it is necessary to change the parameters, however, you may need to control the root switch or block port in some condition.

Select the **port number**, enter the values of the **Priority** and **Root Path Cost** and click **Submit** to apply the settings.

The screenshot displays the 'STP Port Settings' configuration page in the upvel web interface. At the top, there is a status bar with 16 port indicators, where ports 3 and 15 are highlighted in green. The left sidebar contains a navigation menu with 'Spanning Tree' selected, showing sub-items like 'STP Bridge Settings', 'STP Port Settings', and 'Loopback Detection'. The main content area features a configuration form for 'STP Port Settings' with fields for 'Port No.', 'Priority (0-240)', and 'RPC (1-200000000)', with a 'Submit' button. Below the form is a table titled 'STP Port Status' showing the configuration for all 16 ports.

Port No.	RPC	Priority	State	Status	Designated Bridge	Designated Port
1	Auto:200000	0x80	--	Disable	--	--
2	Auto:0	0x80	--	Disable	--	--
3	Auto:200000	0x80	Designated Port	Forwarding	--	--
4	Auto:0	0x80	--	Disable	--	--
5	Auto:0	0x80	--	Disable	--	--
6	Auto:0	0x80	--	Disable	--	--
7	Auto:0	0x80	--	Disable	--	--
8	Auto:0	0x80	--	Disable	--	--
9	Auto:0	0x80	--	Disable	--	--
10	Auto:0	0x80	--	Disable	--	--
11	Auto:0	0x80	--	Disable	--	--
12	Auto:200000	0x80	--	Disable	--	--
13	Auto:0	0x80	--	Disable	--	--
14	Auto:0	0x80	--	Disable	--	--
15	Auto:200000	0x80	Designated Port	Forwarding	--	--
16	Auto:0	0x80	--	Disable	--	--

STP Port Settings table

Port No.: Choose one port of the Switch for further management.

Priority: Decide which port should be blocked by setting its priority as the lowest. Enter a value between 0 through 240. The value of priority must be the multiple of 16.

RPC: The cost of the path to the other bridge from this transmitting bridge at the specified port. Lower values should be assigned to ports attached to faster media, and higher values should be assigned to ports with slower media. Enter a value between 1 through 200000000. The default value is **Auto**.

STP Port Status table

Port No.: The switch port number of the logical STP port.

RPC: Root Path Cost. For the Root Bridge, it is zero. For all other Bridges, it is the sum of the Port Path Costs on the least cost path to the Root Bridge.

Priority: The current priority for each port.

State: The current STP port state. The port state can be one of the following: Designated port, Root port or Blocked port.

Status: The current STP port status. The port status can be one of the following: Forwarding, Disable, Listening, Blocking, Learning.

Designated Bridge: ID of the STP Bridge which designated the root port.

Designated Port: Port number of the bridge from where the bridge designated the root port.

Loopback Detection

Under some conditions, incorrect connection to wrong ports may cause a network loop. The unknown broadcast and multicast may crash the whole network. The Loopback Detection feature can help to prevent this type of situation.

The screenshot shows the upvel web interface. At the top, there is a status bar with 16 port indicators. Ports 3 and 15 are highlighted in green. The main content area is titled "Loopback Detection Settings". It contains three rows of settings:

- Loopback Detect Function: Disable
- Auto Wake Up: Disable
- Wake-Up Time Interval: 10 sec

A "Submit" button is located below the settings. Below the settings is a "Reset All Ports" button and a table with 16 rows, each representing a port number and its status (all are "--").

Port No.	Status
1	--
2	--
3	--
4	--
5	--
6	--
7	--
8	--
9	--
10	--
11	--
12	--
13	--
14	--
15	--
16	--

Loopback Detection Function: Enable / Disable the Loopback Detection function. The default setting is **Disable**.

Auto Wake Up: Enable / Disable the Auto Wake Up function. The default setting is **Disable**. When the Loopback Detection function is running, the ports could be disabled to avoid the loop. The Auto Wake Up function activates the port after Wake-Up Time Interval passed.

Wake-Up Time Interval: Select the time interval here. The default is 10 sec.

Click **Submit** to apply the settings.

Trunking

Link Aggregation (Port Trunking) allows multiple links to be bundled together and act as a single physical link. It provides higher throughput, load balancing, fault tolerance and redundancy of links in a switched internetwork.


Traffic in a trunk is distributed across an individual link within the trunk in a deterministic method that is called a hashing algorithm. The hashing algorithm automatically applies load balancing to the ports in the trunk. In the event of a port failure within the trunk group the network traffic will be directed to the remaining ports. Load balancing is maintained whenever a link in a trunk is lost or returned to service. This switch may use Source MAC Address or a combination of Source MAC Address and Destination MAC Address for the Trunk Hashing Algorithm.

If the traffic pattern on the network is considered carefully and a proper hashing algorithm is used, the traffic is kind of randomly decided to be transmitted across either link of the trunk and load balancing will be seen.

Before making any physical connections between devices, it is necessary to configure the link aggregation parameters of the devices at both ends. When using link aggregation, take into account the following:

- The ports used in a link aggregation must all be for the same media type (e.g. RJ-45, 100 Mbps).
- The ports can only be assigned to one link aggregation group.
- The ports at both ends of a connection must be configured as link aggregation ports.
- None of the ports in a link aggregation group (trunk) can be configured as a mirror source port or a mirror target port.
- Enable the link aggregation prior to connecting cables between the switches to prevent creating a switching loop.
- Disconnect all link aggregation port cables or disable the link aggregation ports before removing a port link aggregation group to prevent creating a switching loop.

You can configure 2 link groups with a maximum of 4 ports aggregated in each group. If the group is defined as a local static link aggregation group, then the number of ports must be the same as the group member ports.

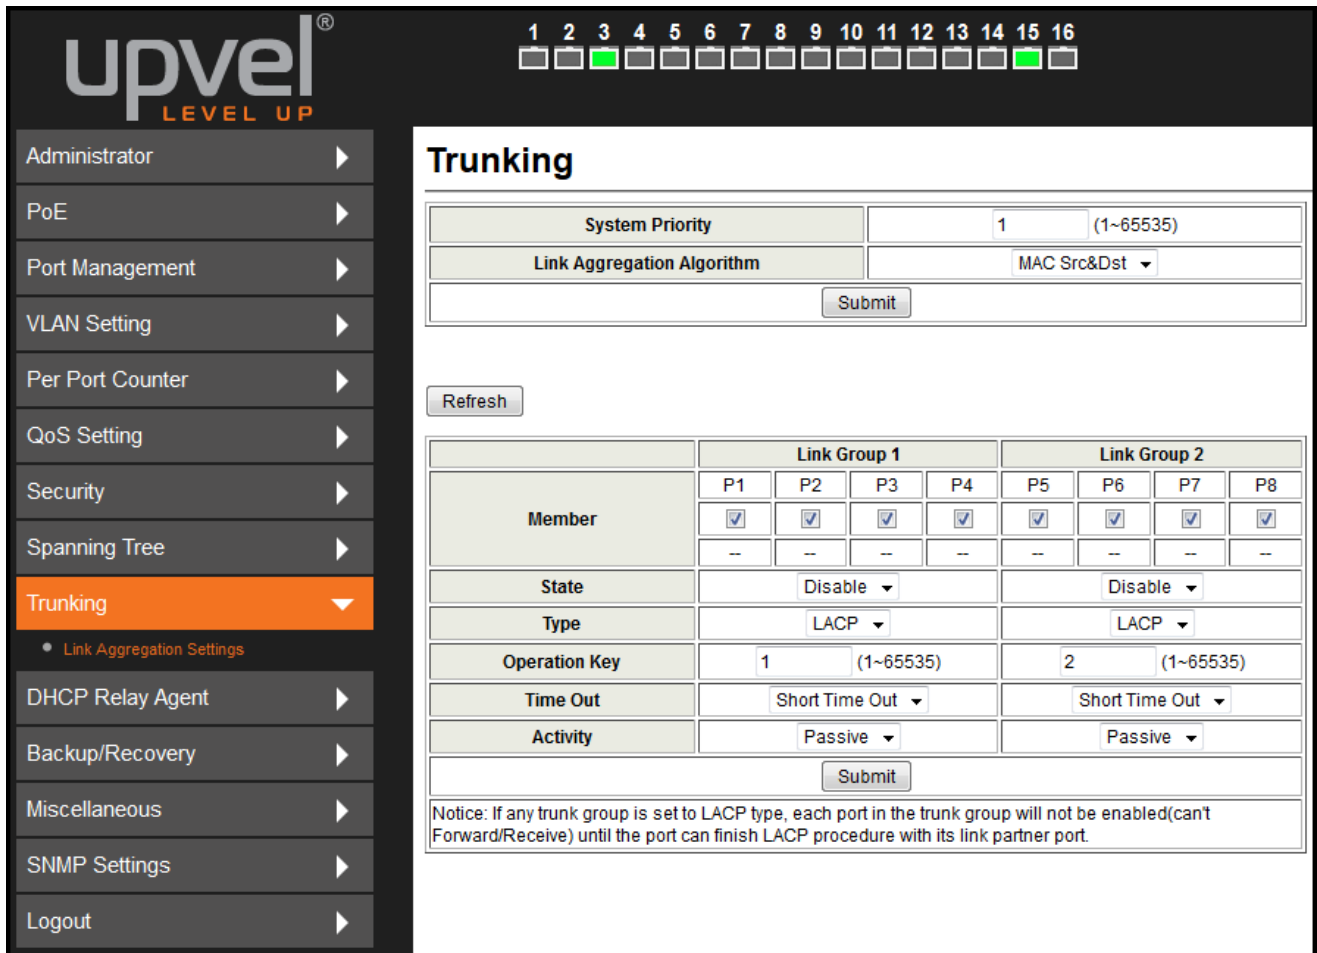

System Priority: A value that identifies the active LACP. The switch with the lowest value has the highest priority and is selected as the active LACP peer of the trunk group.

Link Aggregation Algorithm: Select the algorithm of link aggregation. The available options are:

- **MAC Src&Dst** – Hash Algorithm based on Source & Destination MAC Address XOR result.
- **MAC Src** – Hash Algorithm based on Source MAC Address

The default setting is MAC Src&Dst.

Member: Select the ports that will be the members of link aggregation group. Default link group 1 includes P1, P2, P3, P4. Default link group 2 includes P5, P6, P7, P8.

State: Disable / Enable port trunk. The default setting is **Disable**.

Type: Select port trunk type: **Static** or **LACP** (Dynamic). The default setting is **LACP**.

When the **LACP** Trunk type is selected, the following parameters can be configured. Please note that the parameters of ports that belong to one link aggregation group should be the same on both ends.

Operation Key: Range: 1~65535. Default Link Group 1: **1**; Default Link Group 2: **2**.


Time Out: Select **Long Time Out** or **Short Time Out**. The **Long Time Out** is approximately 30 seconds, the **Short Time Out** is approximately 3 seconds, however, the link partner of other supplier may not use the same value. The longer time out then will be used.

Activity: Select whether the link group is allowed (**Active**) to automatically send LACP packets or not (**Passive**). The default setting is **Passive**.

DHCP Relay Agent

DHCP Relay Agent

DHCP Relay Agent provides a transparent transmission of DHCP broadcast packets. It can transmit broadcast packets from a DHCP client (or server) in one subnet to a DHCP server (or client) in another subnet.

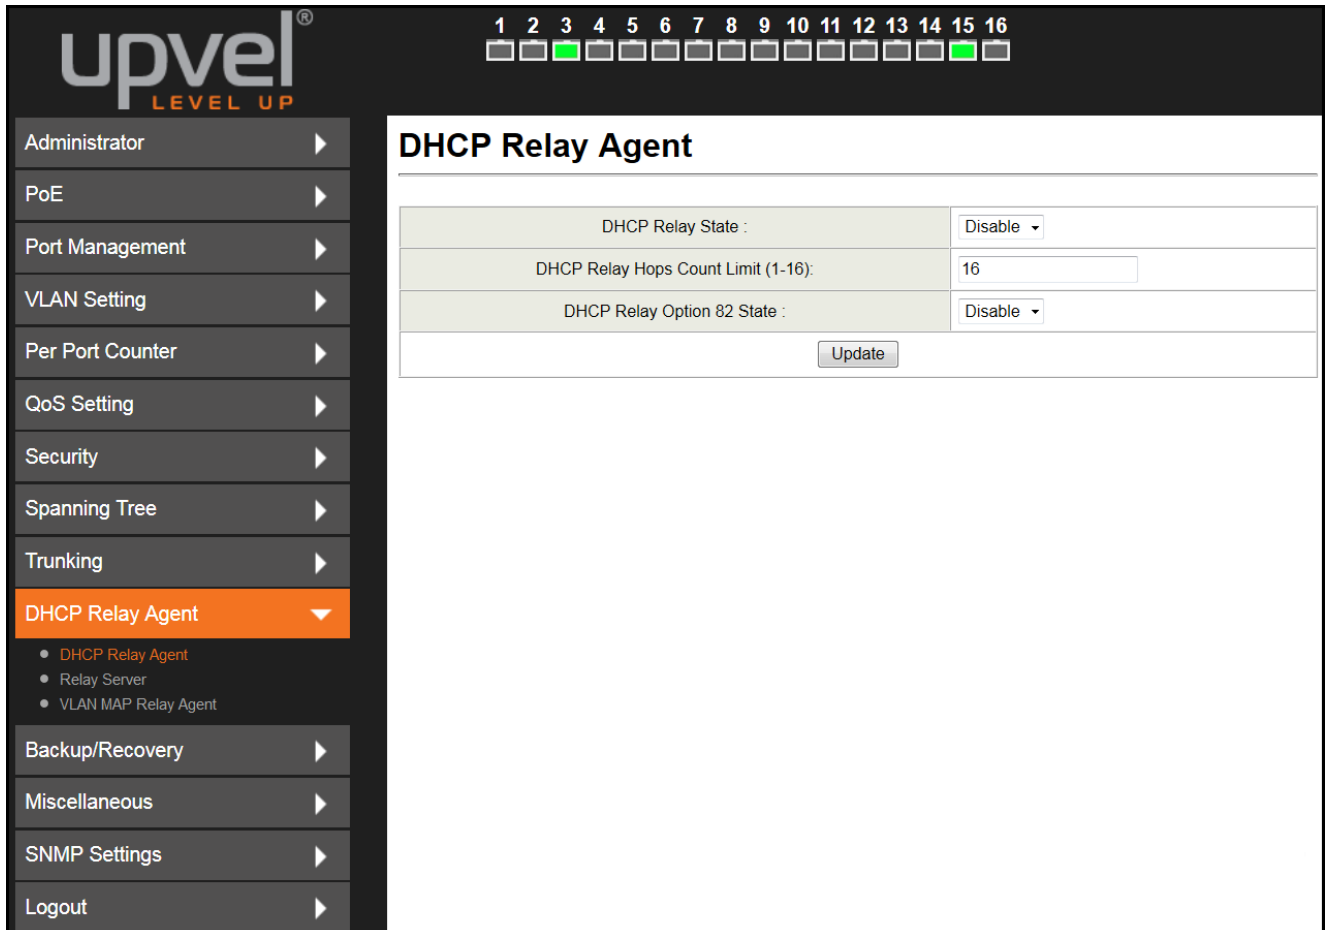

The screenshot shows the DHCP Relay Agent configuration interface. At the top, there is a status bar with 16 indicators, where indicators 3 and 15 are green. The left sidebar contains a navigation menu with the following items: Administrator, PoE, Port Management, VLAN Setting, Per Port Counter, QoS Setting, Security, Spanning Tree, Trunking, DHCP Relay Agent (selected), Backup/Recovery, Miscellaneous, SNMP Settings, and Logout. The DHCP Relay Agent menu is expanded to show sub-items: DHCP Relay Agent, Relay Server, and VLAN MAP Relay Agent. The main configuration area is titled 'DHCP Relay Agent' and contains the following settings:

DHCP Relay State :	Disable ▾
DHCP Relay Hops Count Limit (1-16):	16
DHCP Relay Option 82 State :	Disable ▾

Below the settings table is an 'Update' button.

DHCP Relay State: Disable/Enable.

DHCP Relay Hops Count Limit: set the maximum number of hops from 1 to 16.

DHCP Relay Option 82 State: Disable/Enable.

Click **Update** to make the settings effective.

Relay Server

Enter the DHCP Server IP address and click **Add**.

The screenshot shows the 'DHCP Relay Agent' configuration page. On the left is a navigation menu with 'DHCP Relay Agent' highlighted. The main area has a header 'DHCP Relay Agent'. Below it is a form with a 'DHCP Server IP' input field and an 'Add' button. Underneath is a table titled 'DHCP Server IP List' which is currently empty.

VLAN MAP Relay Agent

Enter VLAN ID within 1-4094, select the Server IP address and click **Add**.

The screenshot shows the 'DHCP Relay Agent' configuration page for VLAN MAP. On the left is a navigation menu with 'DHCP Relay Agent' highlighted. The main area has a header 'DHCP Relay Agent'. Below it is a form with 'VLAN ID' (input field with '1-4094'), 'Map Server IP' (dropdown menu), and an 'Add' button. Underneath is a table titled 'MAP List' with columns for 'VLAN ID', 'Server IP', and 'Action'.

Backup/Recovery

This page allows to save the switch configuration settings to a file on a PC or to upload the settings from a previously saved file.

To save the configuration, click **Download** and choose a folder to save the file.

To upload the settings from a file, click **Browse** to specify a path to the configuration file on your PC, then enter the admin password and click **Update**.

The screenshot displays the upvel web interface. At the top left is the upvel logo with the tagline 'LEVEL UP'. To the right of the logo is a navigation bar with 16 numbered indicators (1-16), where indicators 3 and 15 are highlighted in green. Below the logo is a vertical sidebar menu with the following items: Administrator, PoE, Port Management, VLAN Setting, Per Port Counter, QoS Setting, Security, Spanning Tree, Trunking, DHCP Relay Agent, Backup/Recovery (highlighted in orange), Miscellaneous, SNMP Settings, and Logout. The main content area is titled 'Configuration Backup/Recovery' and contains two sections:

- Backup(Switch→PC)**: A text box containing the instruction 'Please check "Download" to download EEPROM contents.' followed by a 'Download' button.
- Recovery(PC→Switch)**: A section for uploading a configuration file. It includes a label 'Select the image file :', a file selection button labeled 'Обзор...', and the filename 'down.bin'. Below this is a 'Password:' label followed by a password input field (displayed as six dots) and an 'Update' button.

Miscellaneous

Miscellaneous Settings page allows to configure Output Queue Aging Time, VLAN Striding, IGMP Snooping V1 & V2 and VLAN Uplink.

The screenshot shows the 'Miscellaneous Setting' page in the upvel web interface. At the top, there is a status bar with 16 port indicators, where ports 3 and 15 are highlighted in green. The left sidebar contains a navigation menu with 'Miscellaneous' selected. The main content area is divided into several sections:

- Output Queue Aging Time:** Includes a dropdown for 'Aging time' set to 'Disable' and a unit of 'ms'. A descriptive text explains that this function allows selecting the aging time of a packet in the output queue to prevent congestion.
- VLAN Striding:** Includes a dropdown for 'VLAN Striding' set to 'Disable'. A descriptive text explains that when enabled, the switch will forward unicast packets to the destination port regardless of the VLAN group.
- IGMP Snooping V1 & V2:** Includes a dropdown for 'IGMP Snooping' set to 'Disable'. A descriptive text states that the IGMP Snooping V1 & V2 function is enabled.
- VLAN Uplink Setting:** A table with 16 columns (Port 01 to Port 16). Each port has two radio buttons: 'Uplink1' and 'Uplink2'. Below the table are two radio buttons for 'Clear Uplink1' and 'Clear Uplink2', and an 'Update' button.

Output Queue Aging Time

This function prevents the situation when the traffic jam on one port may cause the congestion of other ports. In some applications, e.g. IPTV Multicast communication, the multicast stream is continuously generated from the source port, and the client port may be congested because of the limited bandwidth or slow network processing ability. Then, the Pause frame of Flow Control will be generated once the packet buffer is full. With the Output Queue Aging Time function, a packet stored at an output queue for a long time will be aged out and become a useless packet. You can set the Aging Time to 200, 400, 600 or 800 ms.

VLAN Striding

For some network environments, the network administrator may probably want to filter undesired broadcast or multicast packets to enhance the network bandwidth utilization and forward only meaningful unicast packets to a specific destination. VLAN is a good mechanism to block broadcast packets, but it can also block unicast communication between VLANs. To solve this issue, a special function called “VLAN striding” is designed. If VLAN striding is enabled, the switch will forward unicast packets to the destination port, no matter whether the destination port is in the same VLAN. The unicast packet can stride across VLANs.

IGMP Snooping V1 & V2

By default, a switch will flood multicast traffic to all ports in a broadcast domain. Multicast may cause unnecessary load on host devices by requiring them to process packets they have not solicited. The IGMP snooping feature allows the switch to listen in on the IGMP communications between hosts and routers. By listening (also known as snooping) to these communications, the switch maintains a map of which ports (clients) need which multicast stream (source). Multicast that is not solicited by certain clients (or IGMP group) will be filtered.

VLAN Uplink Setting

This switch does not implement an Independent VLAN (IVL) MAC address table, it utilizes VLAN uplink to emulate the function of IVL. An independent VLAN MAC address table is based on both the source MAC address and the VLAN. In some applications, if the switch cannot build the separate MAC address table for different VLANs, there will be a conflict of MAC address table. To solve this problem, the switch controller utilizes the VLAN Uplink port to emulate the usage of Independent VLAN MAC Address Table.

VLAN Uplink function allows different VLANs to use individual uplink port to forward packets. In a normal application, only one uplink port can be selected in a switch.

If VLAN Uplink function is enabled and the destination port of a unicast packet is located at the next VLAN, this packet will be forwarded to the uplink port. Choose the Uplink Port X for the port ID. The Uplink X will be the uplink port of its VLAN.

Note. *There is a functional conflict between VLAN Striding and VLAN Uplink. So if both VLAN Striding and VLAN Uplink are enabled simultaneously, the switch selects VLAN Striding and ignores the VLAN Uplink setting.*

SNMP Settings

SNMP (Simple Network Management Protocol) is a popular protocol for managing devices on IP networks. This page allows you to configure SNMP settings for monitoring and managing your PoE+ Web Smart Switch.

The screenshot shows the upvel web interface. At the top, there is a status bar with 16 ports, where ports 3 and 15 are highlighted in green. The left navigation menu includes: Administrator, PoE, Port Management, VLAN Setting, Per Port Counter, QoS Setting, Security, Spanning Tree, Trunking, DHCP Relay Agent, Backup/Recovery, Miscellaneous, **SNMP Settings** (highlighted), and Logout. The main content area is titled "SNMP Settings" and contains three sections:

- Community Settings:** A table with two columns: "Community Name" and "Access Right". The first row has "public" in the name field and "Read/Write" in the access right dropdown. The second row has an empty name field and "Read Only" in the access right dropdown. An "Update" button is located below the table.
- SNMP Settings:** A table with two columns: "System Description", "System Contact", and "System Location". The values are "IP1717", "ICPlus", and "ICPlus" respectively. An "Update" button is located below the table.
- SNMP Trap Settings:** A table with two columns: "Trap State" and "Access Right". The "Trap State" dropdown is set to "Enable". An "Upadte" button is located below the table.

Community settings

Enter **Community Name** and select **Access Rights** for the community: "Read only" or "Read/Write". Click **Update** to make the settings effective.

SNMP Settings



Enter **System Description**, **System Contact** and **System Location** info. Click **Update** to make the settings effective.

SNMP Trap Settings

Select "Enable" or "Disable" for the Trap State. Click **Update** to make the settings effective.

Logout

When the switch configuration is finished, click **Logout** to leave the web management interface. Login web page will appear.

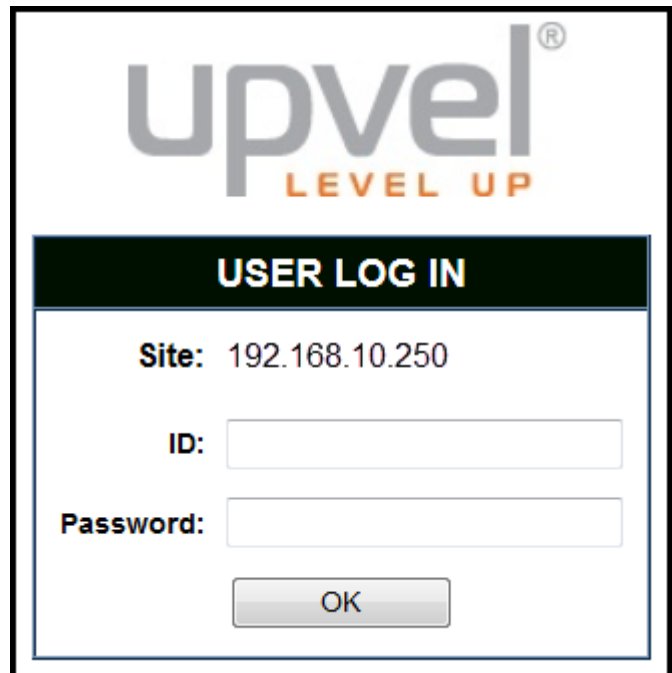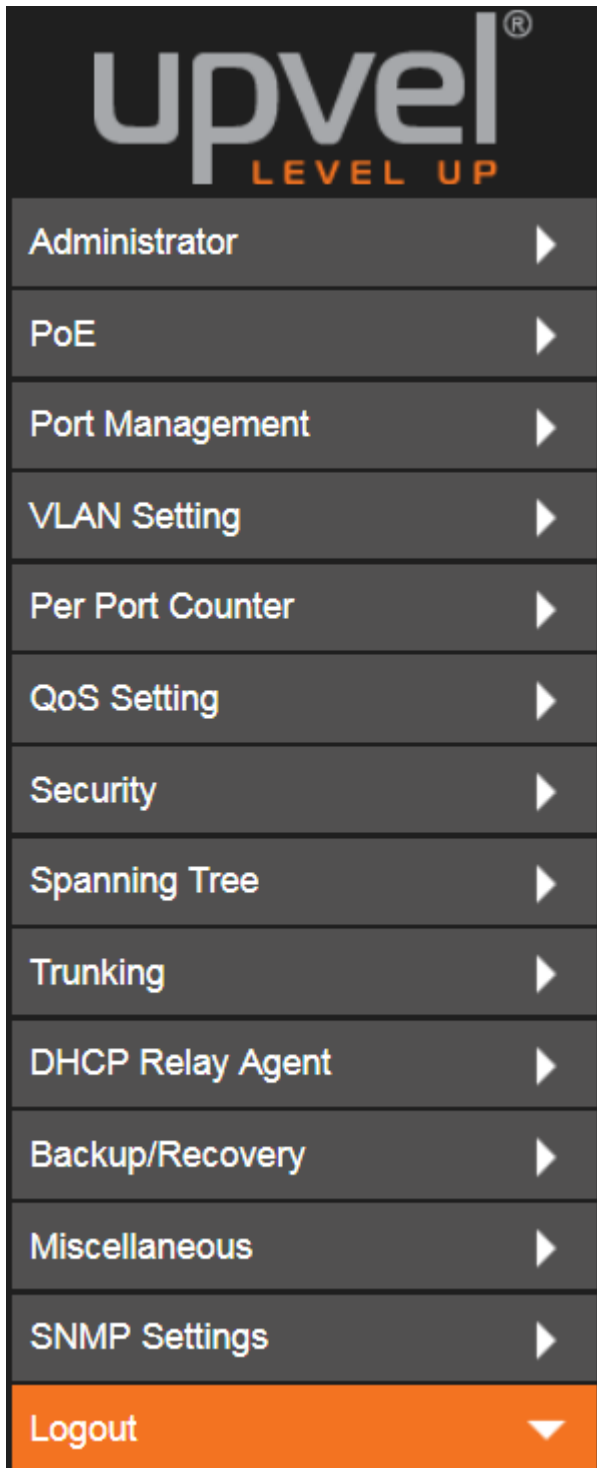

Specifications

UP-308FEW

Standards	IEEE 802.3 10BASE-T IEEE 802.3u 100BASE-TX IEEE 802.3af PoE IEEE 802.3at PoE+ IEEE 802.3x Flow Control IEEE 802.3az Energy Efficient Ethernet IEEE 802.3ad Link Aggregation IEEE 802.1Q VLAN IEEE 802.1D STP, RSTP
Ports	8 x 10/100 Mbps PoE+ ports w/ Auto MDI-X and Auto-negotiation
Power over Ethernet	PoE: up to 15.4 W per port PoE+: up to 30 W per port Power budget: 140 W PoE pins on RJ-45: 1&2 (+), 3&6 (-), mode A
Data Throughput	Ethernet: 10/20 Mbps (half-duplex / full-duplex mode) Fast Ethernet: 100/200 Mbps (half-duplex / full-duplex mode)
Packet Forwarding Rate	10 Mbps: 14880 pps 100 Mbps: 148800 pps
Network Cables	10BASE-T: UTP/STP cat.5 (max. 100 m / 328 feet) 100BASE-TX: UTP/STP cat.5 or 5e (max. 100 m / 328 feet)
Switching Method	Store-and-Forward
Switching Capacity	1.6 Gbps
MAC Address Table	4K
LED Indicators	LNK/ACT PoE Power
AC Input	100~240 V AC, 50~60 Hz, internal power supply
Power Consumption	Standby: 8 W Maximum: 160 W
Dimensions	280×180×44 mm / 11×7×1.7 inch Standard 19" rack mounting width, 1U height
Weight	1.64 kg / 3.6 lbs
Temperature	Operating: 0 ~ 40 °C (32 ~ 104 °F) Storage: -10 ~ 70 °C (14 ~ 158 °F)
Humidity	Operating: 10 ~ 90 % non-condensing Storage: 5 ~ 90 % non-condensing
Certification	CE, FCC, Rostest

UP-316FEW

Standards	IEEE 802.3 10BASE-T IEEE 802.3u 100BASE-TX IEEE 802.3af PoE IEEE 802.3at PoE+ IEEE 802.3x Flow Control IEEE 802.3az Energy Efficient Ethernet IEEE 802.3ad Link Aggregation IEEE 802.1Q VLAN IEEE 802.1D STP, RSTP
Ports	16 x 10/100 Mbps PoE+ ports w/ Auto MDI-X and Auto-negotiation
Power over Ethernet	PoE: up to 15.4 W per port PoE+: up to 30 W per port Power budget: 260 W PoE pins on RJ-45: 1&2 (+), 3&6 (-), mode A
Data Throughput	Ethernet: 10/20 Mbps (half-duplex / full-duplex mode) Fast Ethernet: 100/200 Mbps (half-duplex / full-duplex mode)
Packet Forwarding Rate	10 Mbps: 14880 pps 100 Mbps: 148800 pps
Network Cables	10BASE-T: UTP/STP cat.5 (max. 100 m / 328 feet) 100BASE-TX: UTP/STP cat.5 or 5e (max. 100 m / 328 feet)
Switching Method	Store-and-Forward
Switching Capacity	3.2 Gbps
MAC Address Table	4K
LED Indicators	LNK/ACT PoE Power
AC Input	100~240 V AC, 50~60 Hz, internal power supply
Power Consumption	Standby: 8 W Maximum: 270 W
Dimensions	442x208x44 mm / 17.4x8.2x1.7 inch Standard 19" rack mounting width, 1U height
Weight	3.5 kg / 7.7 lbs
Temperature	Operating: 0 ~ 40 °C (32 ~ 104 °F) Storage: -10 ~ 70 °C (14 ~ 158 °F)
Humidity	Operating: 10 ~ 90 % non-condensing Storage: 5 ~ 90 % non-condensing
Certification	CE, FCC, Rostest

PRODUCT WARRANTY REGISTRATION

Please take a moment to register
your new UPVEL product online.

Go to **www.upvel.com/registration**

UPVEL

Irwindale, CA USA

www.upvel.com

Technical support

support@upvel.com

1-855-IT-UPVEL (488-7835)

M-F 10AM-7PM excluding public holidays

UPVEL is a registered trademark.

All other trademarks belong to their respective proprietors.

Designed in USA / Assembled in China

© Copyright 2015 Upvel. All Rights Reserved.